

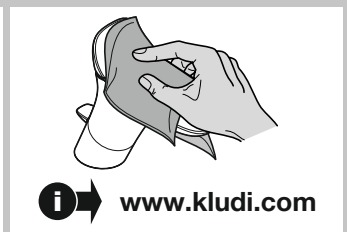
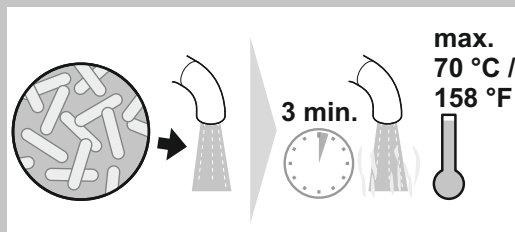
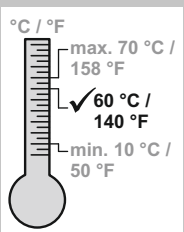
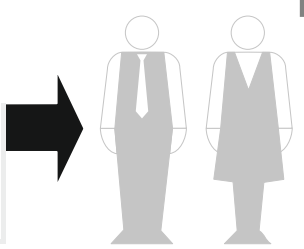


DIN EN 806
DIN EN 1717
DIN 1988
Global
Standards

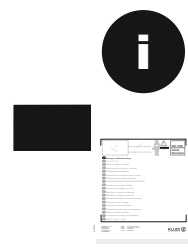

- ⓓ Montage- und Bedienanleitung
- ⒸⓃ 安装及操作指南
- ⒸⓏ Návod k instalaci a k použití
- Ⓔ Instrucciones de montaje y de manejo
- Ⓕ Instructions de montage et mode d'emploi
- Ⓖⓑ Installation and operating instructions
- ⒼⓇ ΟΔΗΓΙΕΣ ΕΓΚΑΤΑΣΤΑΣΗΣ ΚΑΙ ΣΥΝΤΗΡΗΣΗΣ
- ⒻⒽ Szerelési és használati utasítás
- ⒻⒾ Istruzioni di montaggio e per l'uso
- ⒼⓃⒻ Montagehandleiding en Gebruiksaanwijzing
- ⒼⓅ Instrukcja montażu i obsługi
- ⒻⓇⓞ Instrucțiuni de montaj și utilizare
- ⒻⓇⓤS Руководство по монтажу и эксплуатации
- ⒻⓀ Návod na montáž a obsluhu

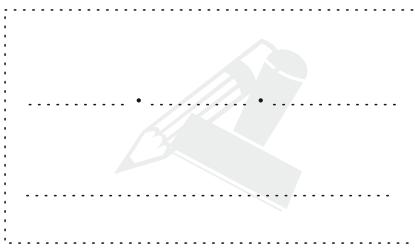