



PL Instrukcja montażu
EN Installation instructions
DE Montageanleitung

FR Instructions de montage
CZ Montážní návod
SK Návod na montáž

HU Szerelési utasítások
RO Instrucțiuni de instalare
RU Инструкция по сборке

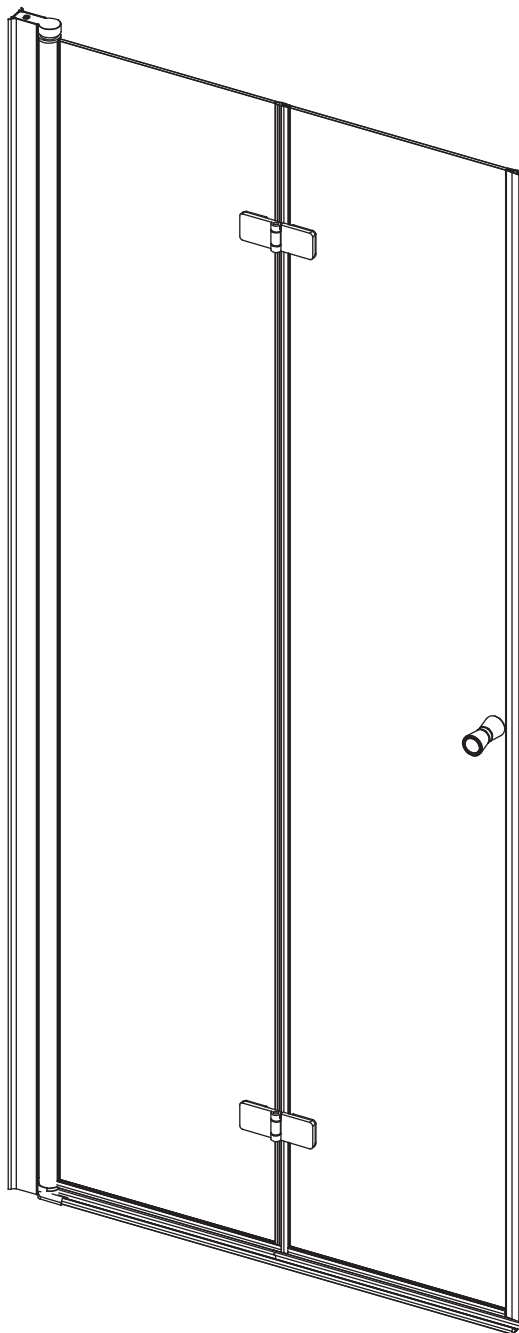

KTS X041P (900x2000)
KTS X042P (800x2000)
KTS X043P (1000x2000)
KTS XN41P (900x2000)
KTS XN42P (800x2000)
KTS XN43P (1000x2000)
KTS 000X (2000)
KTS N00X (2000)

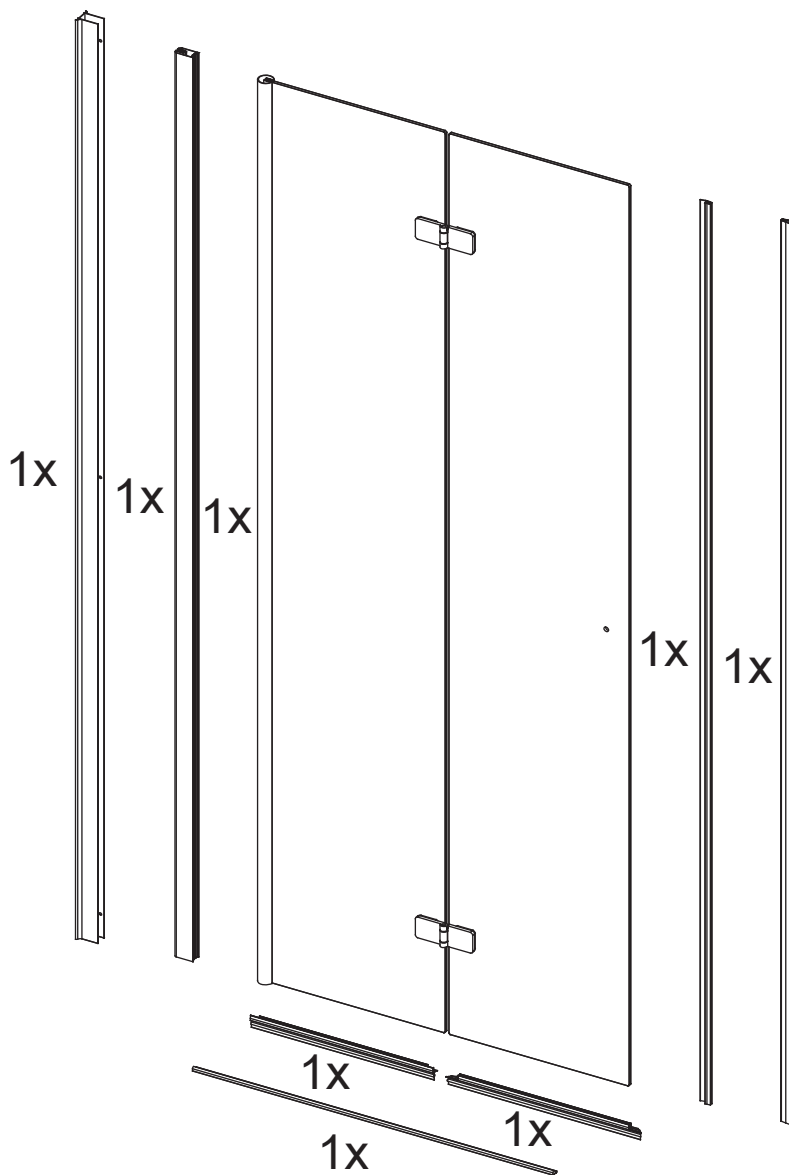


| | | | | | |
|---|----|--|----|----|--|
| 1 | x1 | | 6 | x4 | |
| 1 | x1 | | 7 | x2 | |
| 2 | x1 | | 8 | x3 | |
| 2 | x1 | | 9 | x3 | |
| 3 | x1 | | 11 | x1 | |
| 3 | x1 | | 11 | x1 | |
| 3 | x1 | | 12 | x3 | |
| 4 | x1 | | | x1 | |
| 5 | x4 | | | | |




| | | |
|---|----|--|
| A | x1 | |
| B | x1 | |
| G | x4 | |
| J | x4 | |
| K | x4 | |



X2 P5-P17

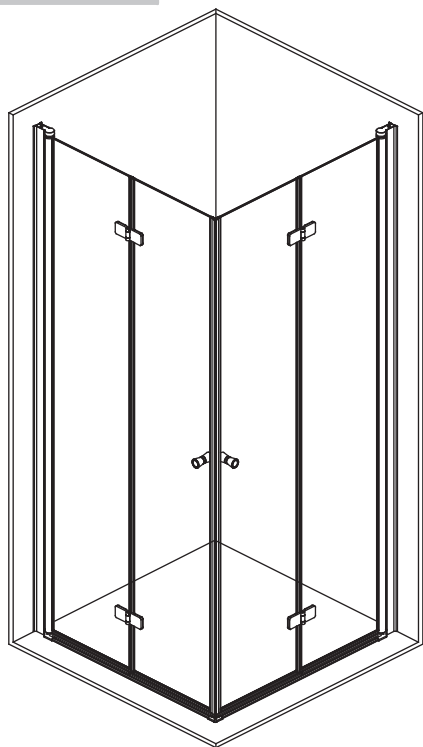

X2 P43-P56

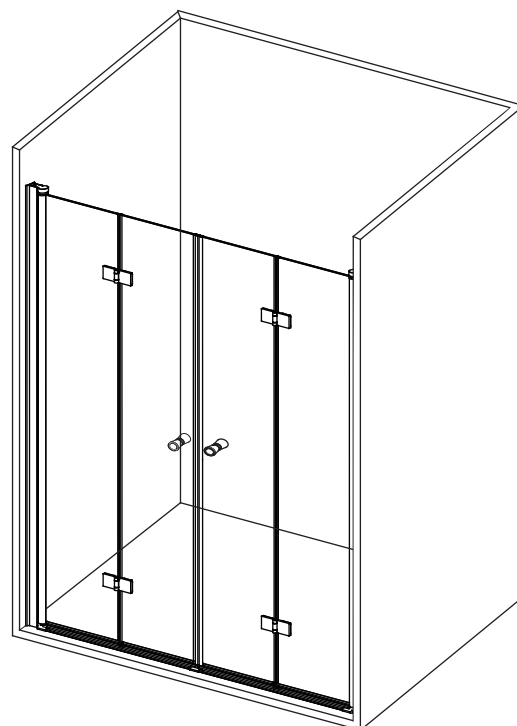

+




P18-P29




+



P30-P42

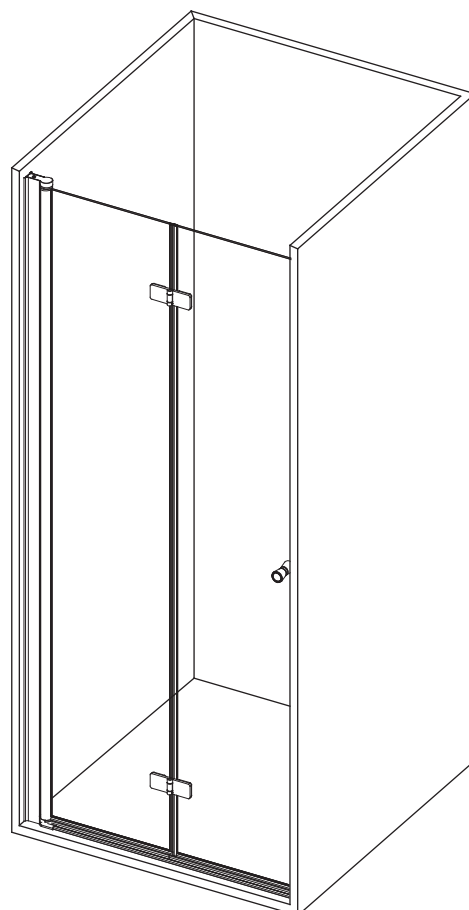

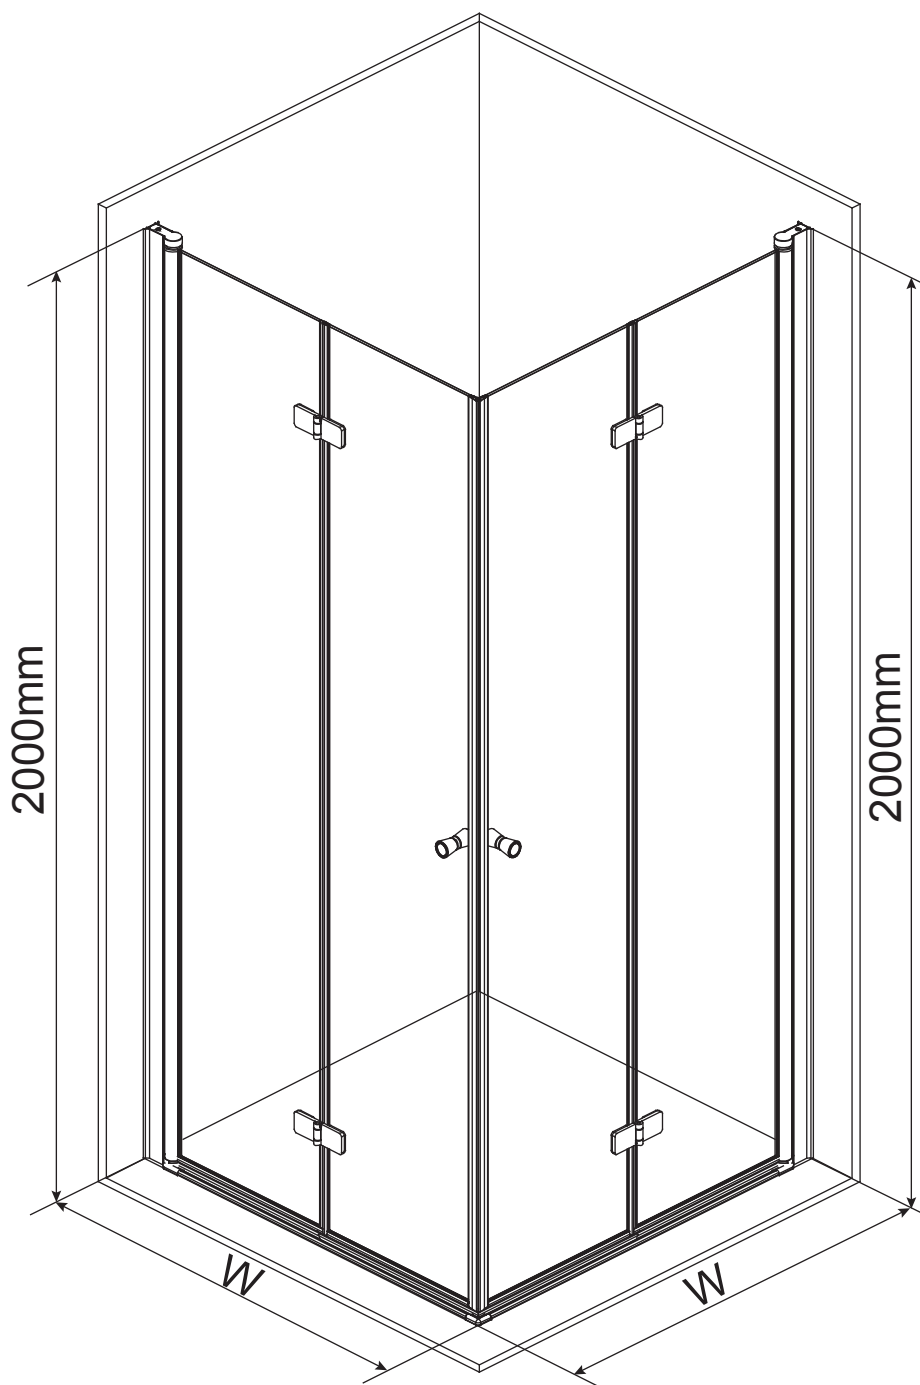


W:

800 785mm-800mm

900 885mm-900mm

1000 985mm-1000mm



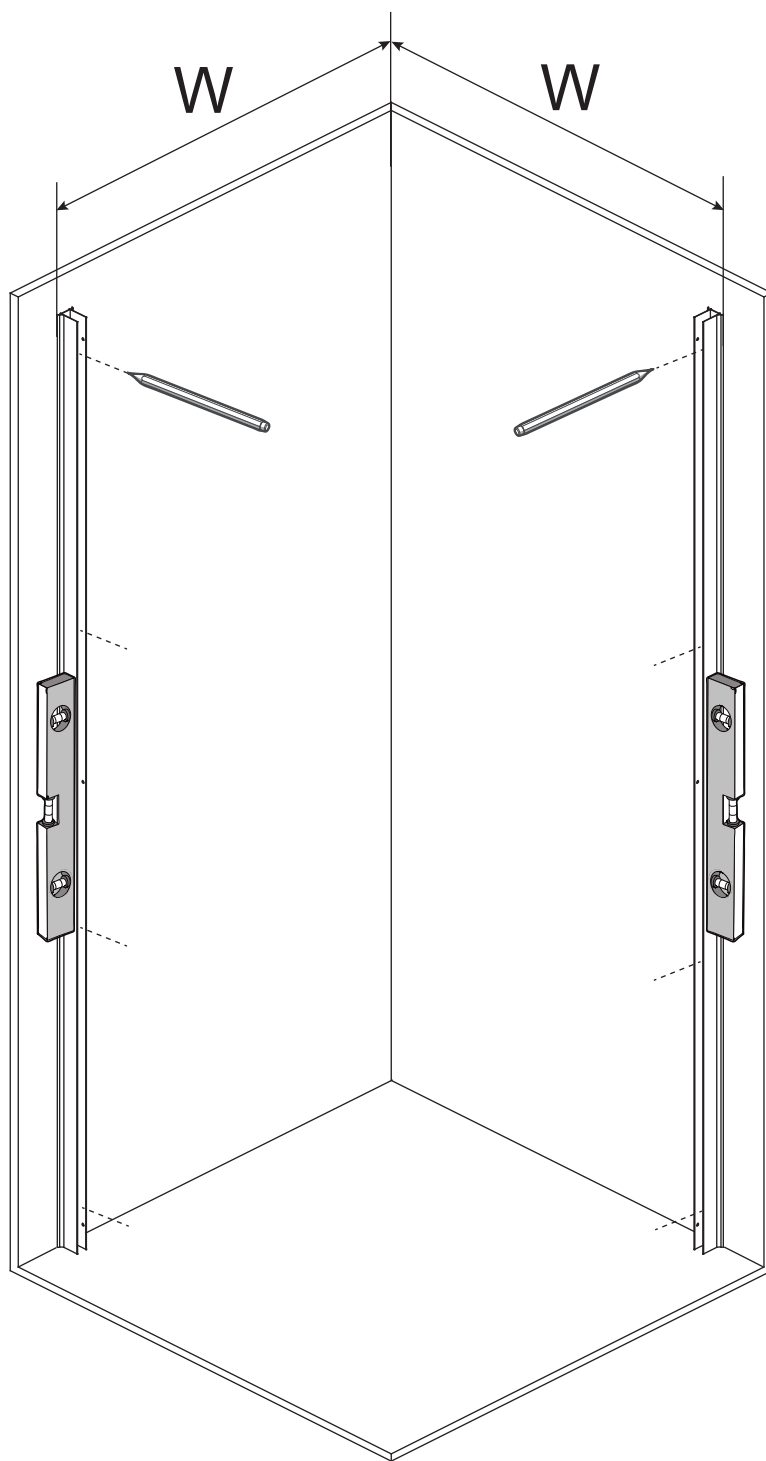




W:





800 785mm-800mm








900 885mm-900mm

1000 985mm-1000mm



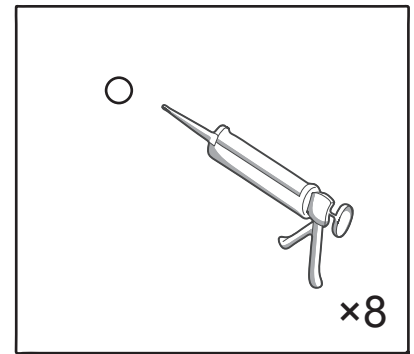
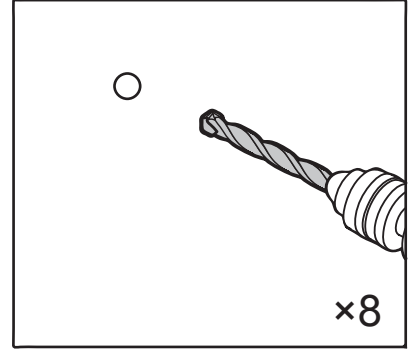
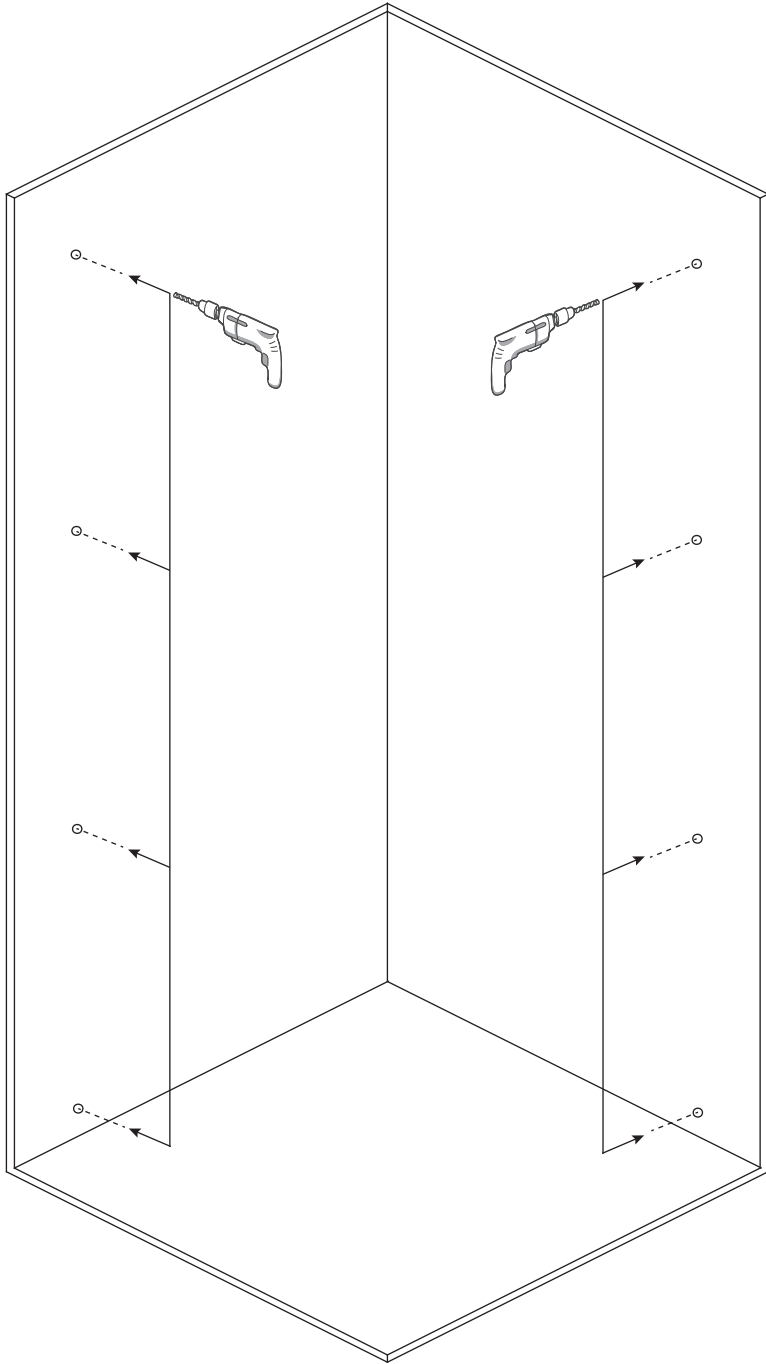





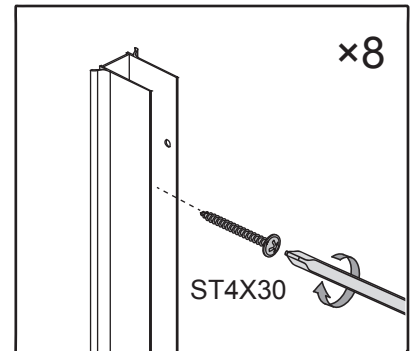
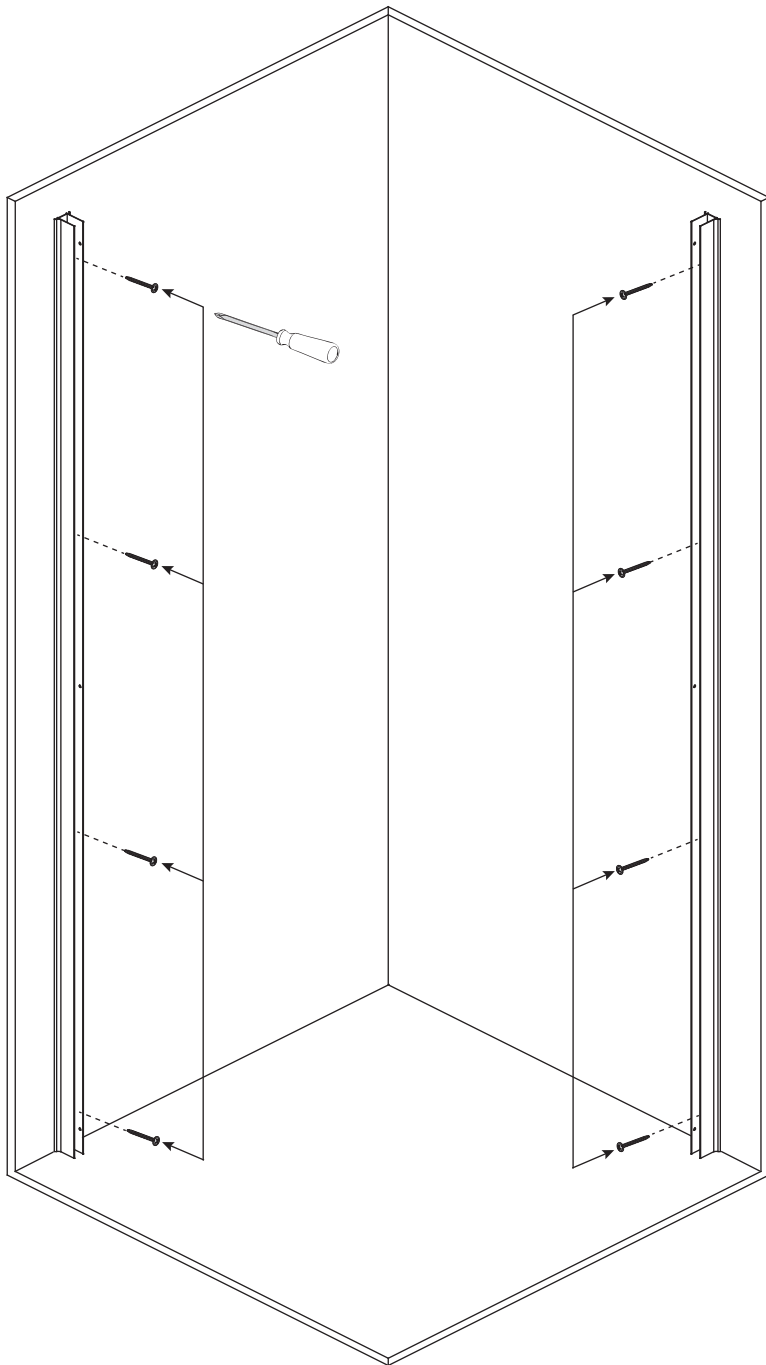





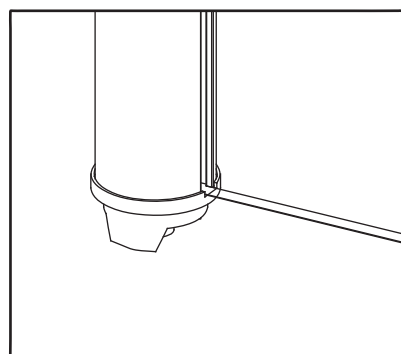
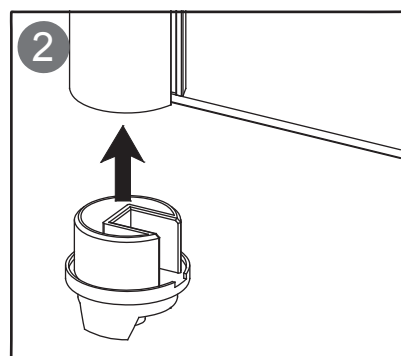
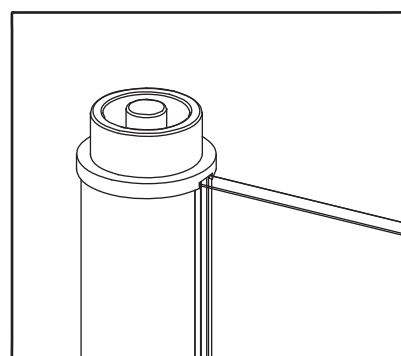
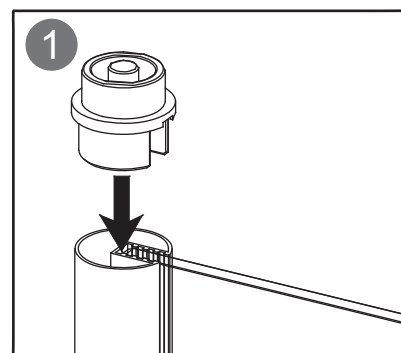


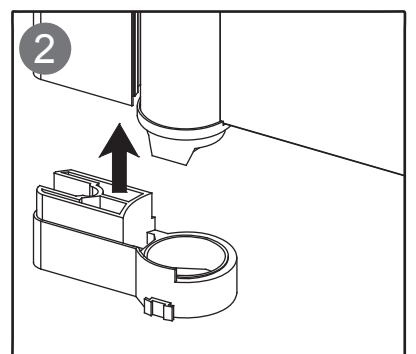
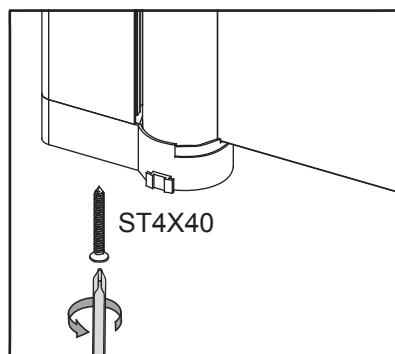
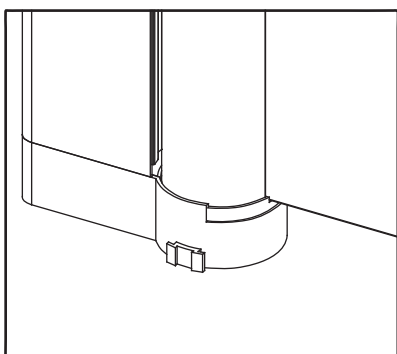
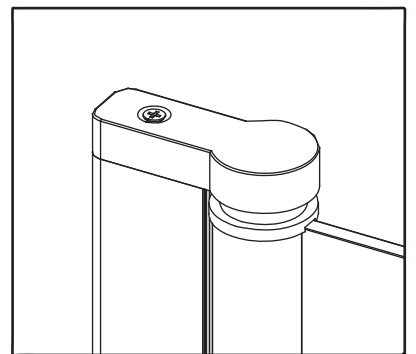
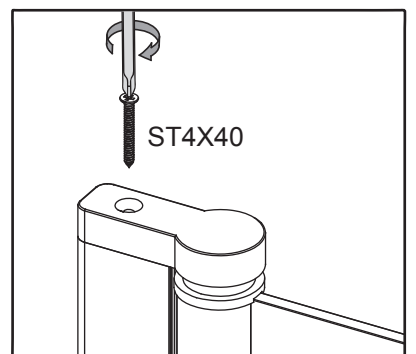
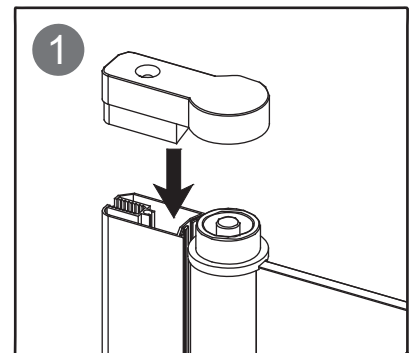
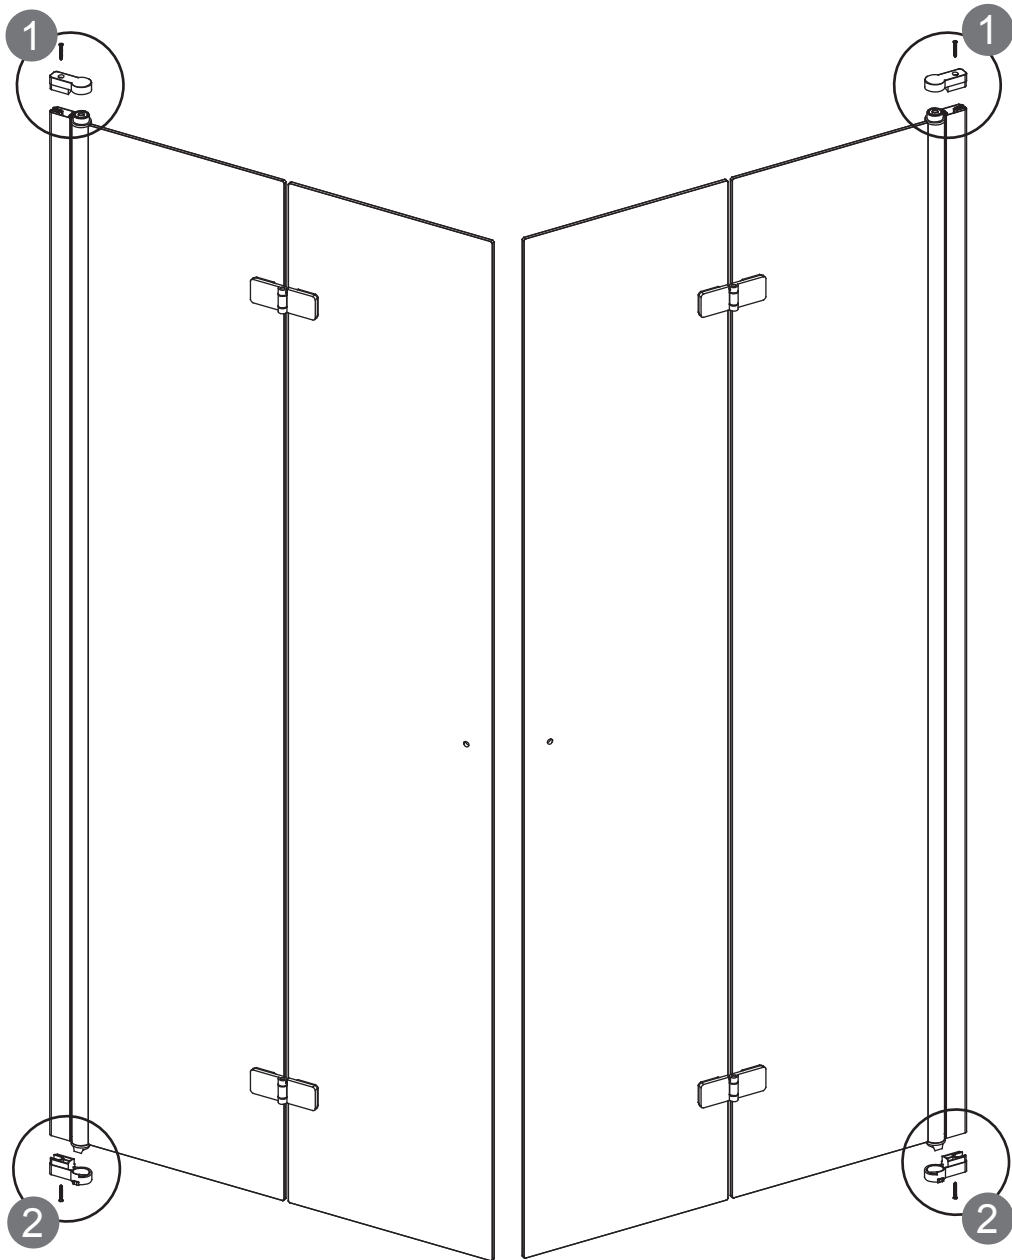




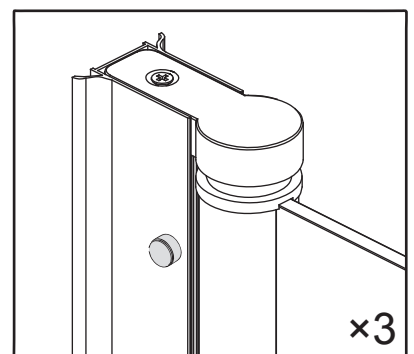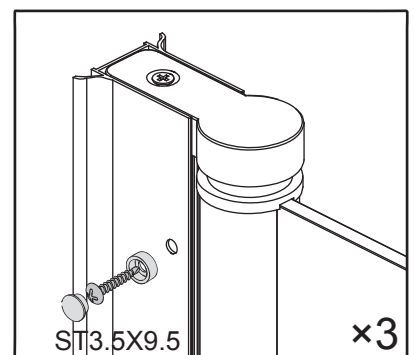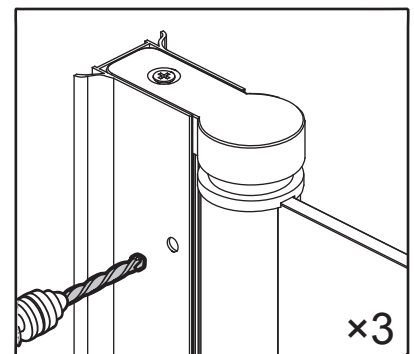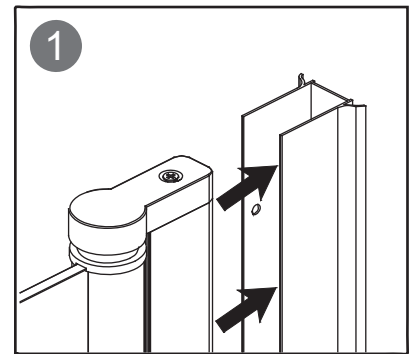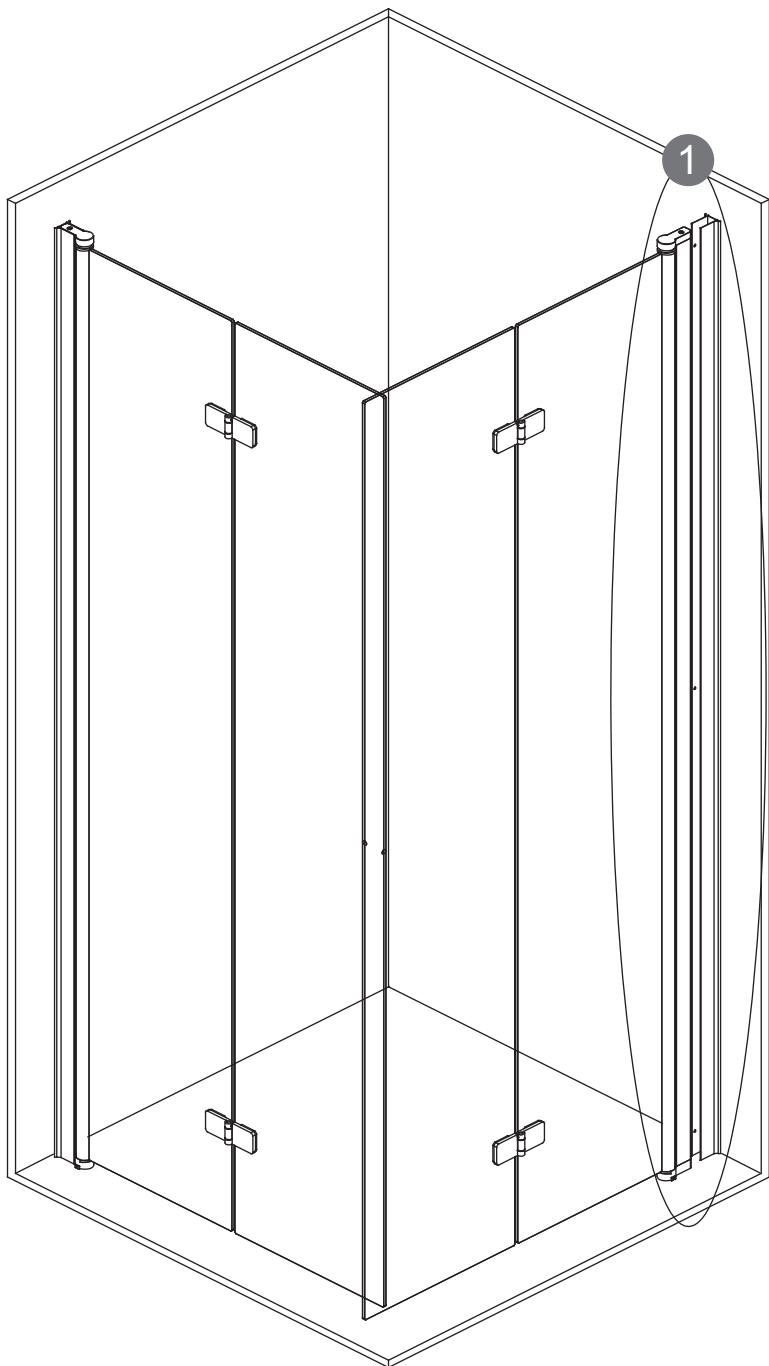


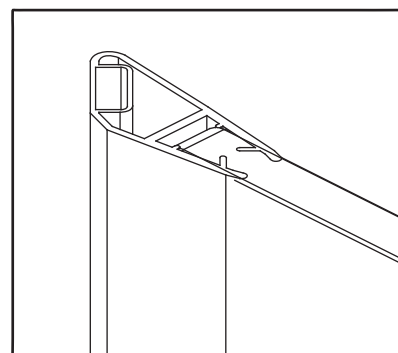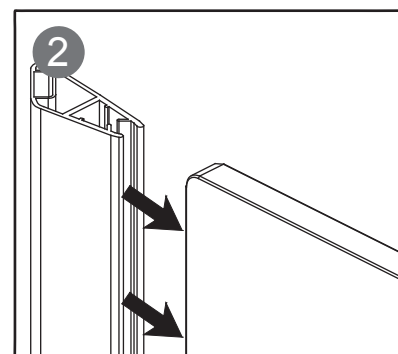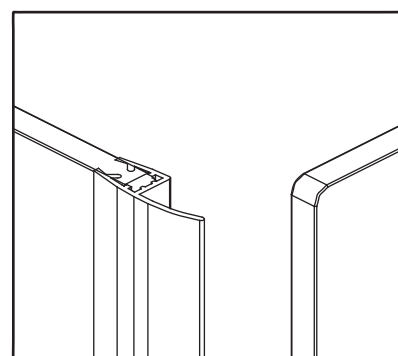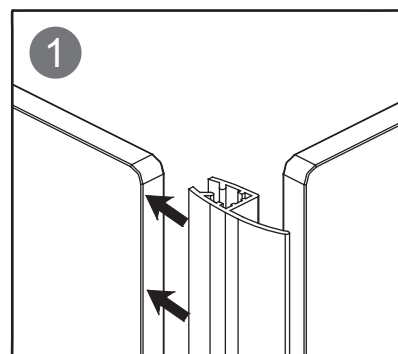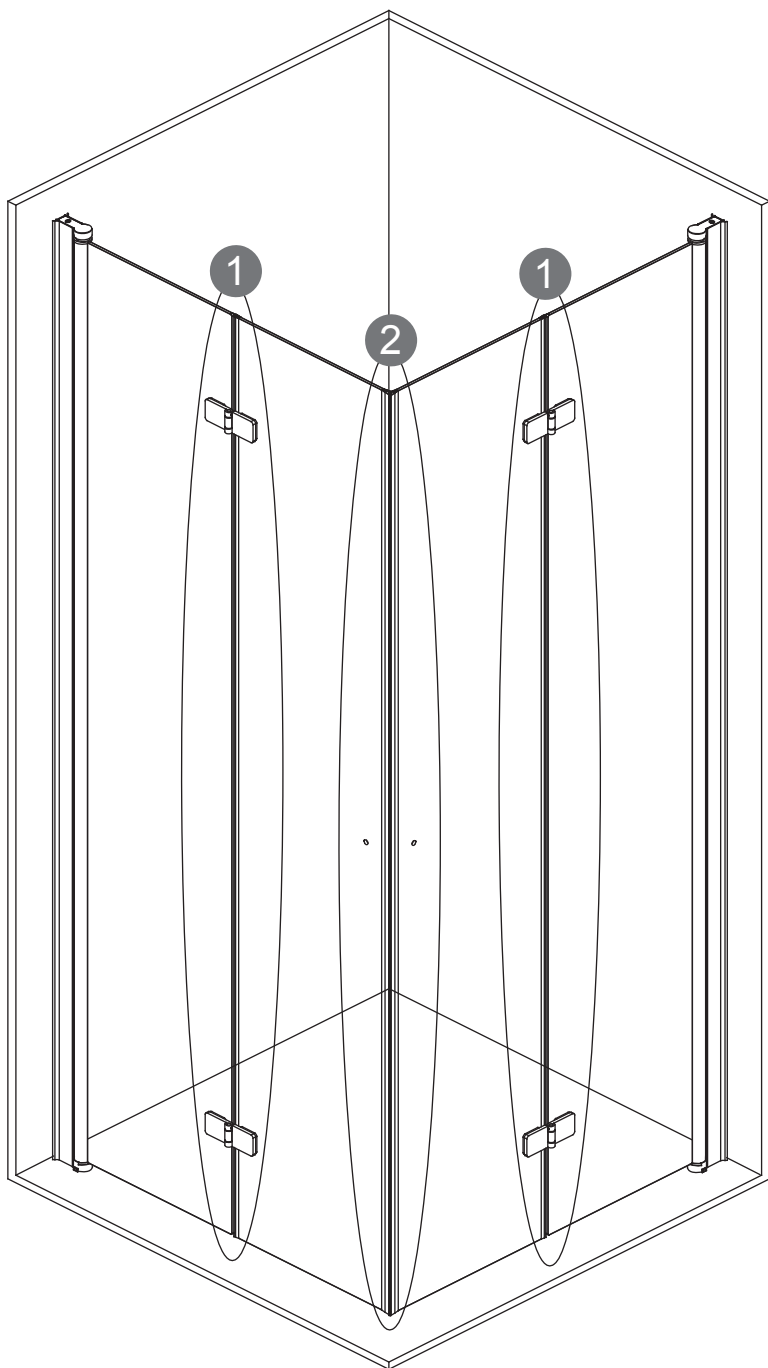


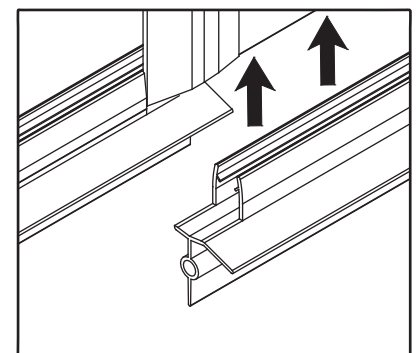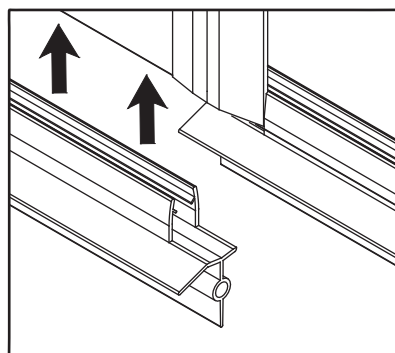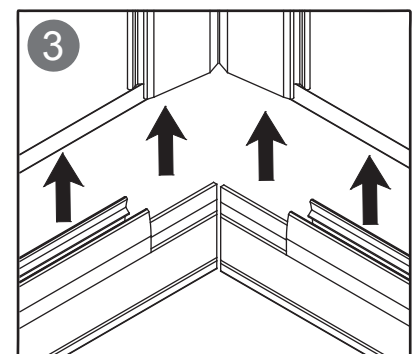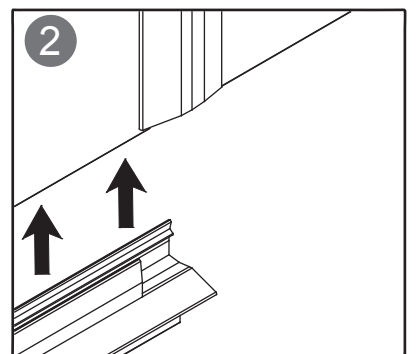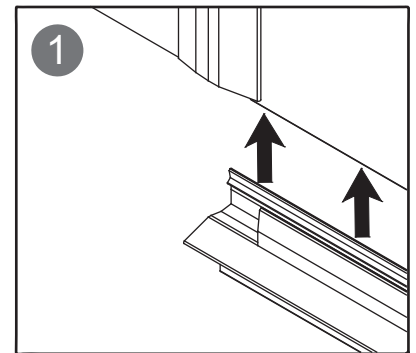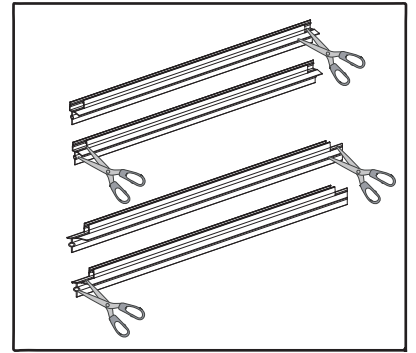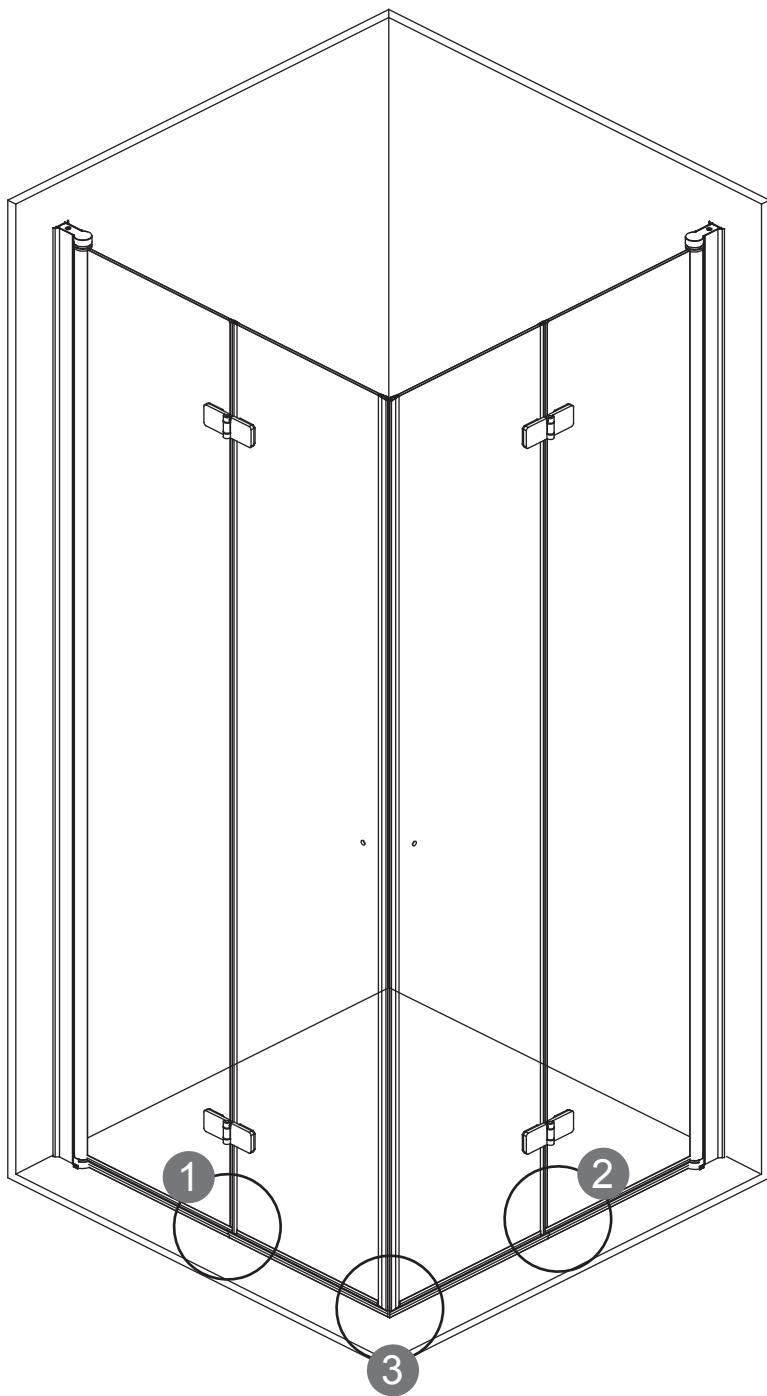

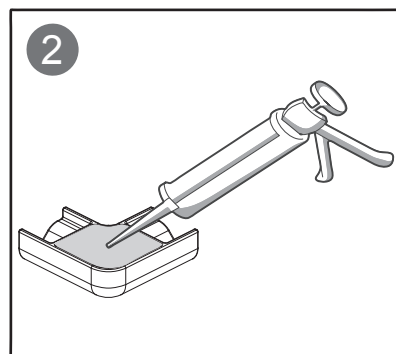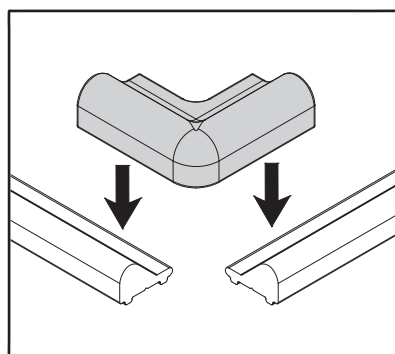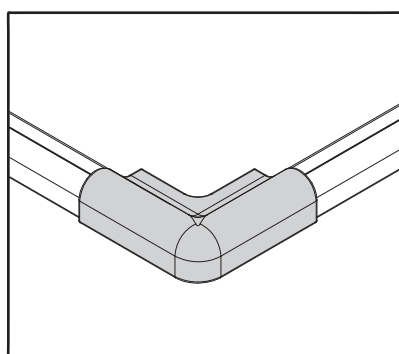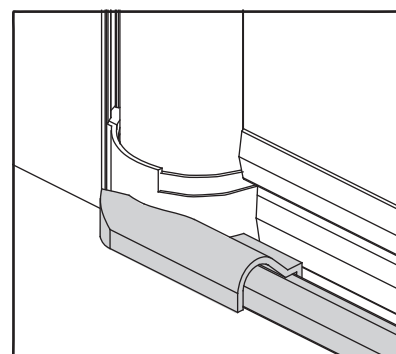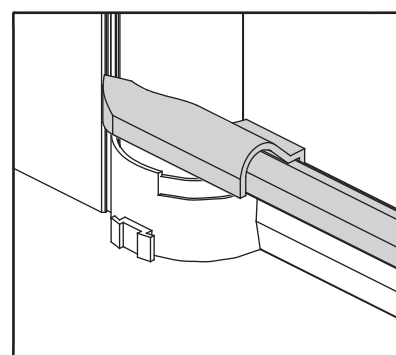
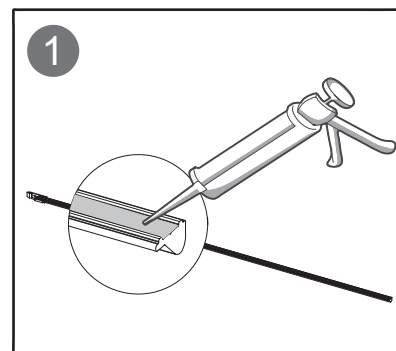
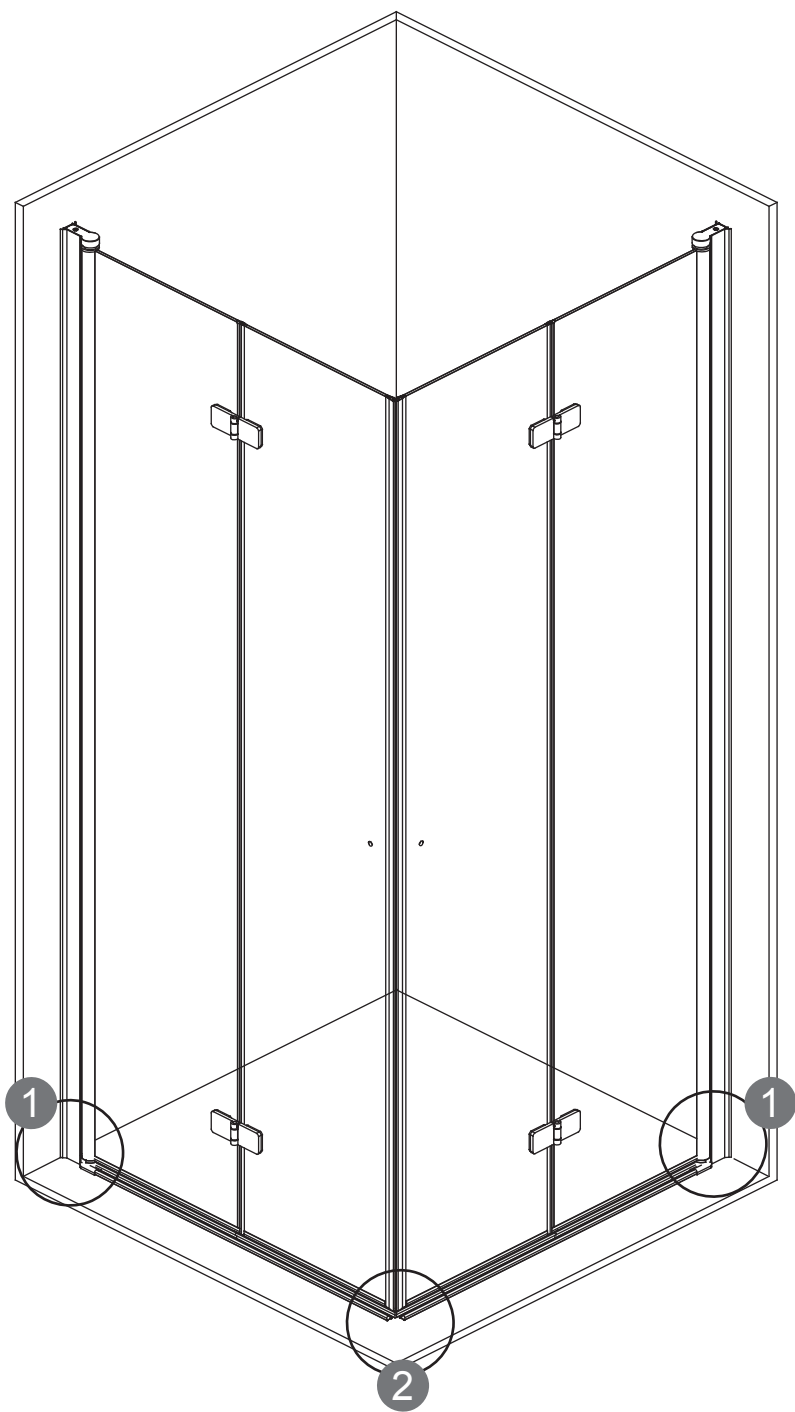










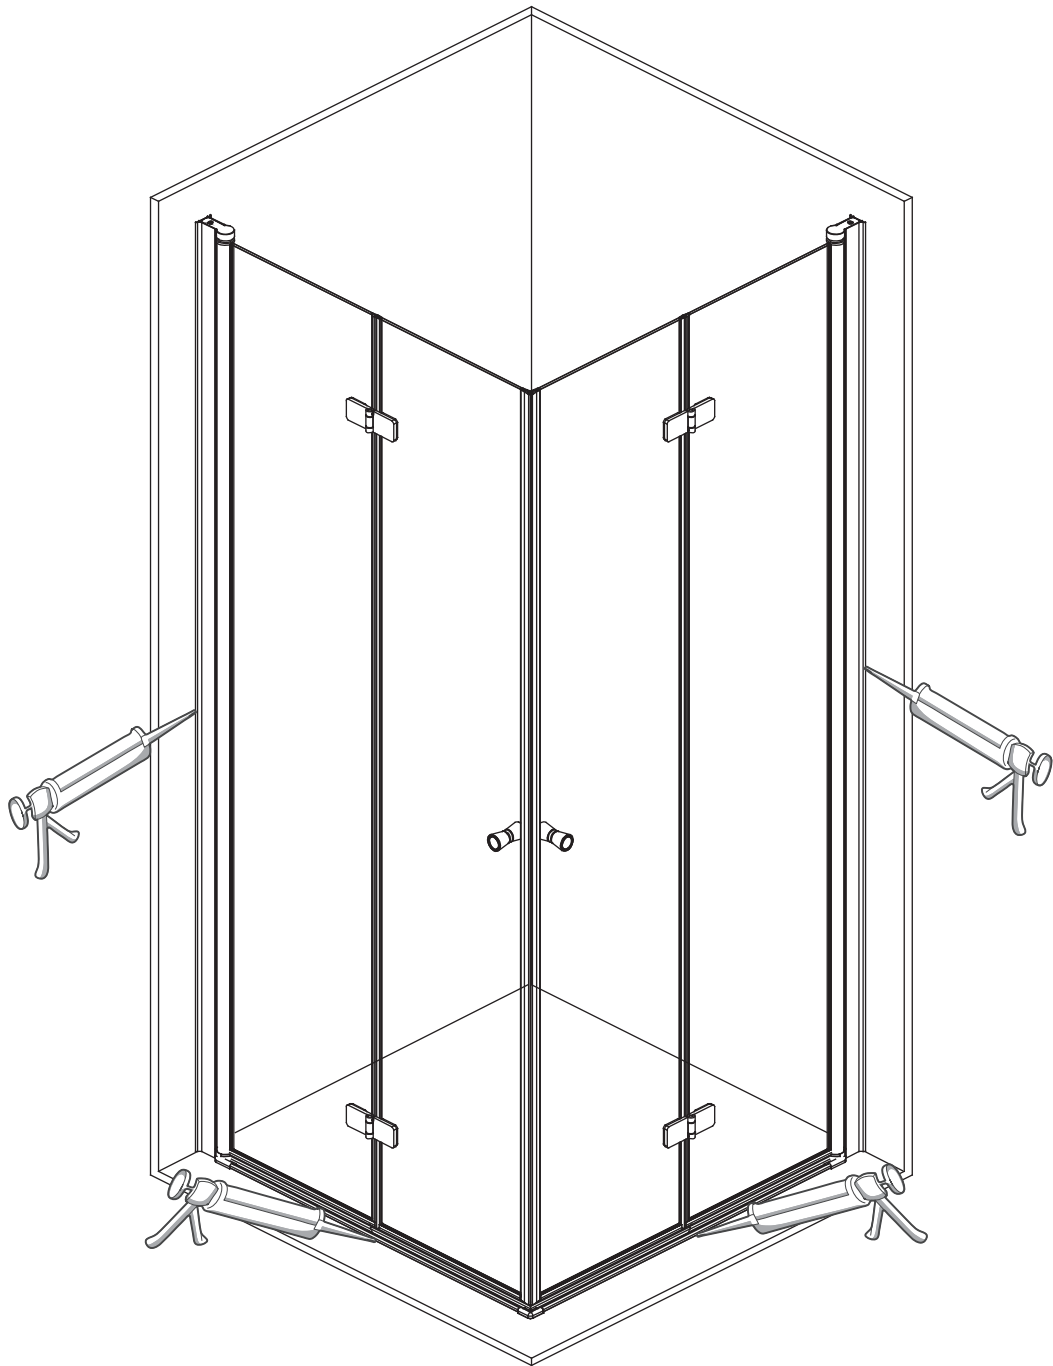





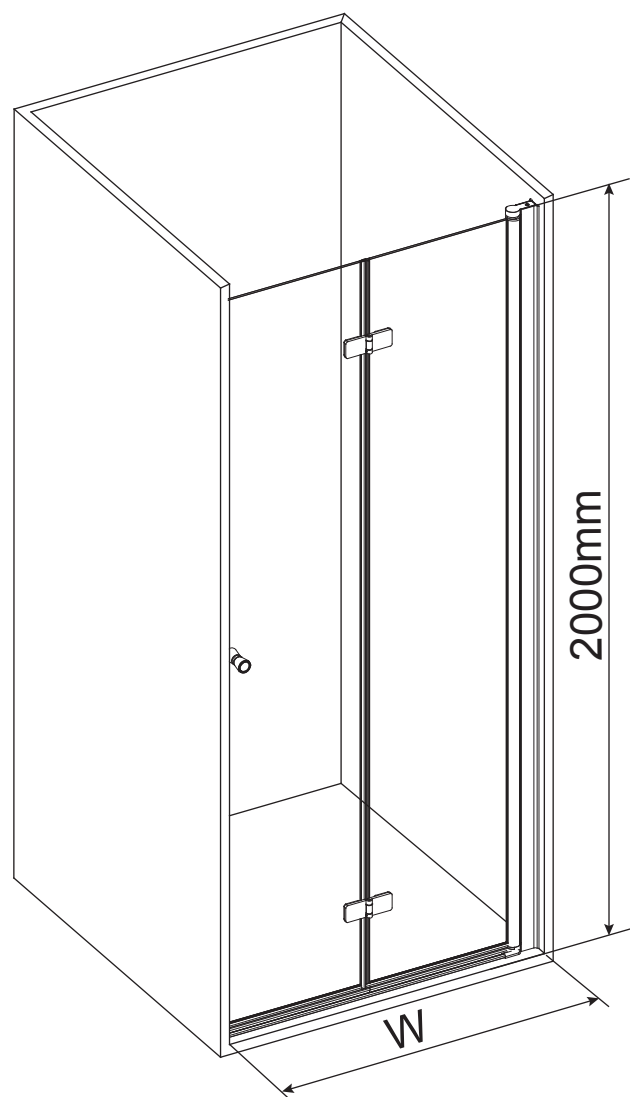









| | |
|------|-------------|
| W: | |
| 800 | 775mm-790mm |
| 900 | 875mm-890mm |
| 1000 | 975mm-990mm |


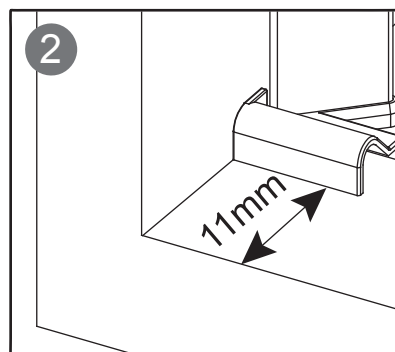
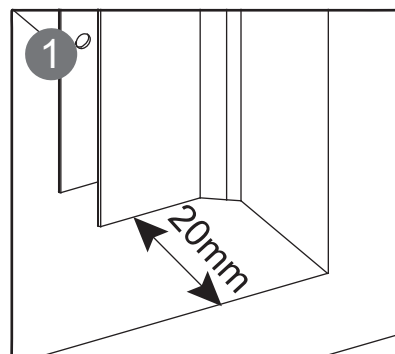
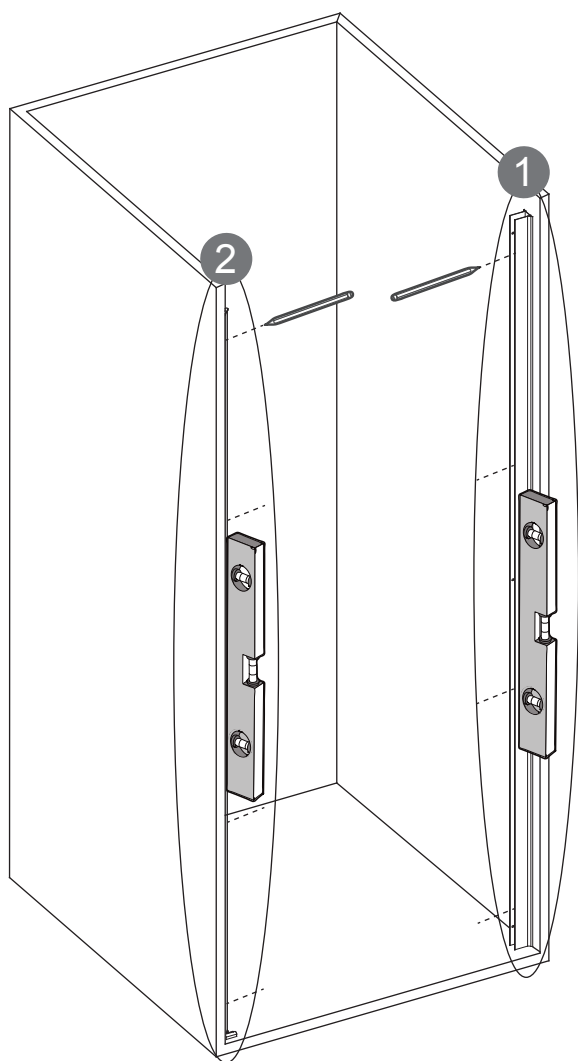




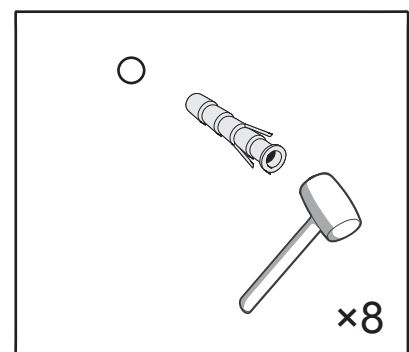
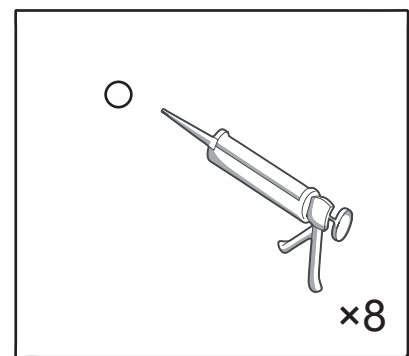
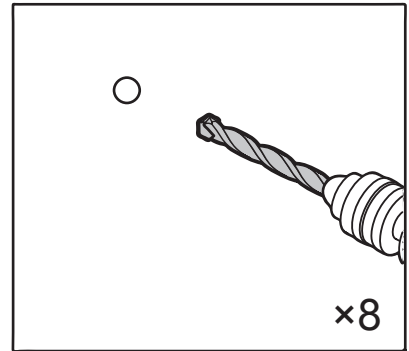



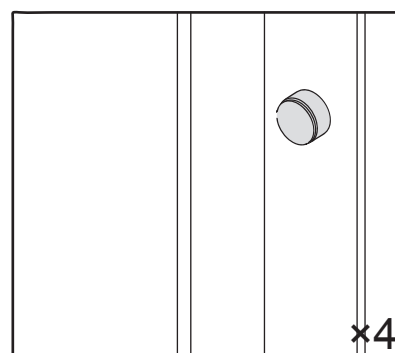
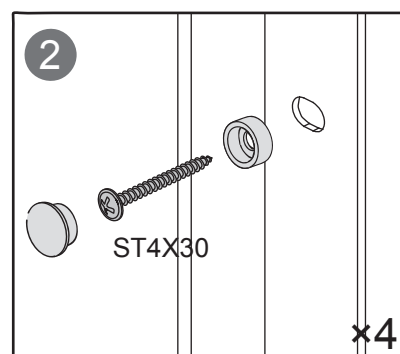
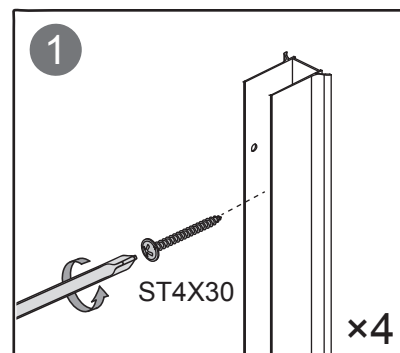
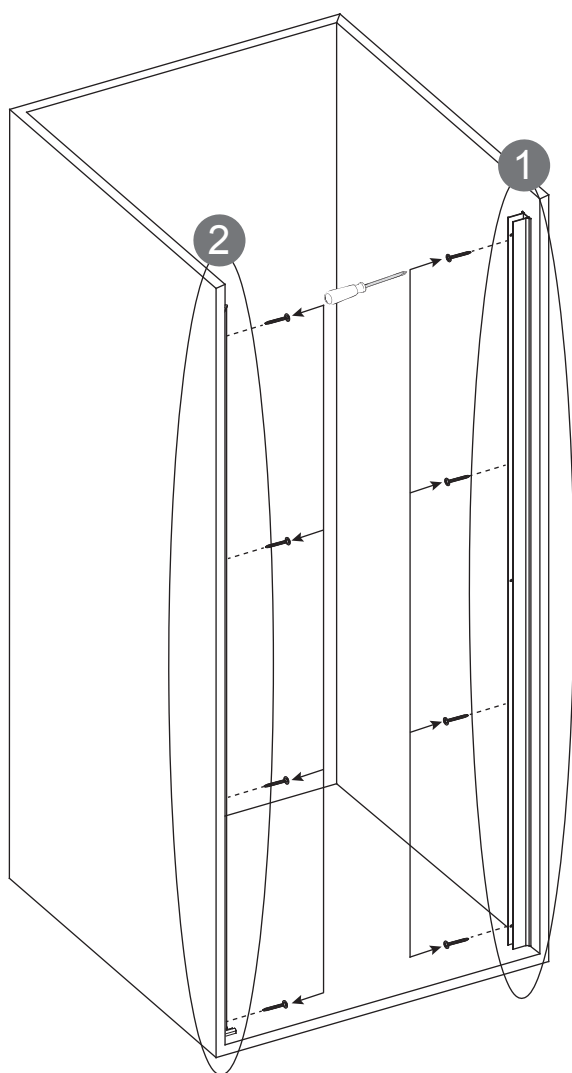


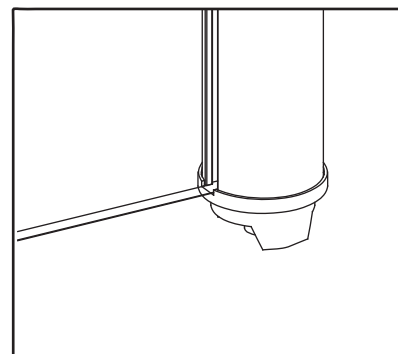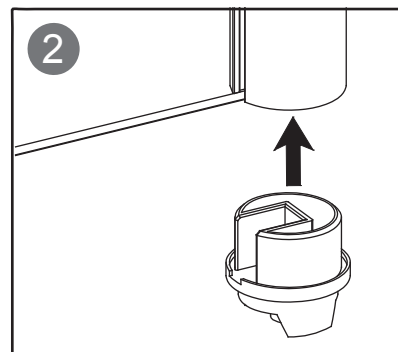
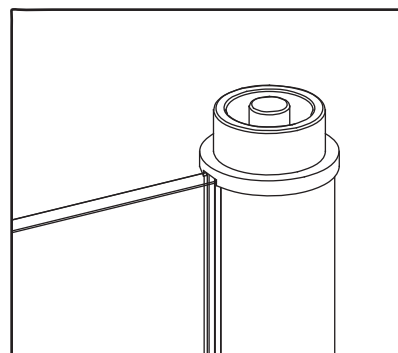
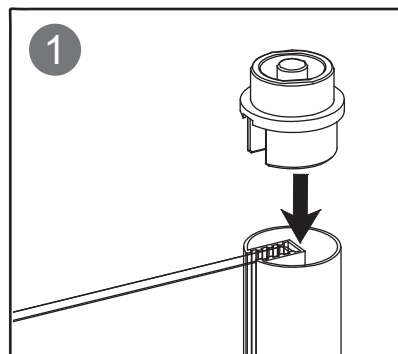


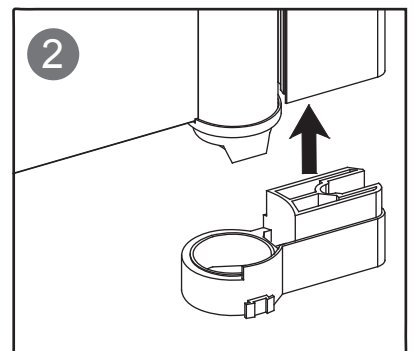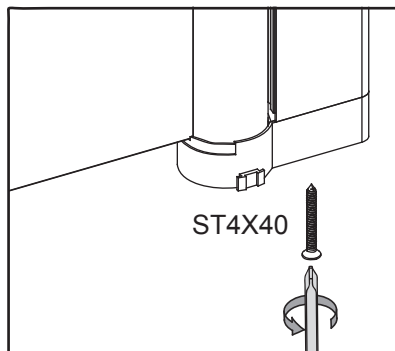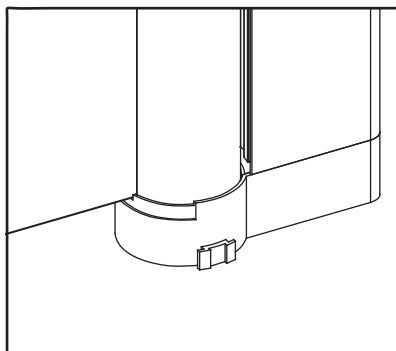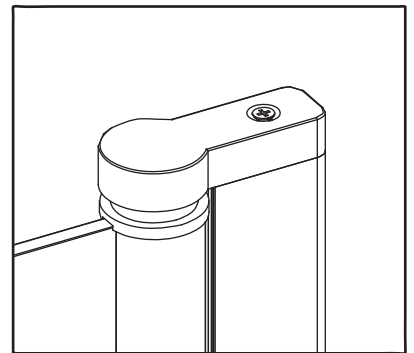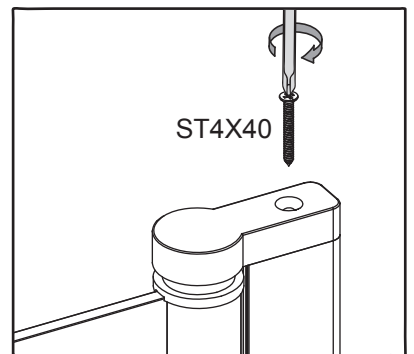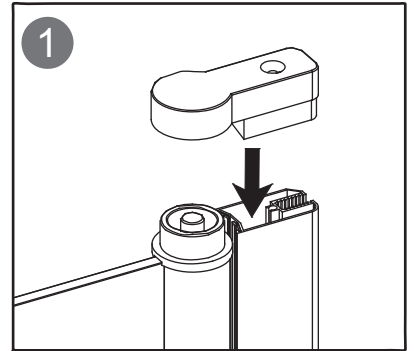
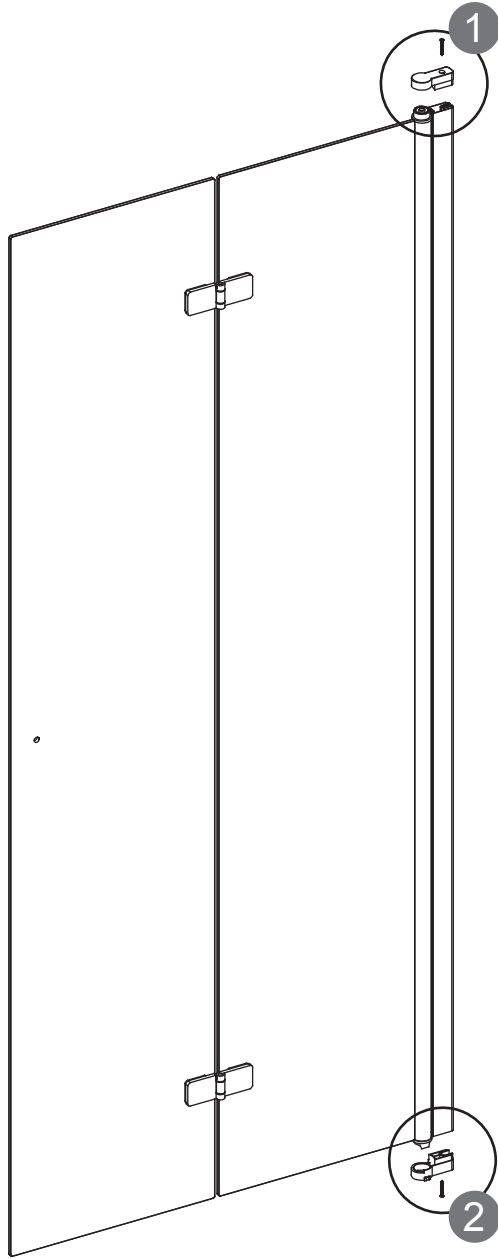


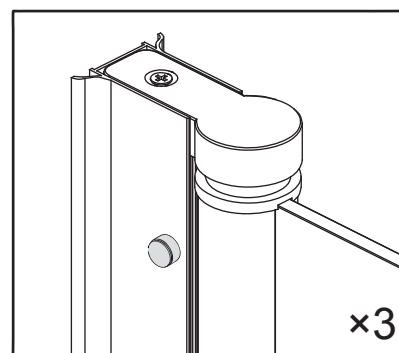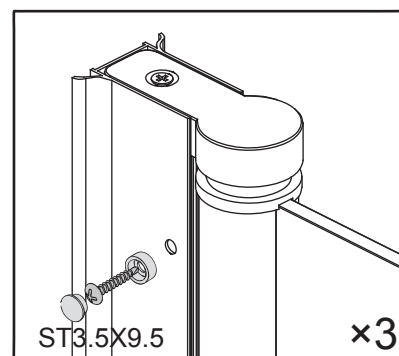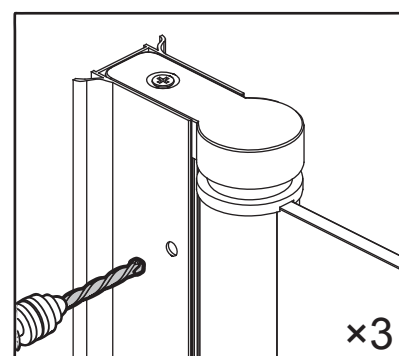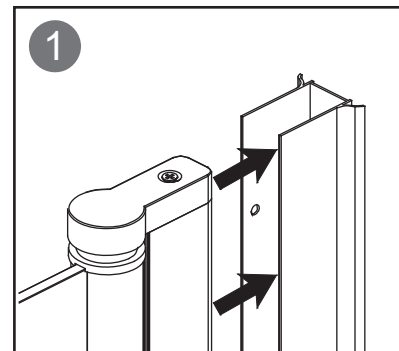

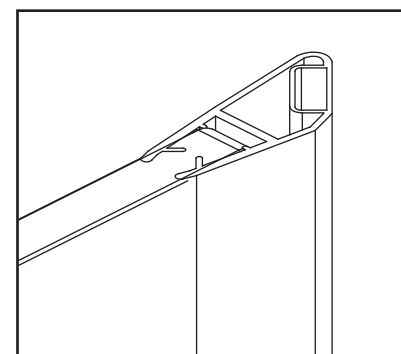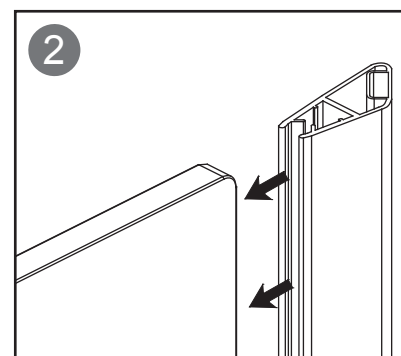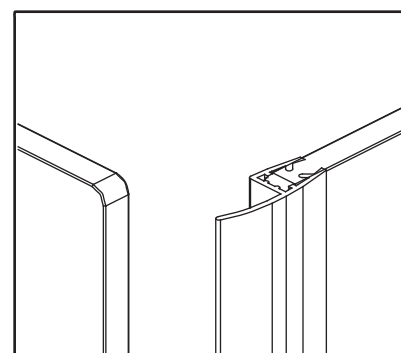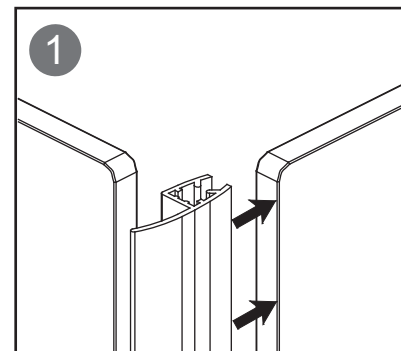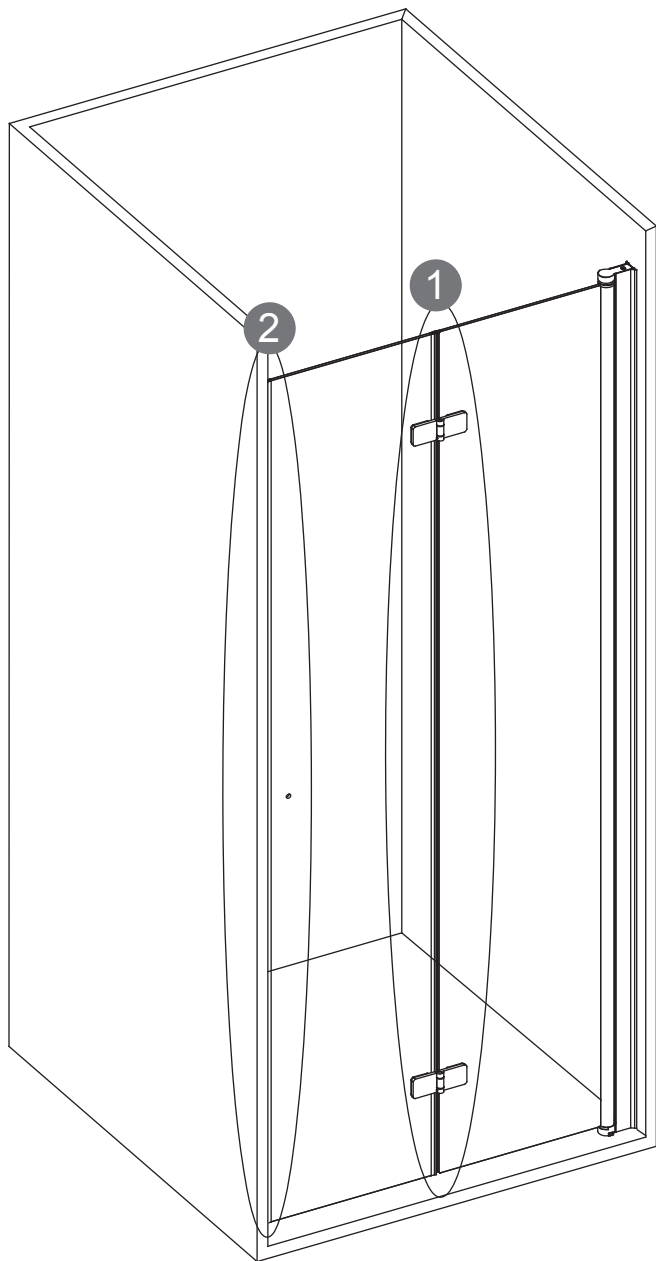

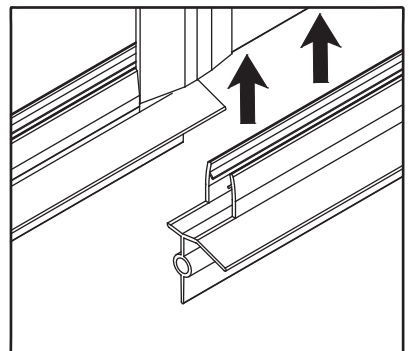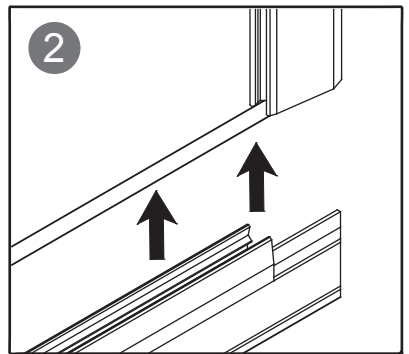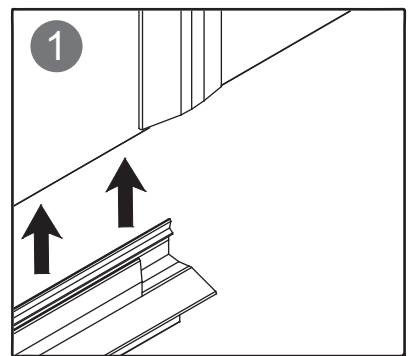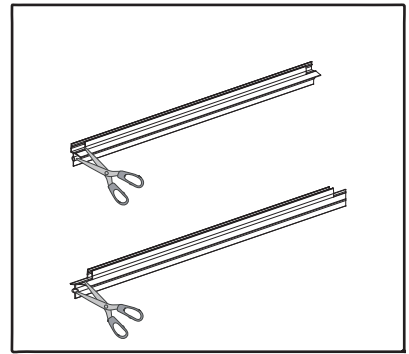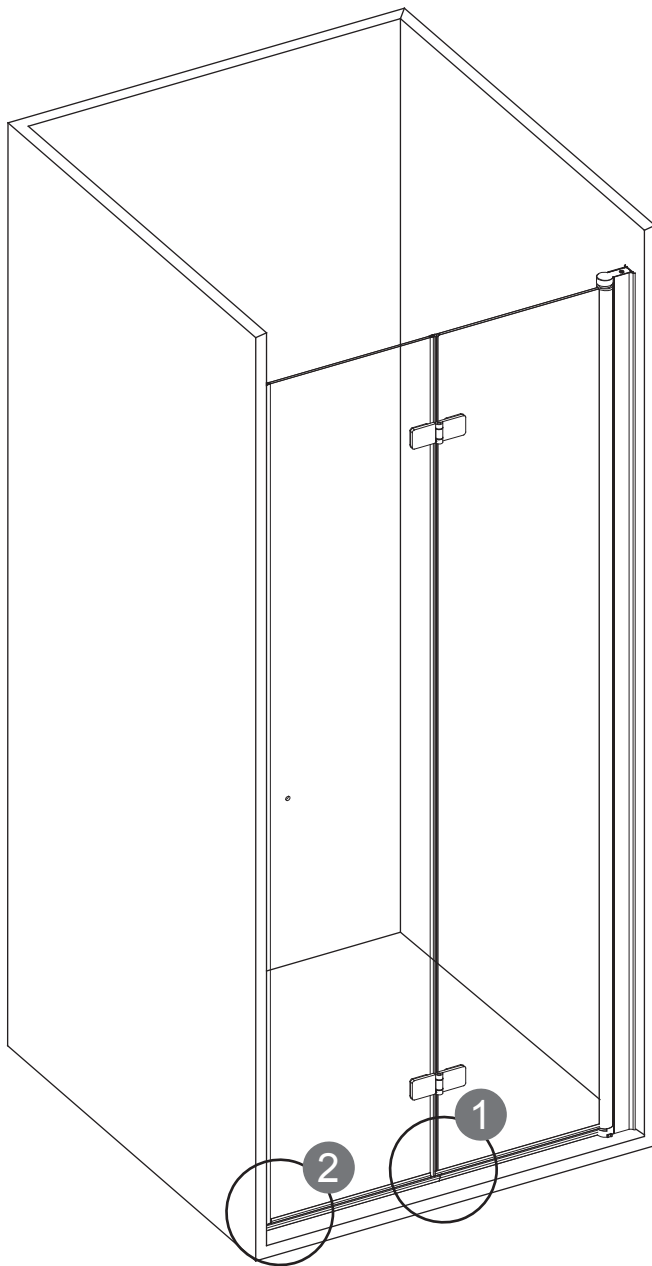




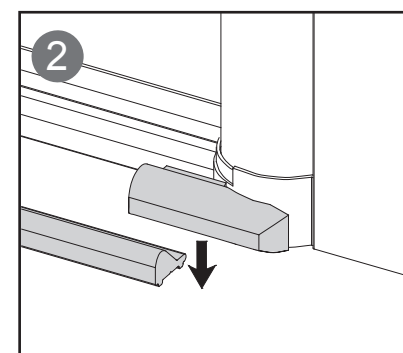
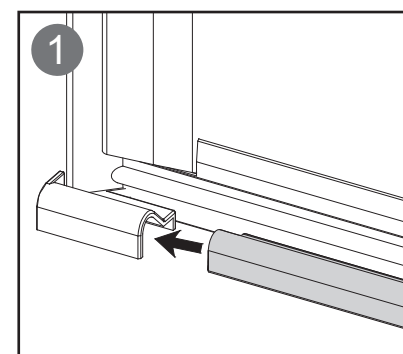
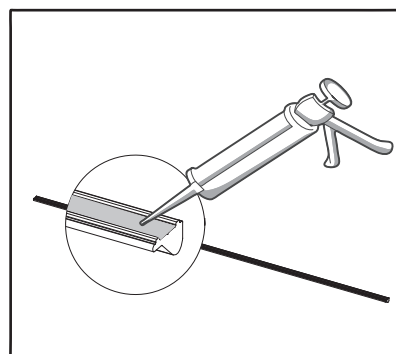



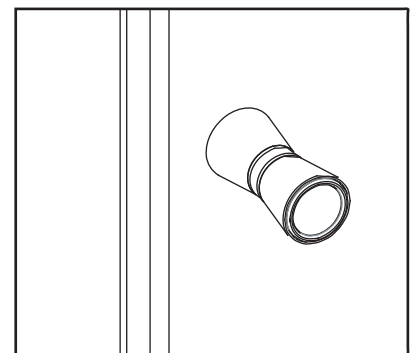
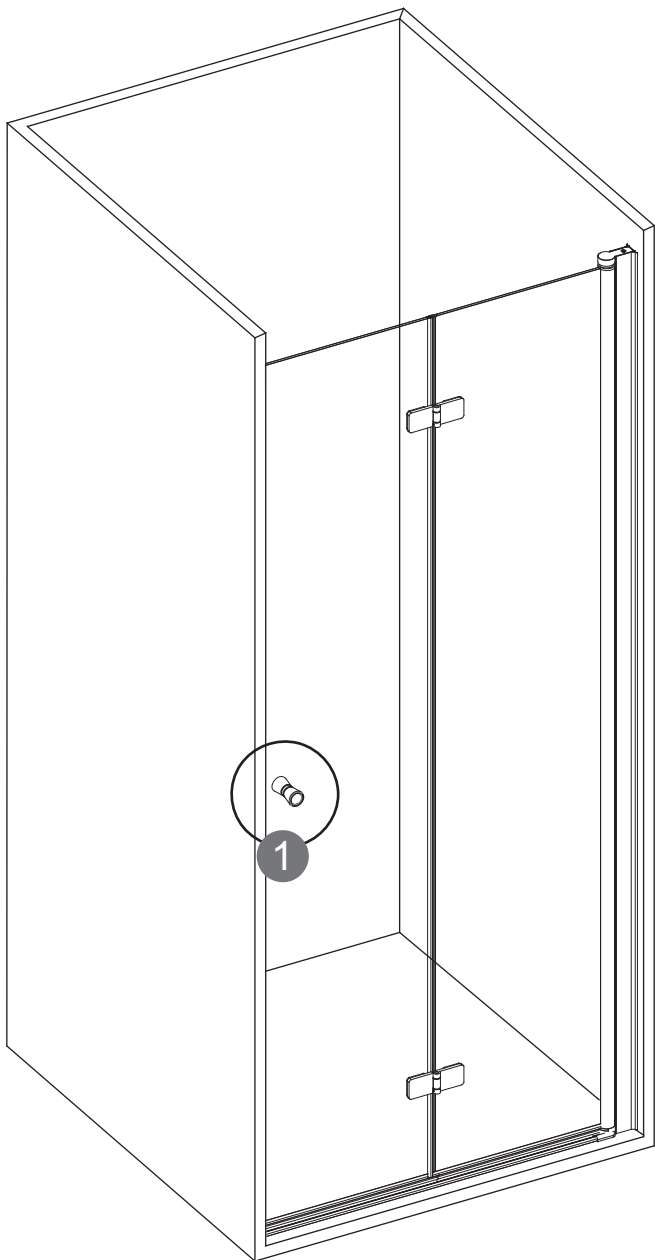



















| | |
|------|-------------|
| W: | |
| 800 | 775mm-790mm |
| 900 | 875mm-890mm |
| 1000 | 975mm-990mm |


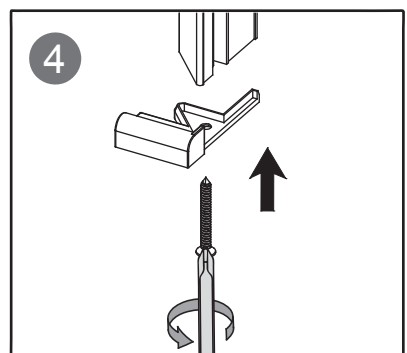
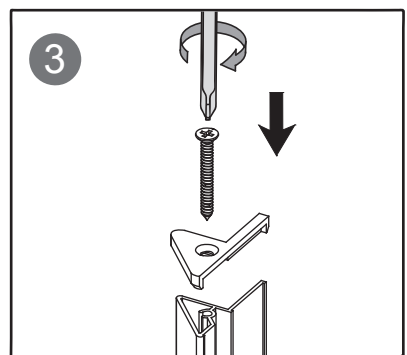
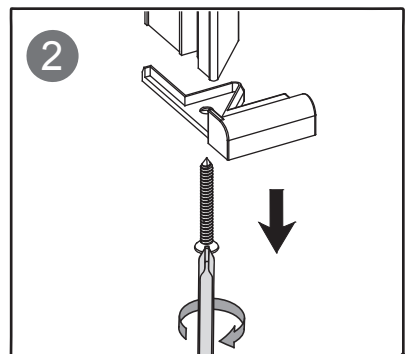
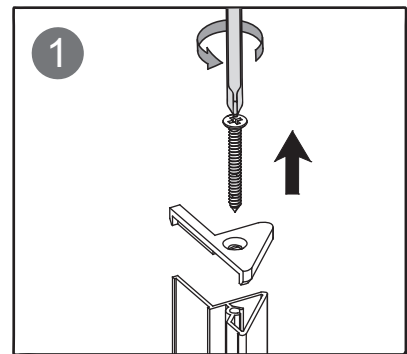






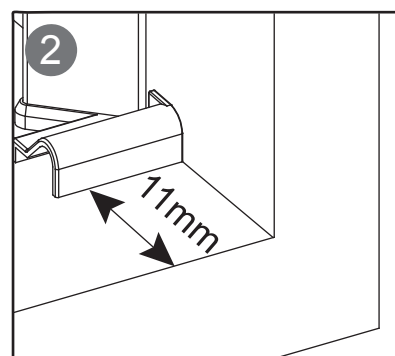
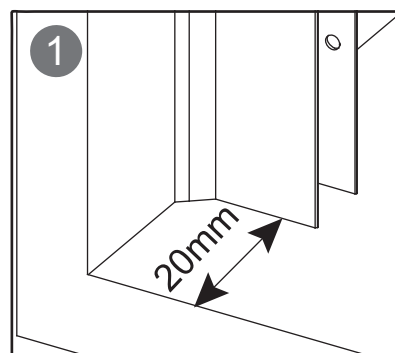
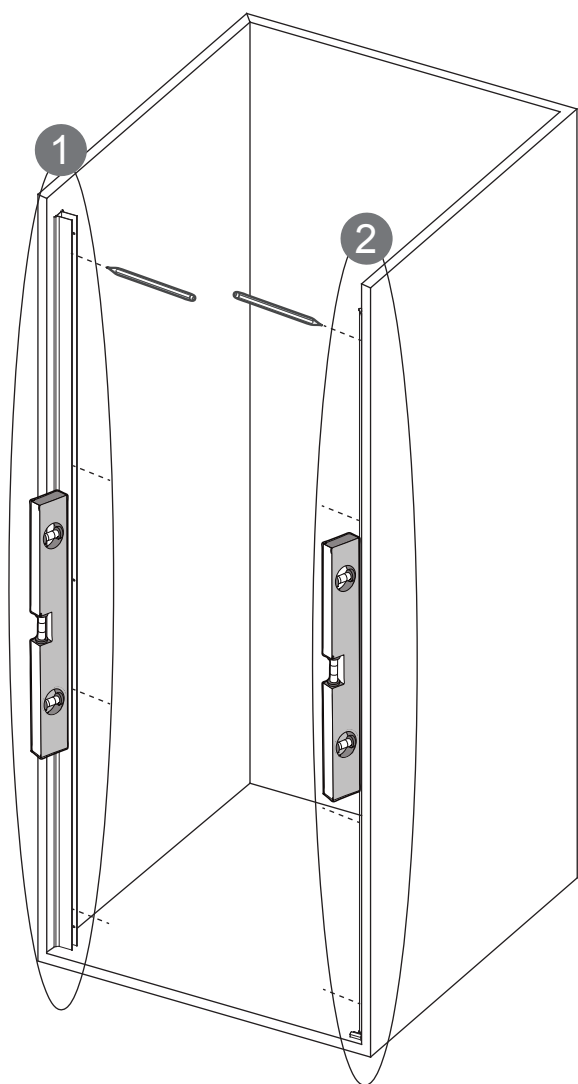



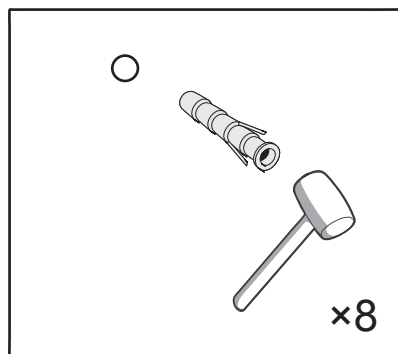
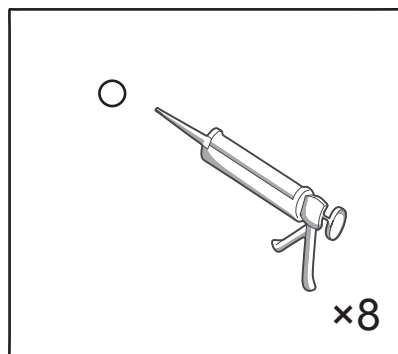
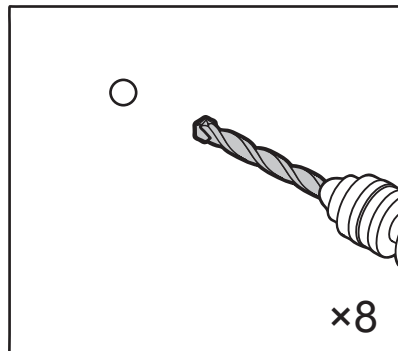
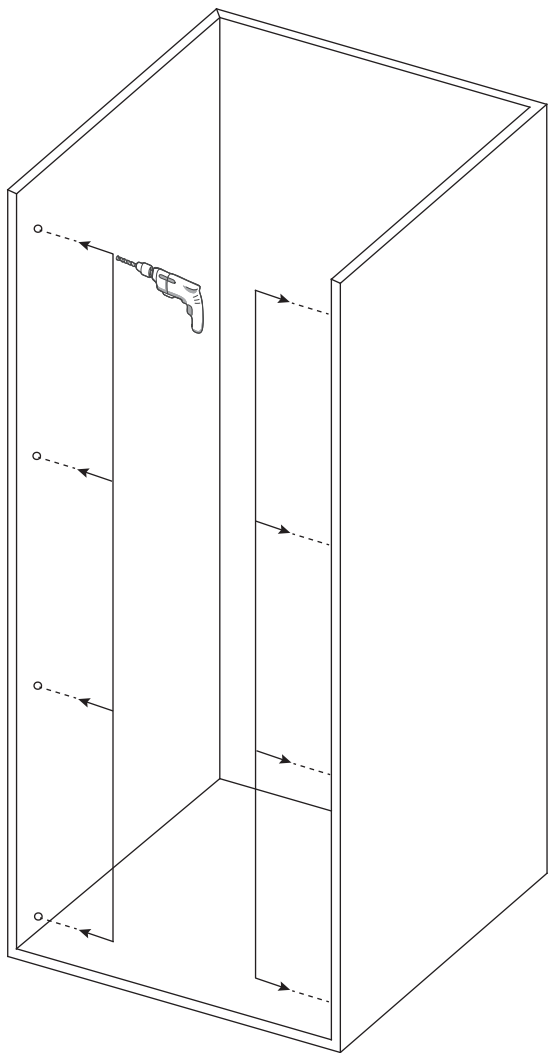



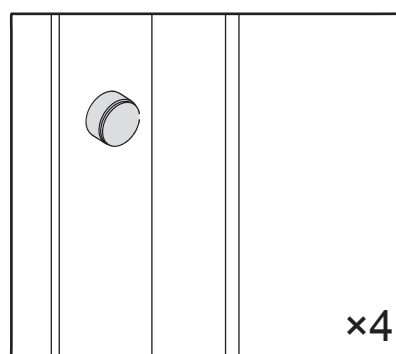
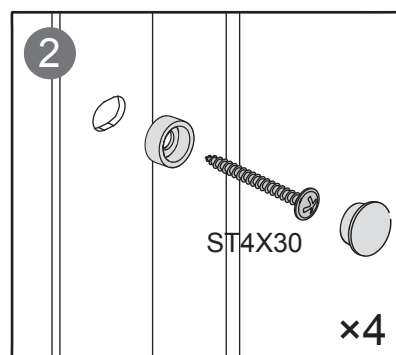
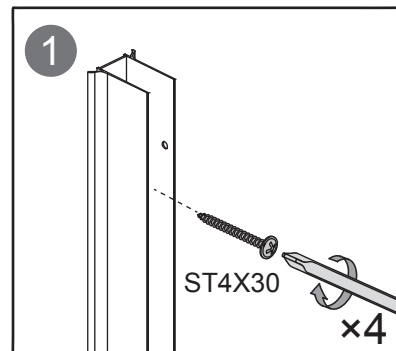
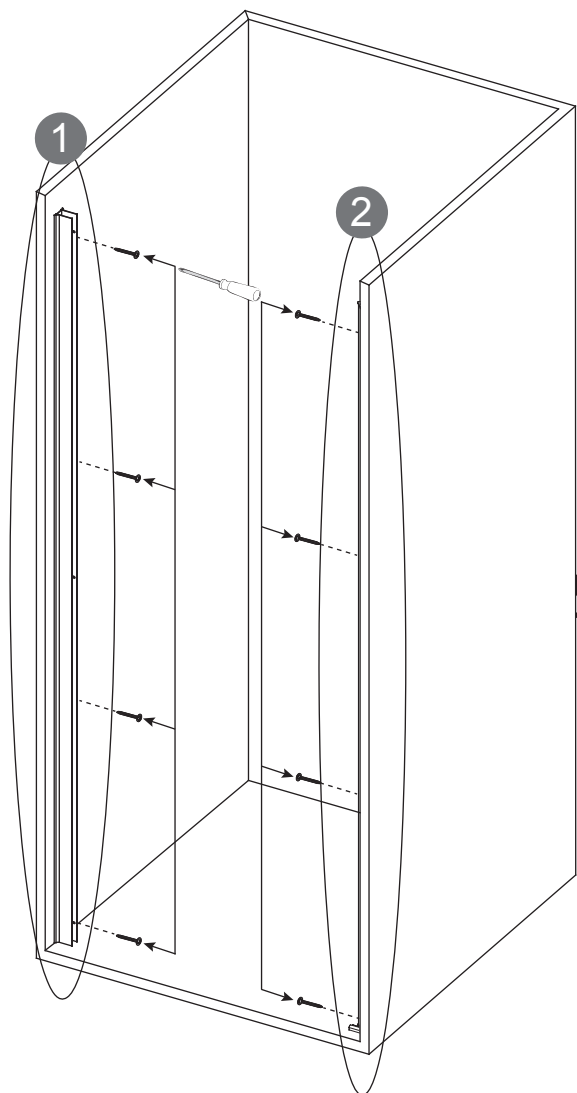


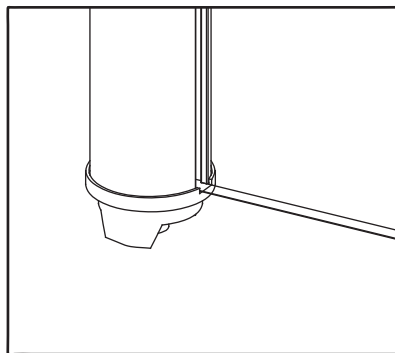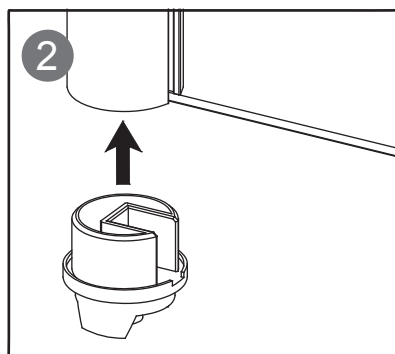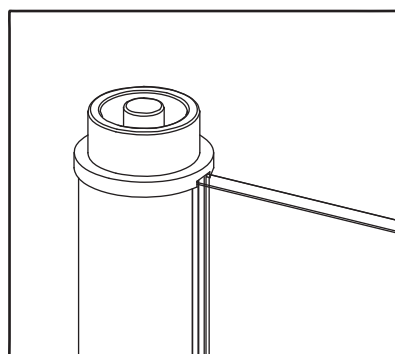
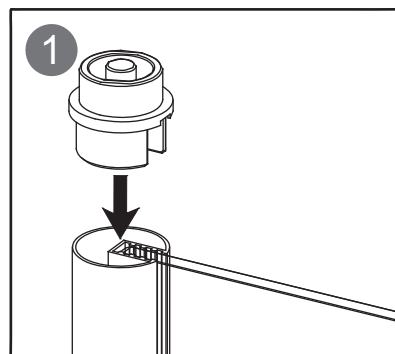
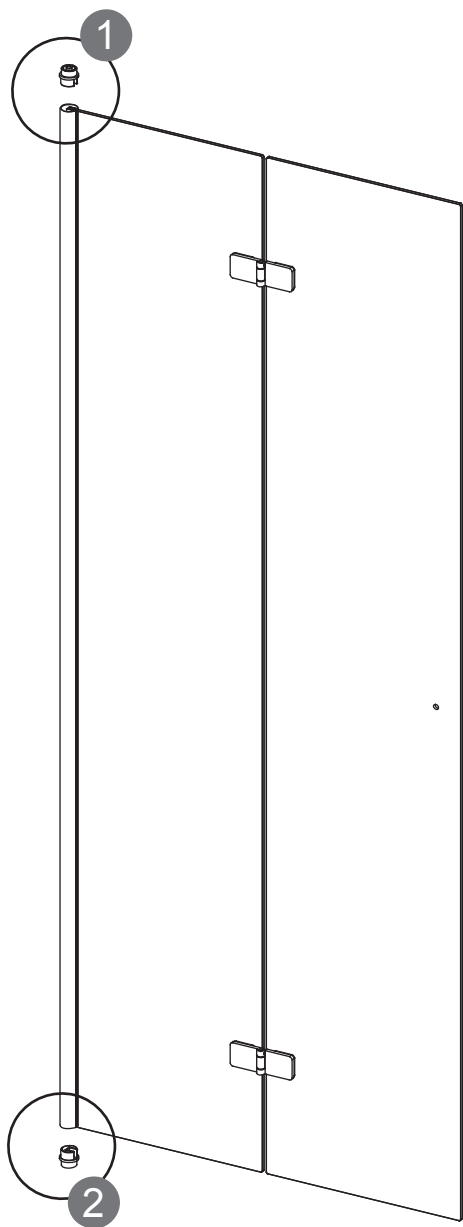


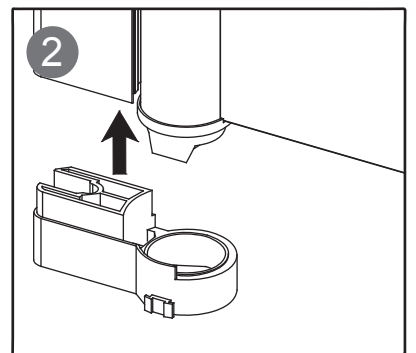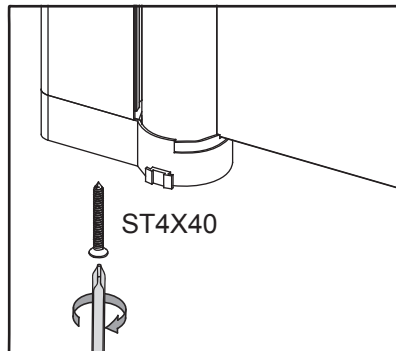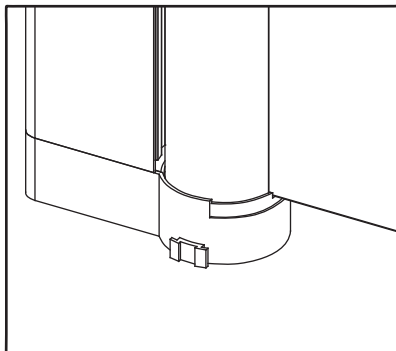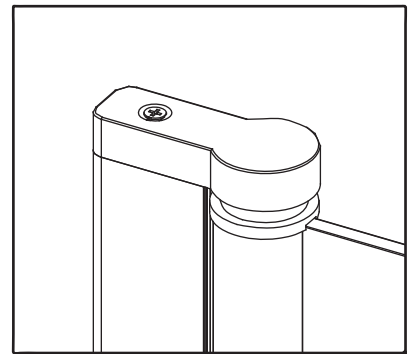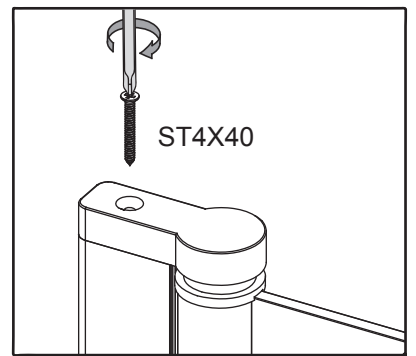
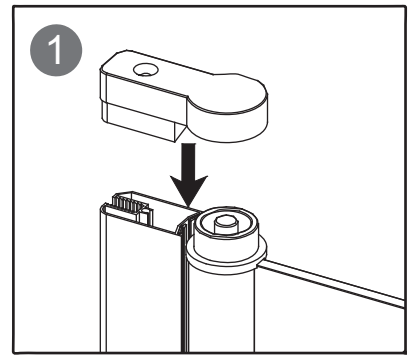
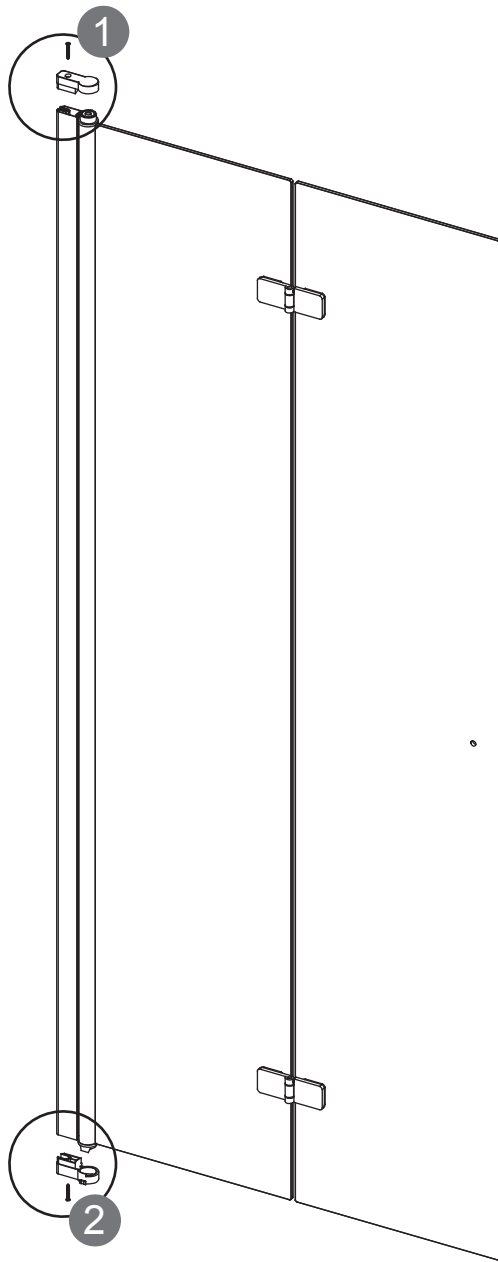


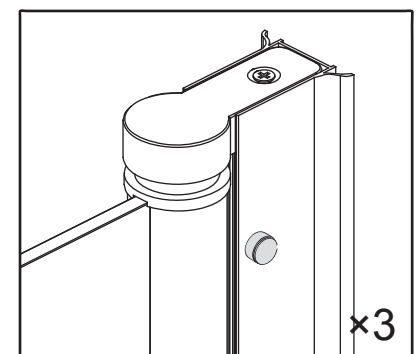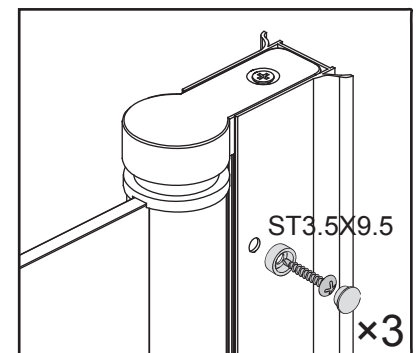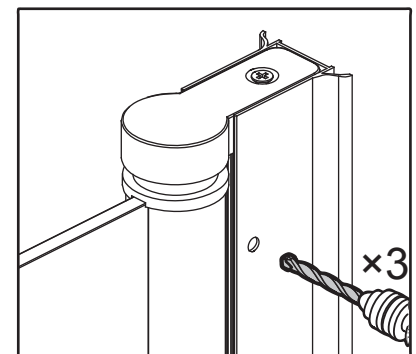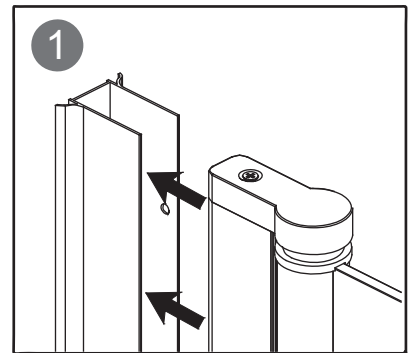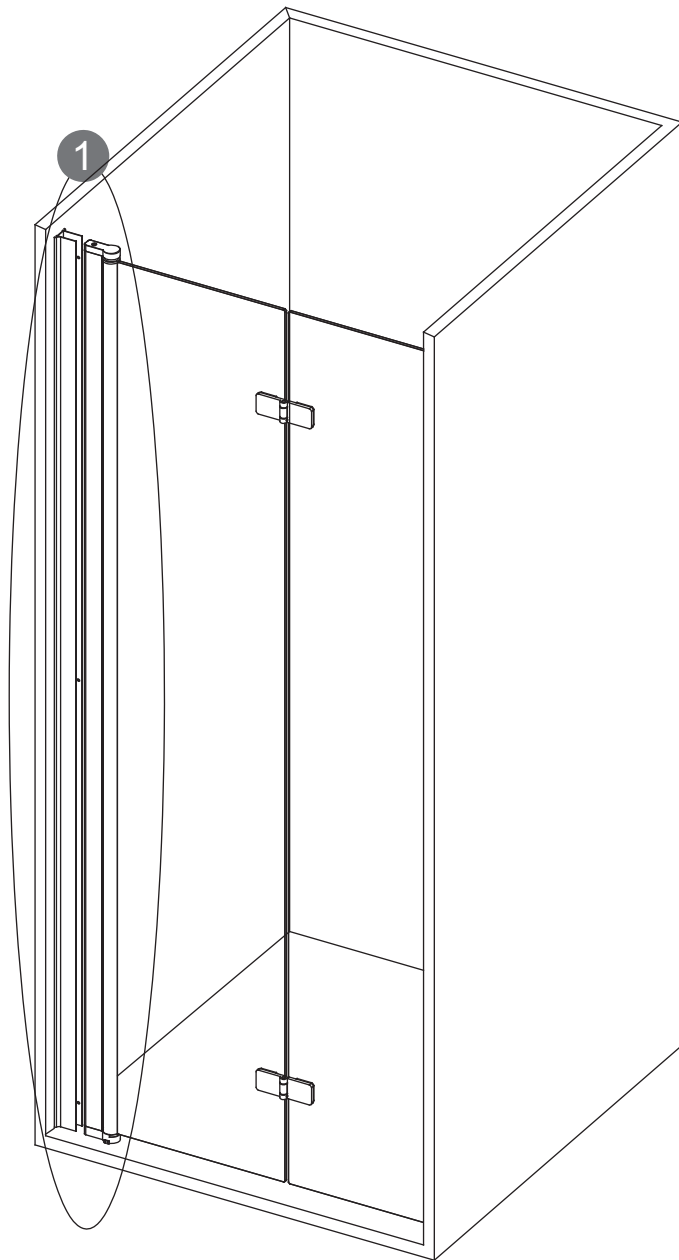


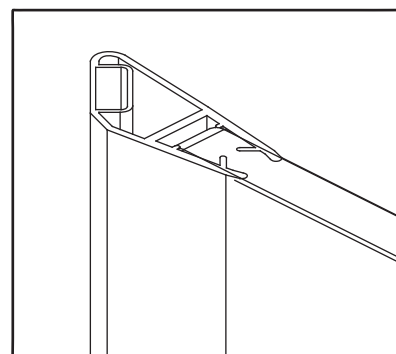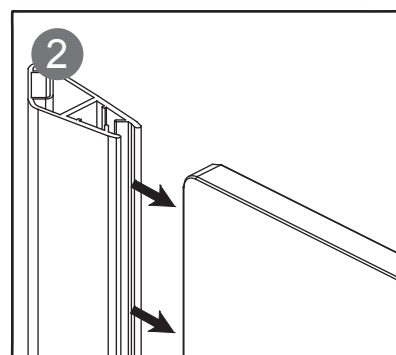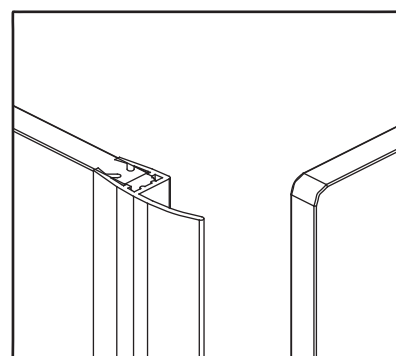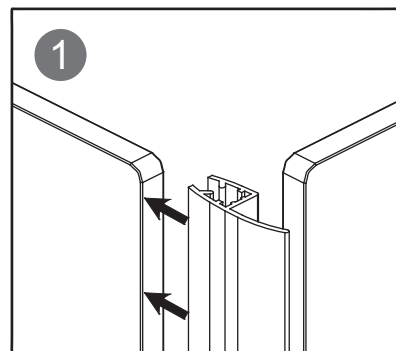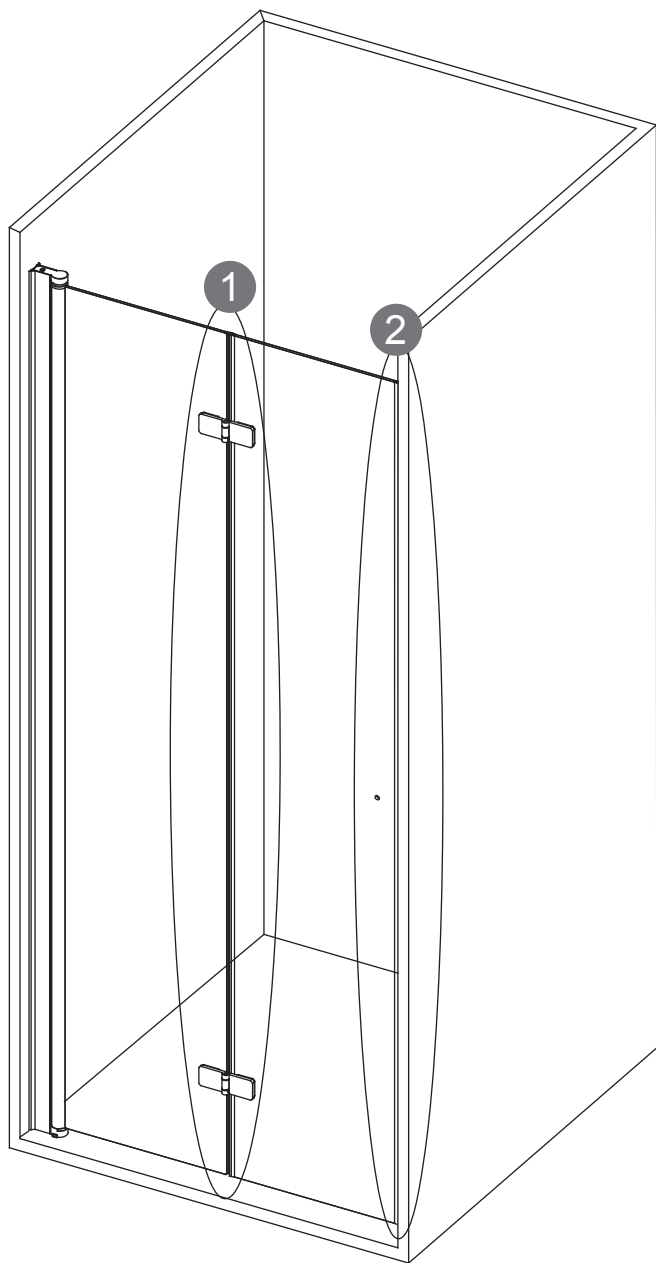

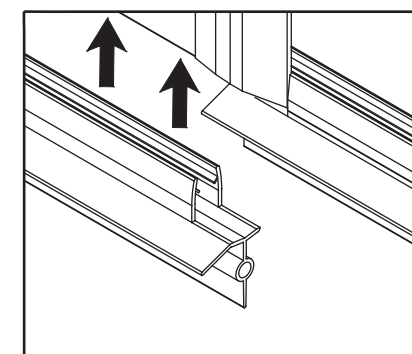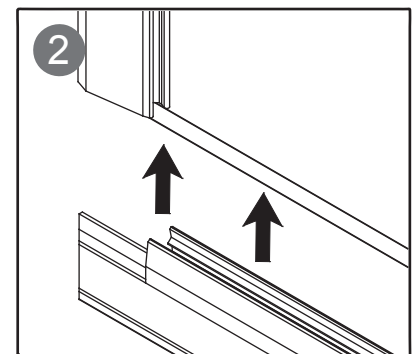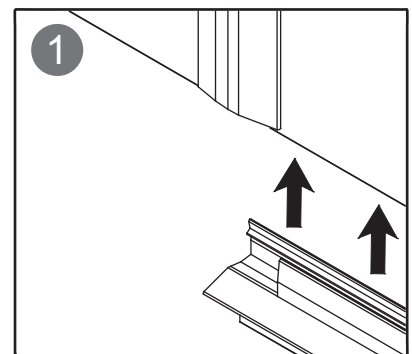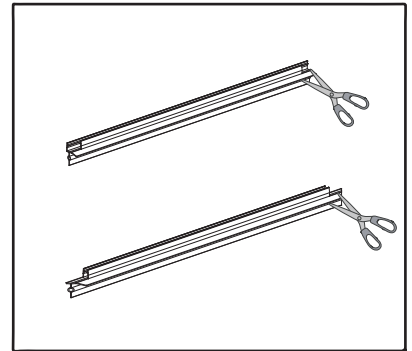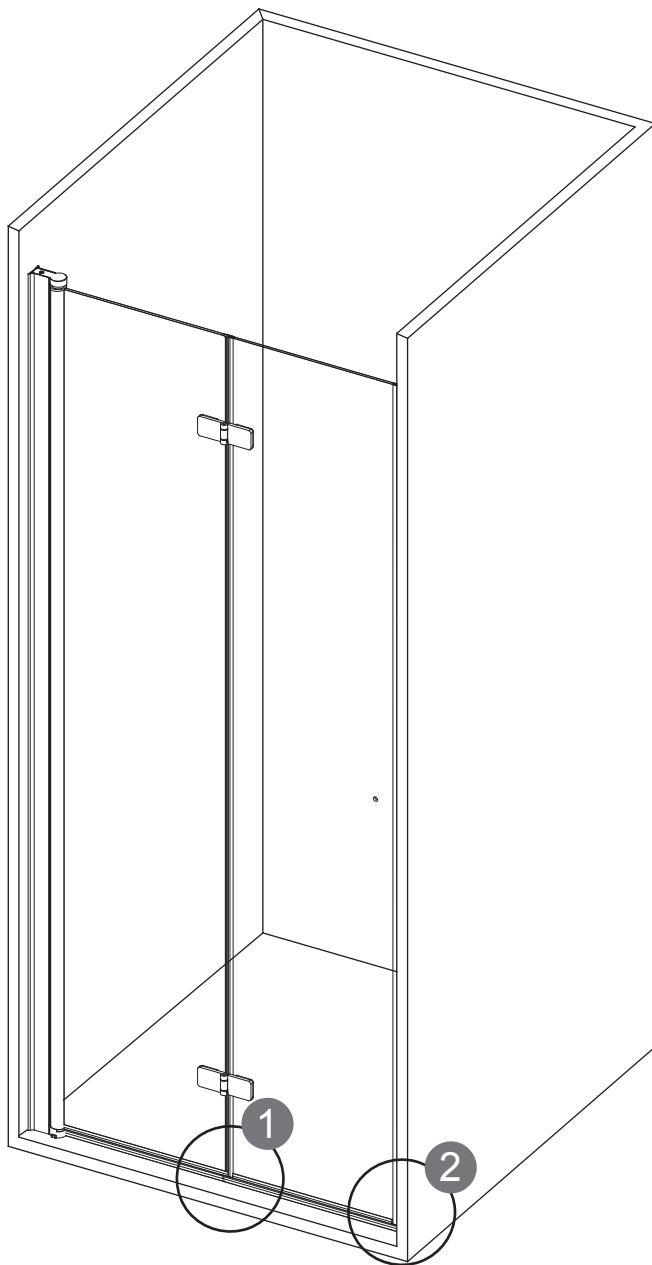

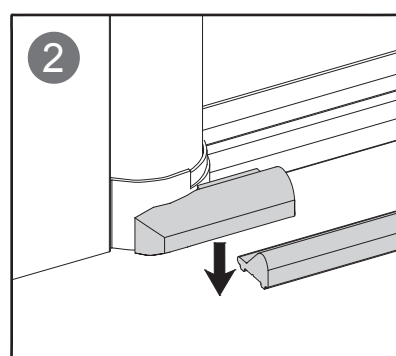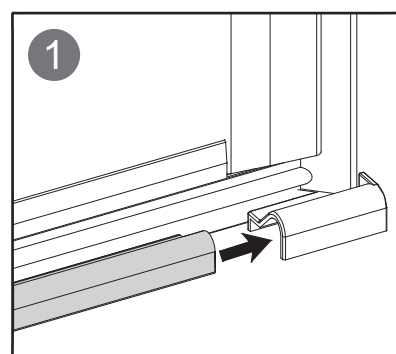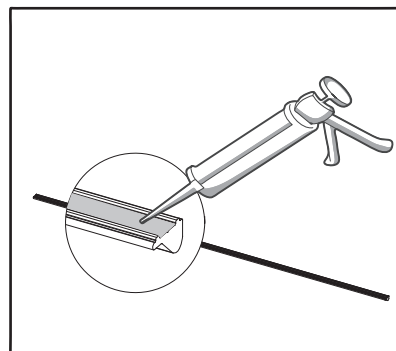

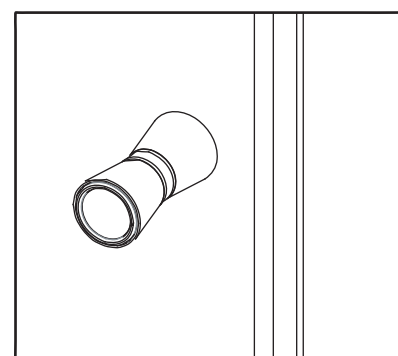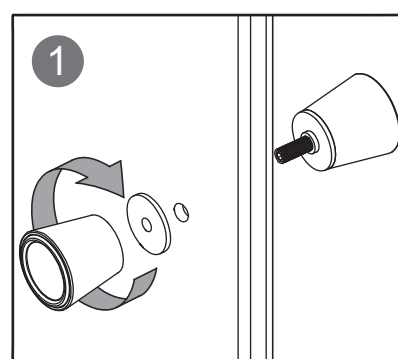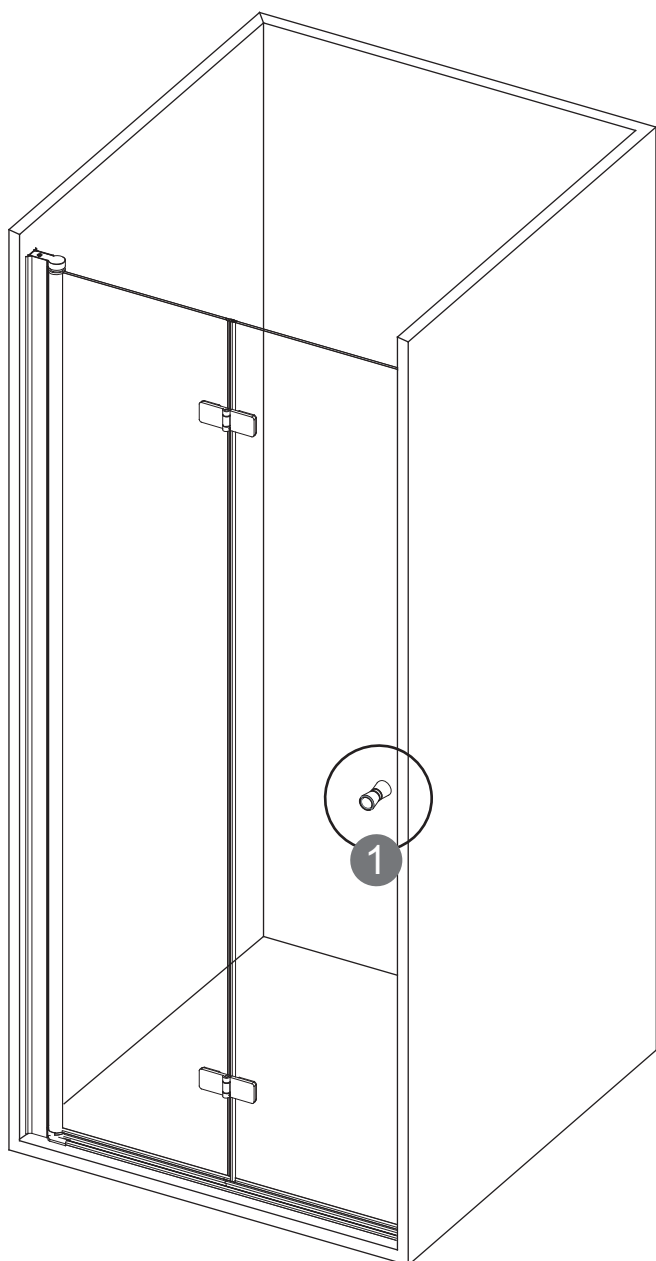

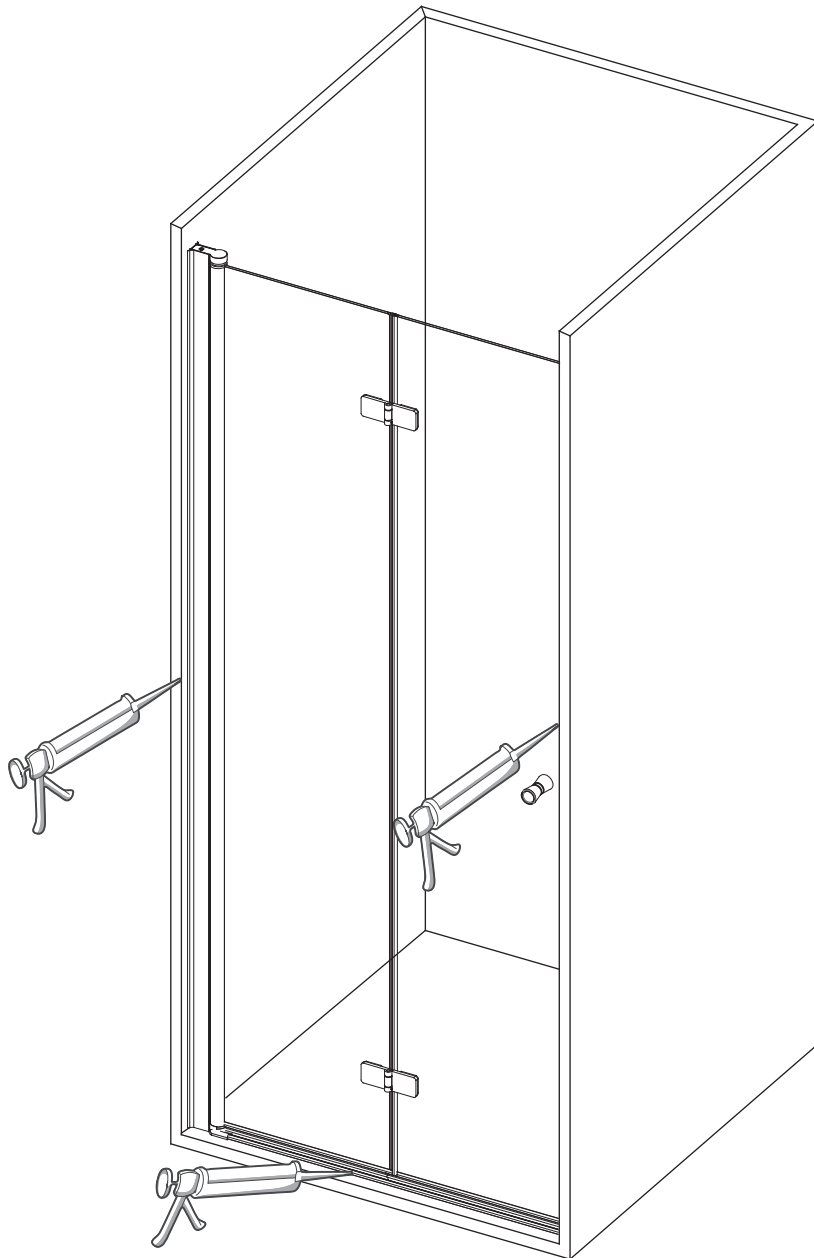



| | |
|------|-------------|
| W: | |
| 800 | 765mm-780mm |
| 900 | 865mm-880mm |
| 1000 | 965mm-980mm |

