

# INSTRUKCJA MONTAŻU KABINA AREA

WERSJA: DRZWI DO WNEŹKI

AMP05L2012M






AMP05R2012M

AMP05L4012M


AMP05R4012M

AMP05L6012M

AMP05R6012M

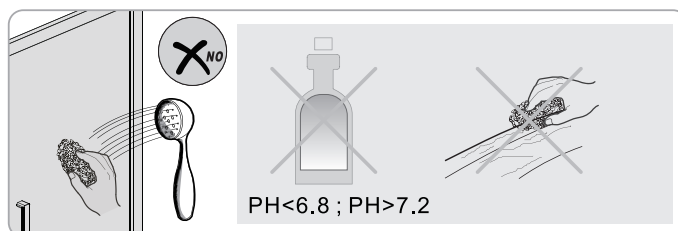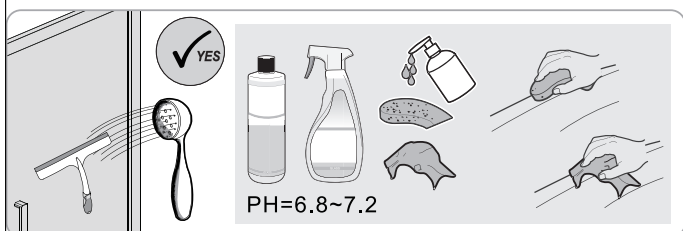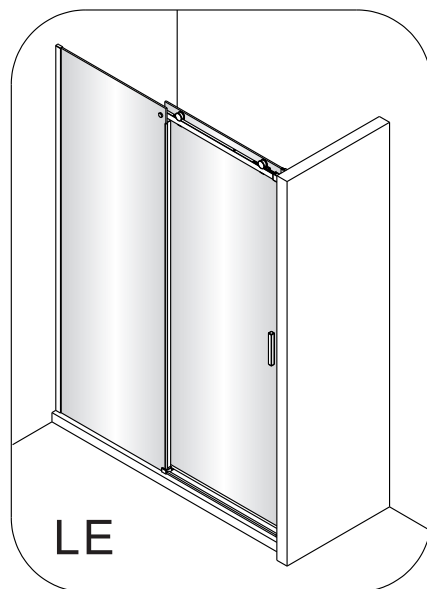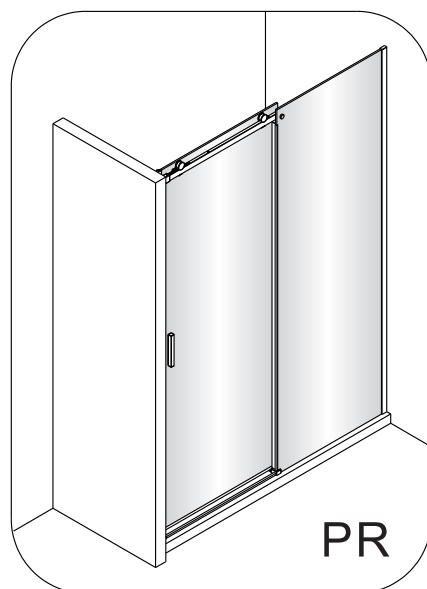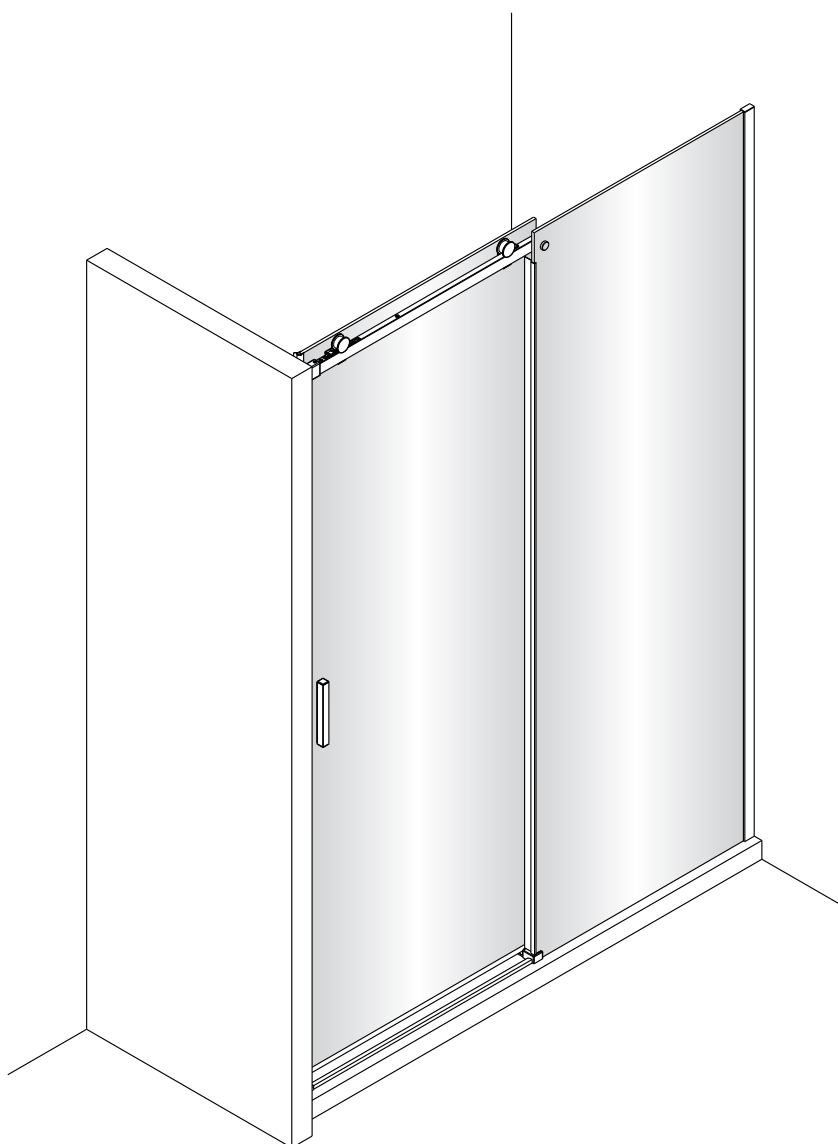




STOSOWAĆ ŚRODKI TYLKO O ODCZYNIE OBOJĘTNYM

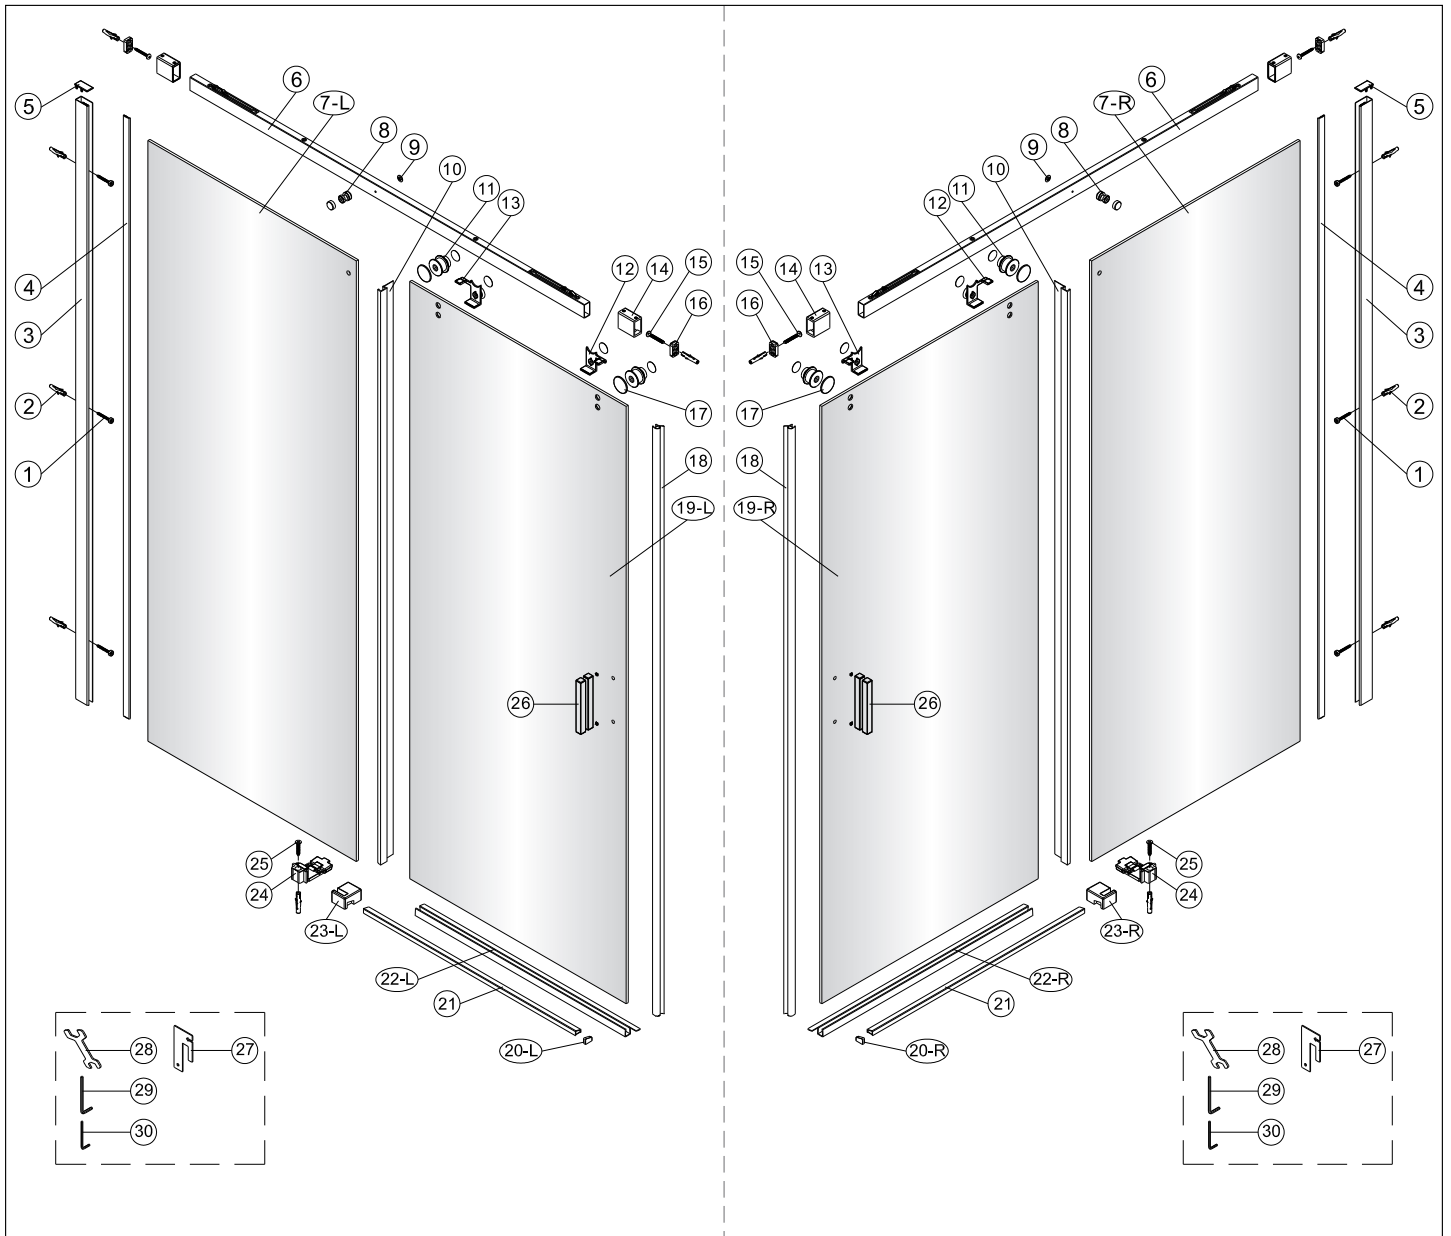









1 x3 ST4X40	2 x6	3	4	5 x1	1 x3 ST4X40	2 x6	3	4	5 x1
6 x1	7-L x1	8 x1	9 x1	10 x1	6 x1	7-R x1	8 x1	9 x1	10 x1
11 x2	12 x1	13 x1	14 x2	15 x2 ST4X40	11 x2	12 x1	13 x1	14 x2	15 x2 ST4X40
16 x2	17 x2	18 x1	19-L x1	20-L x1	16 x2	17 x2	18 x1	19-R x1	20-R x1
21 x1	22-L x1	23-L x1	24 x1	25 x1 ST4X30	21 x1	22-R x1	23-R x1	24 x1	25 x1 ST4X30
26 x1	27 x1	28 x1	29 x2 4mm	30 x1 2.5mm	26 x1	27 x1	28 x1	29 x2 4mm	30 x1 2.5mm

















3

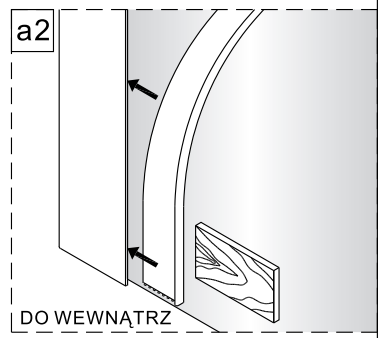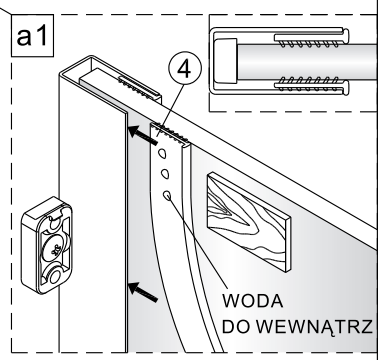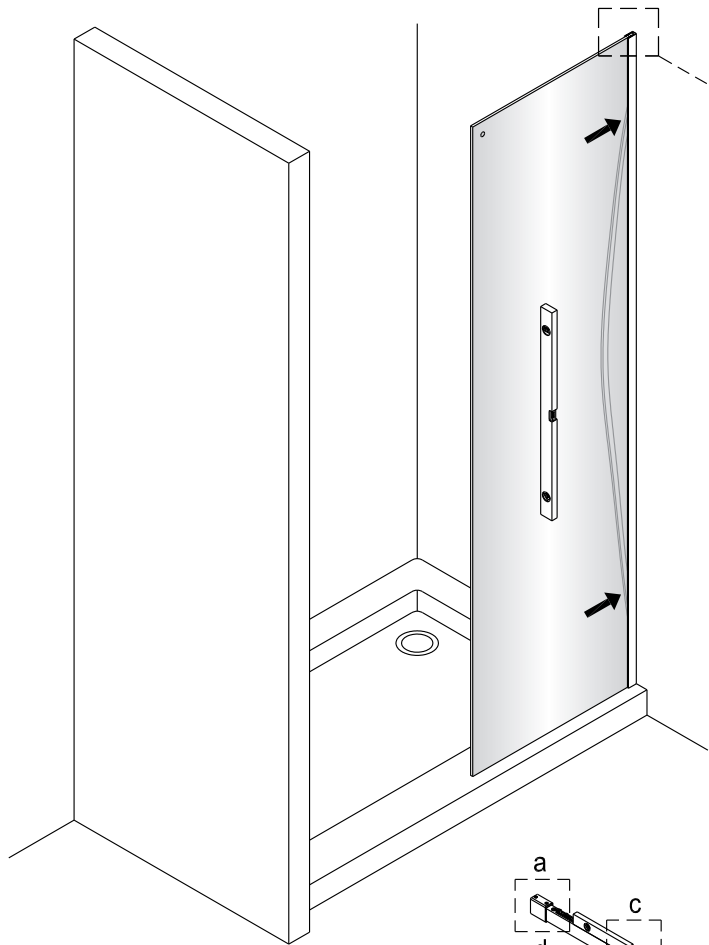


4

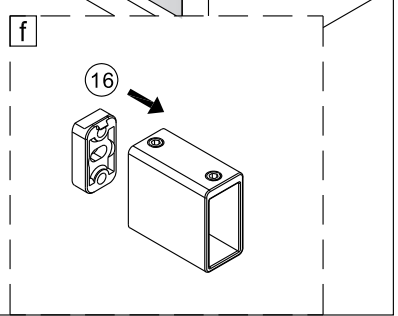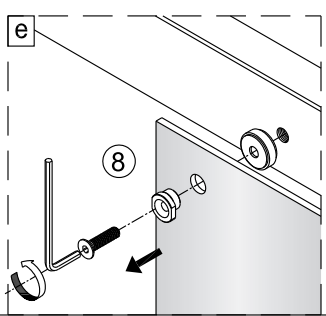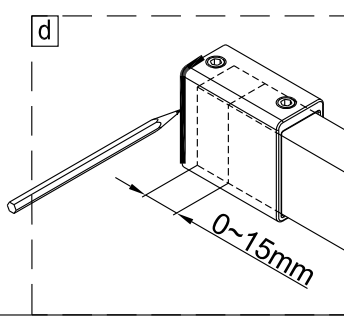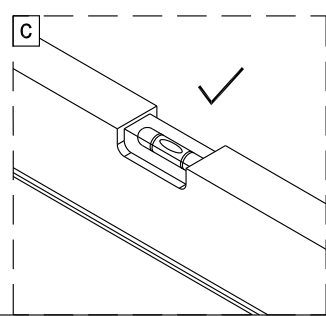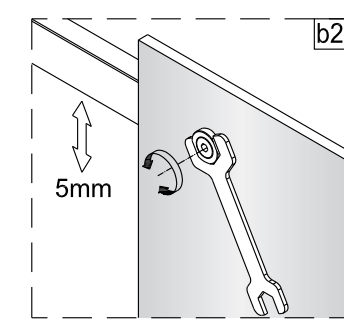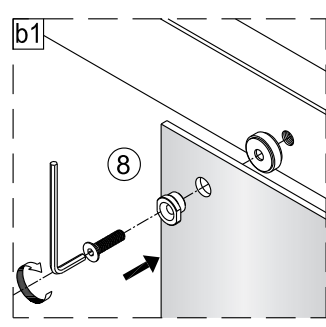
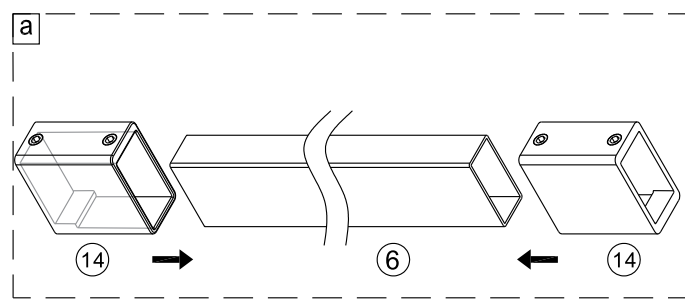
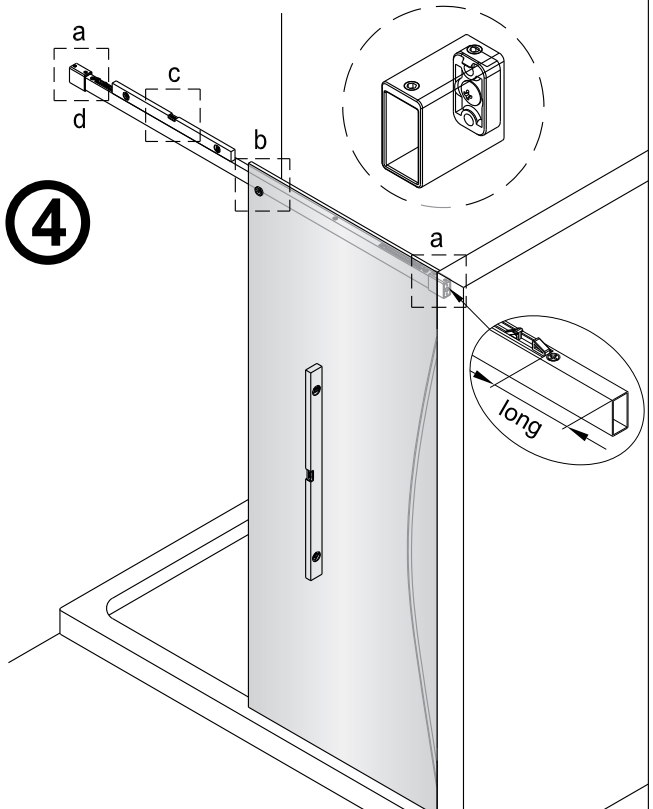


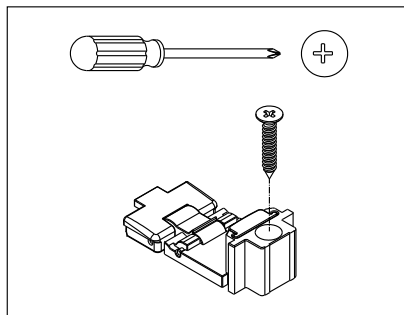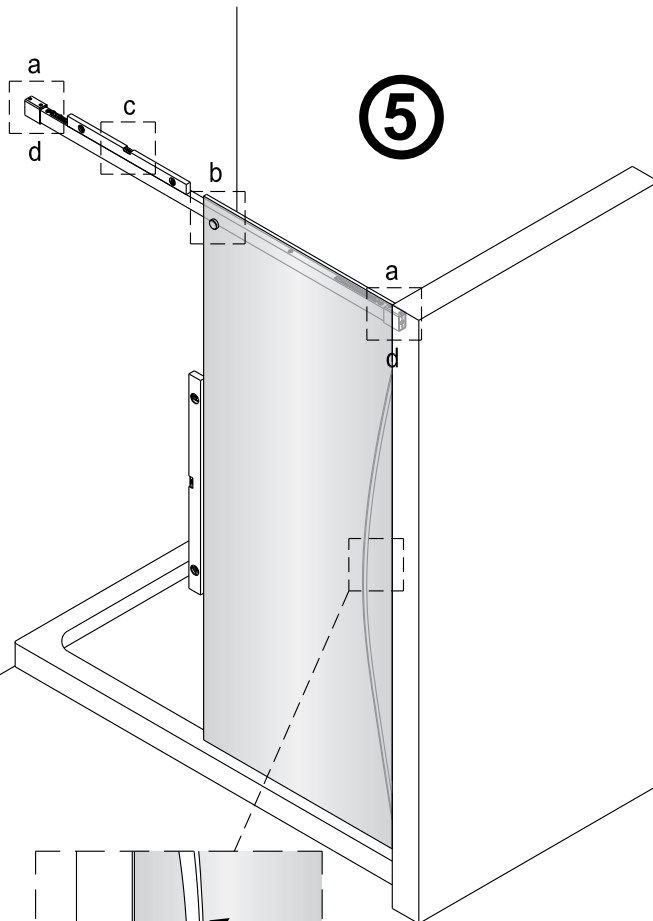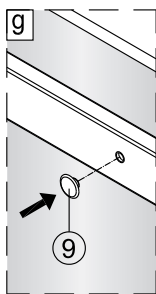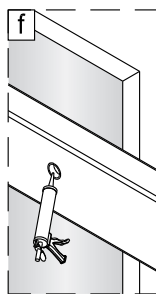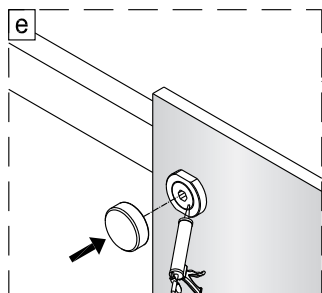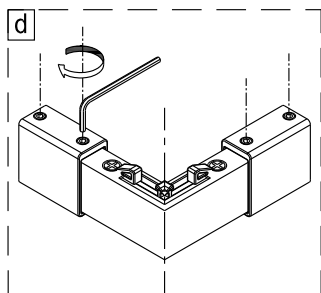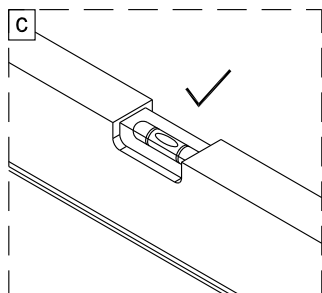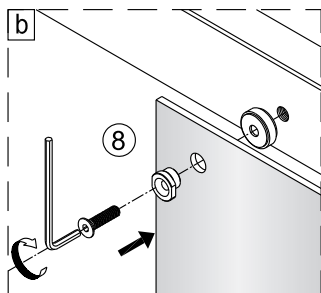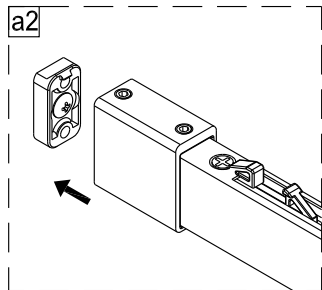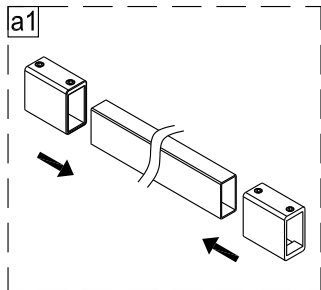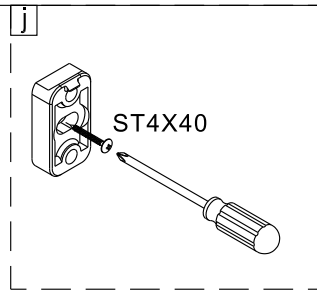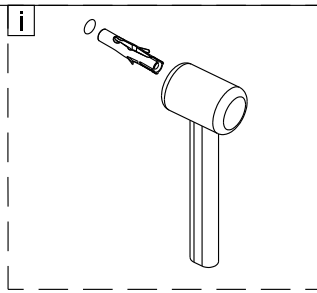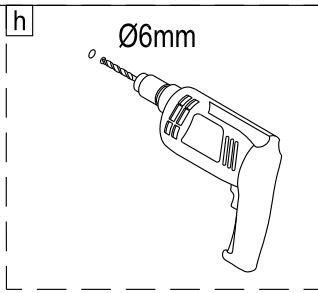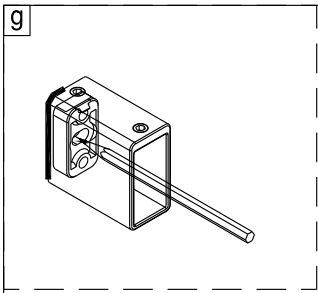


P6a

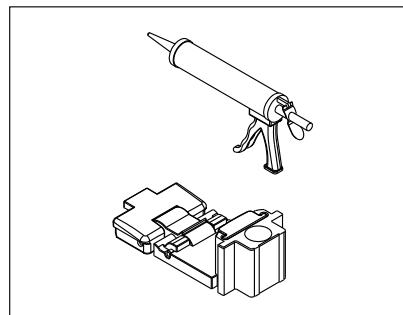




P6b

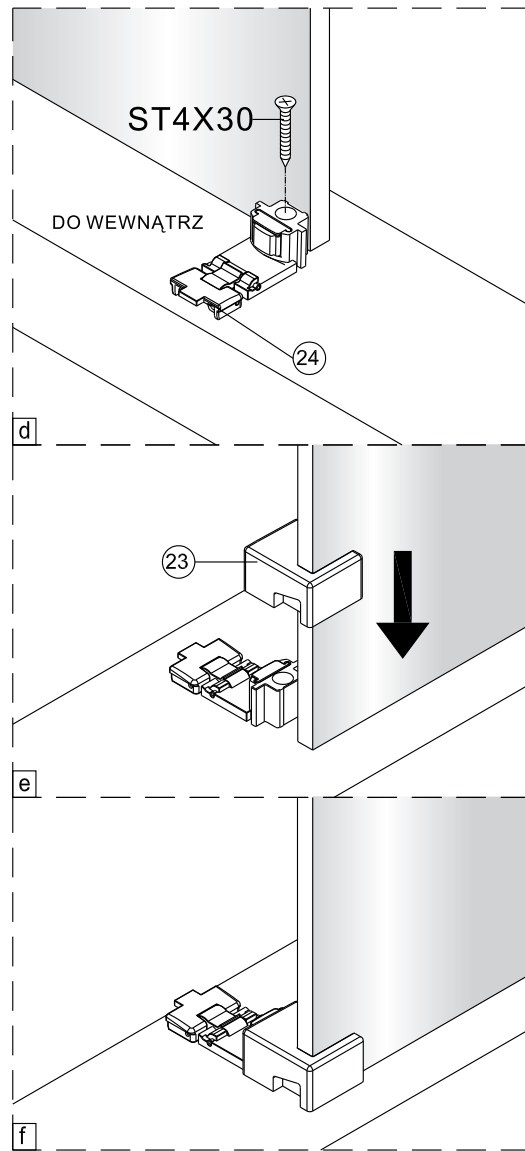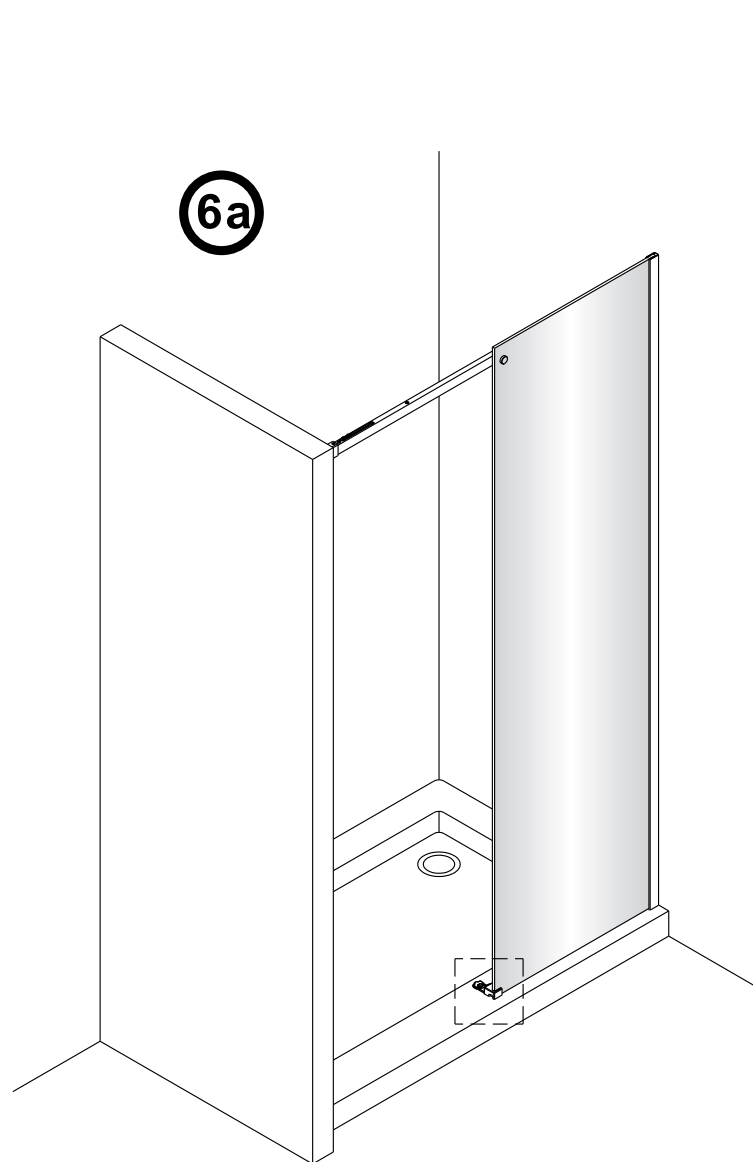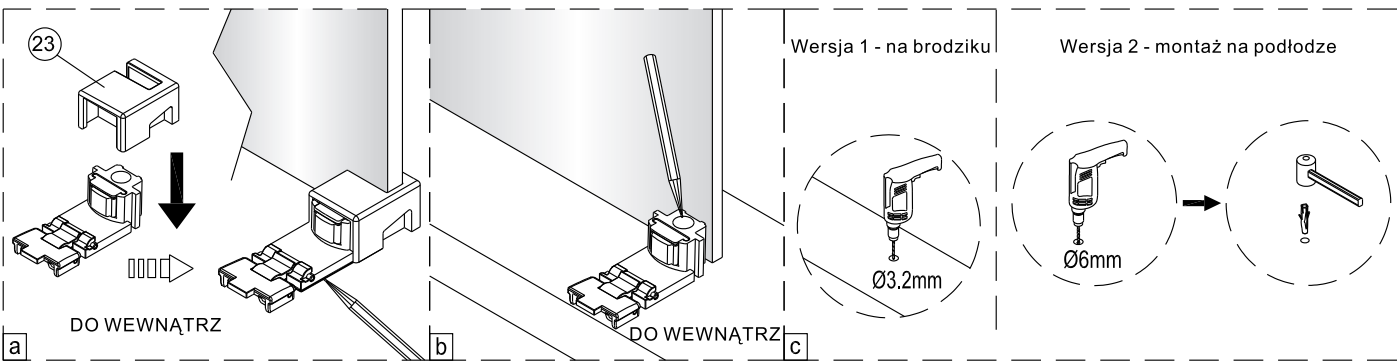

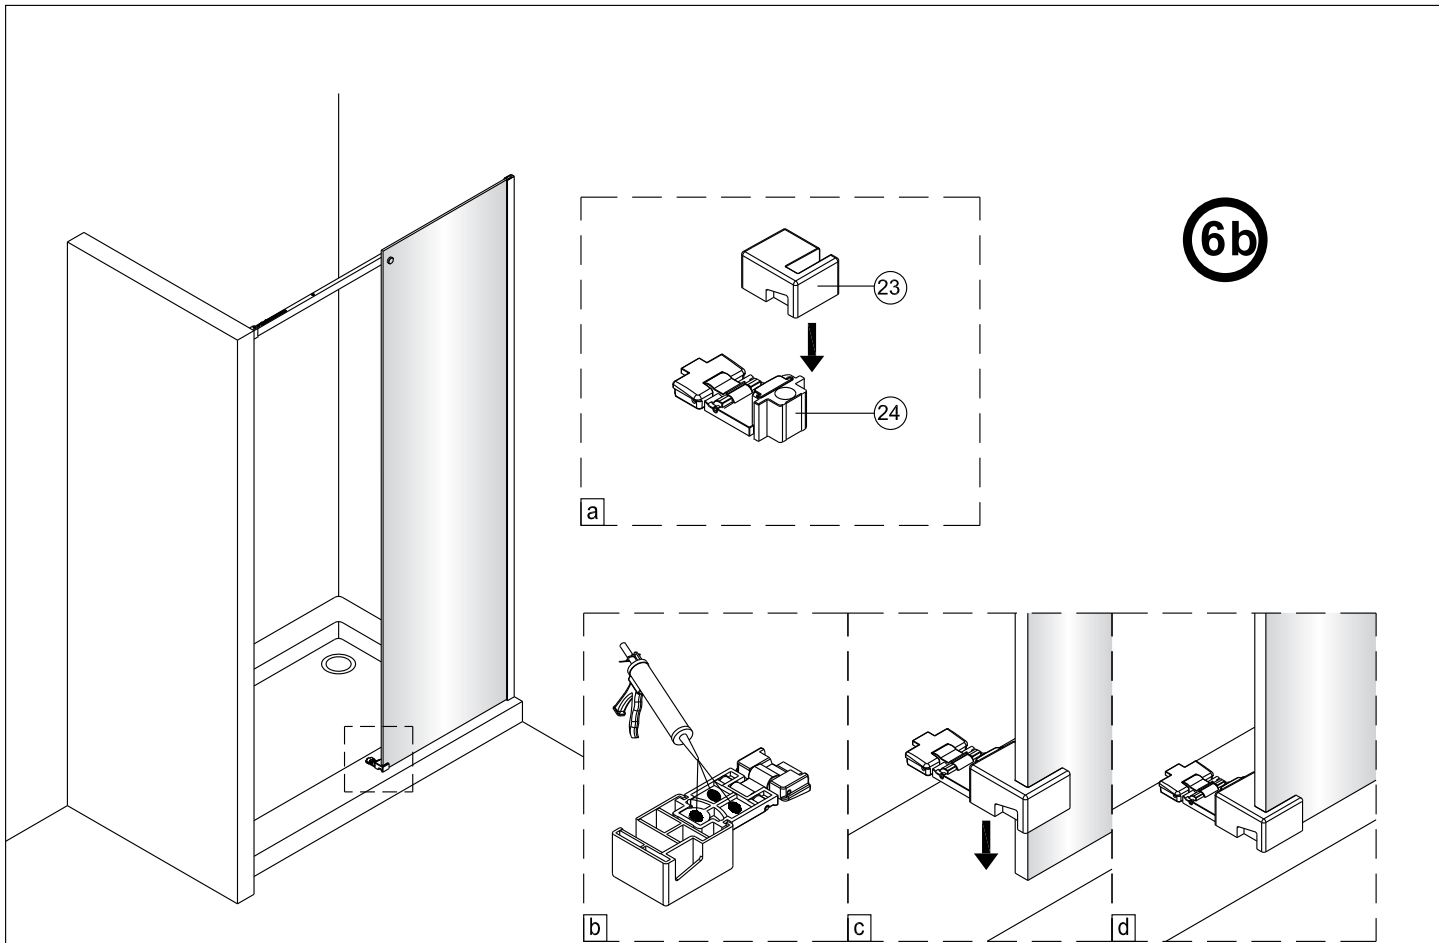


**7**

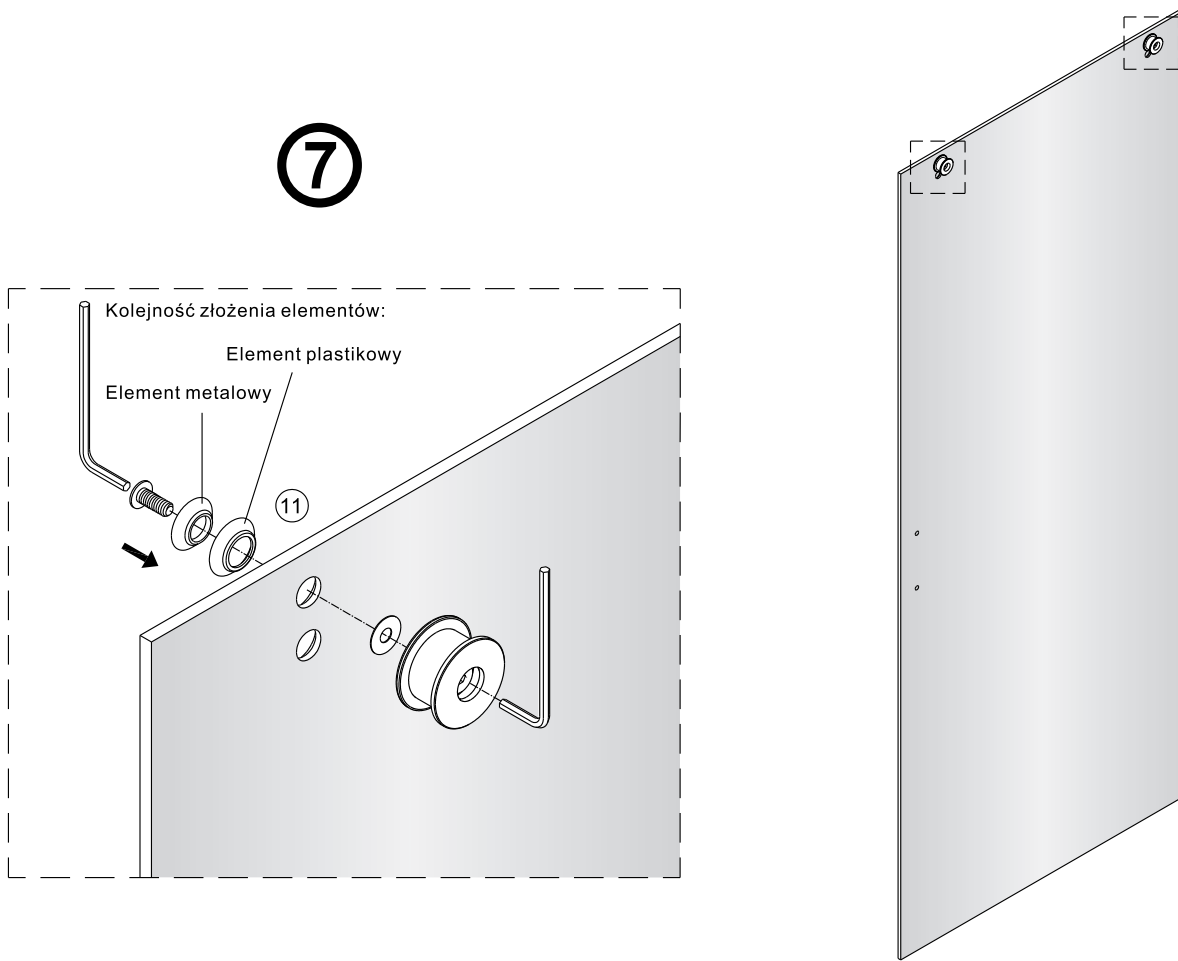

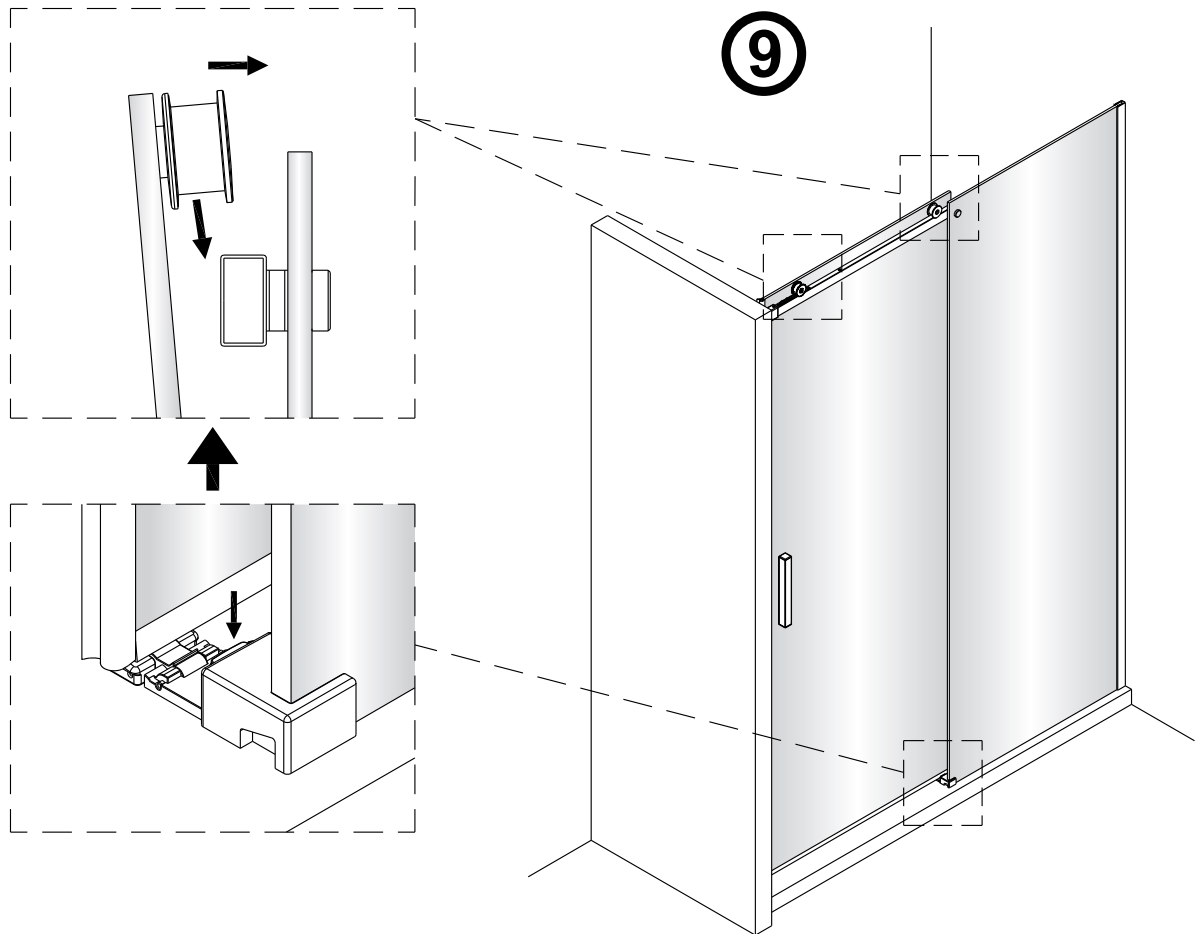
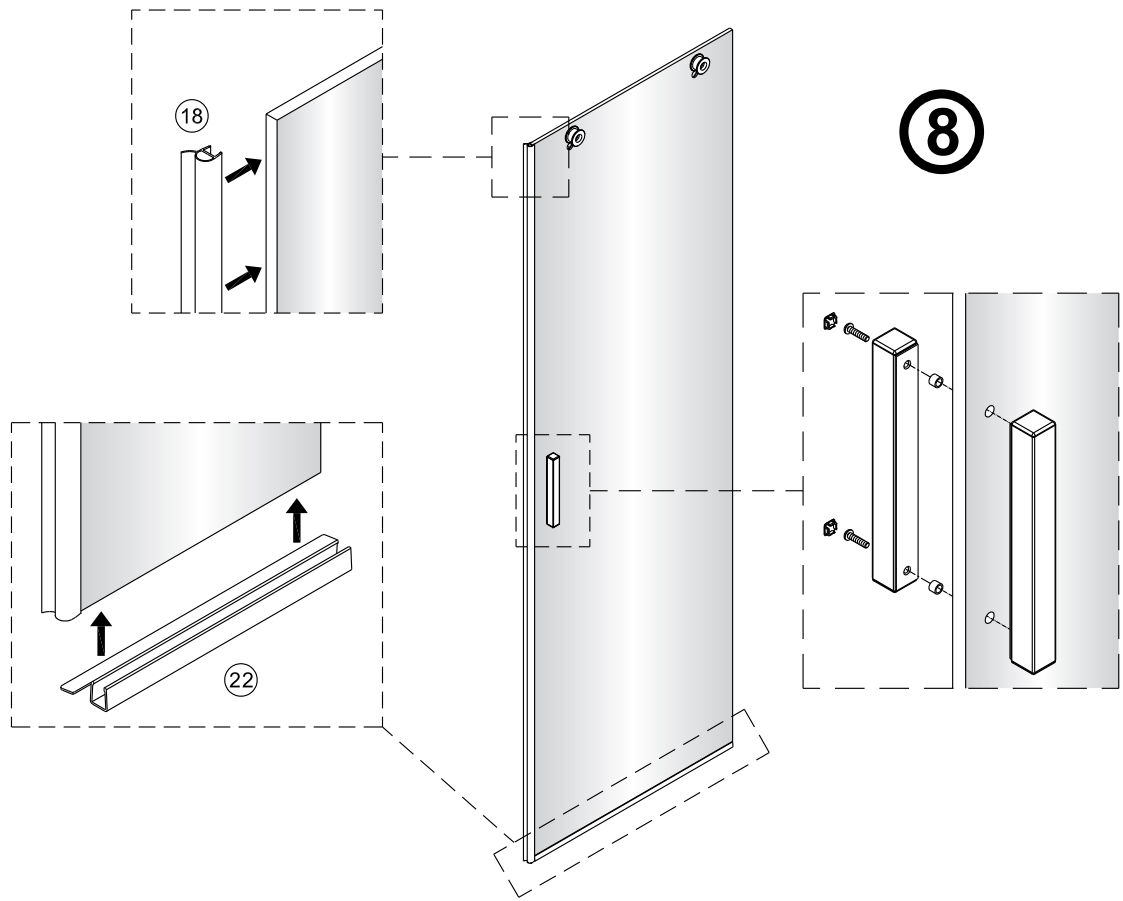





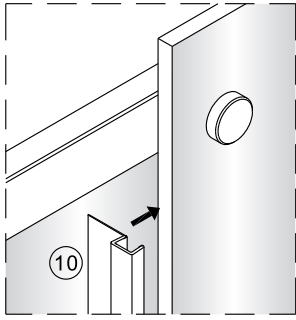












10

10

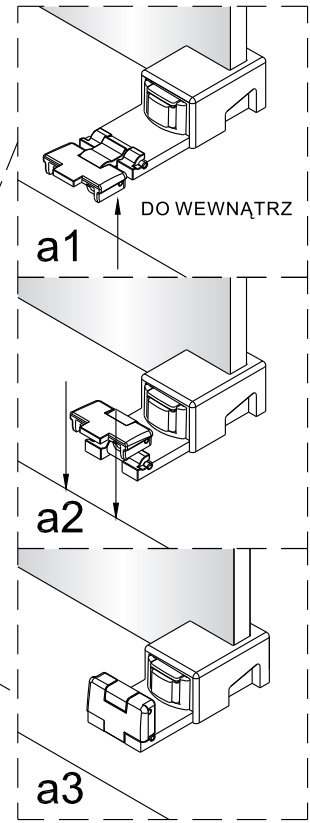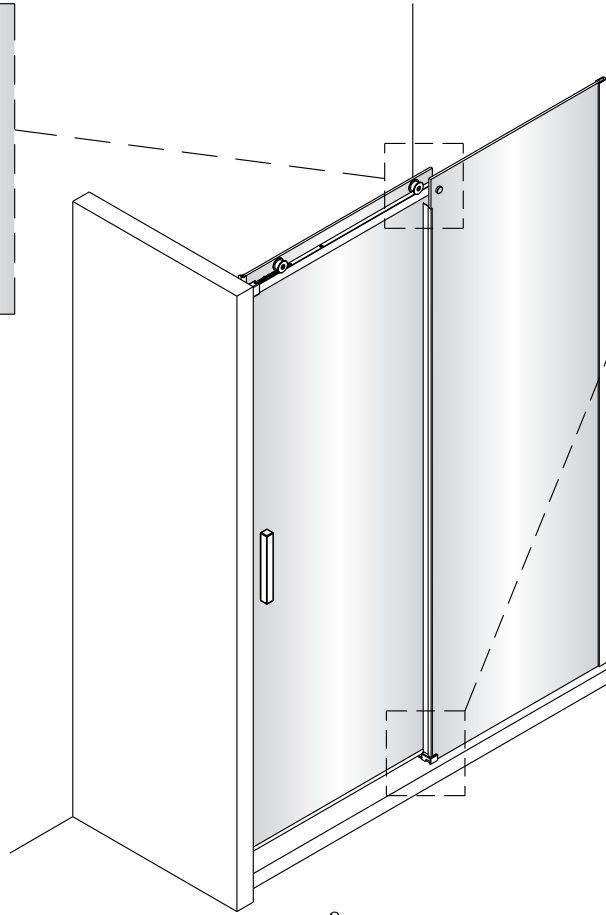


11


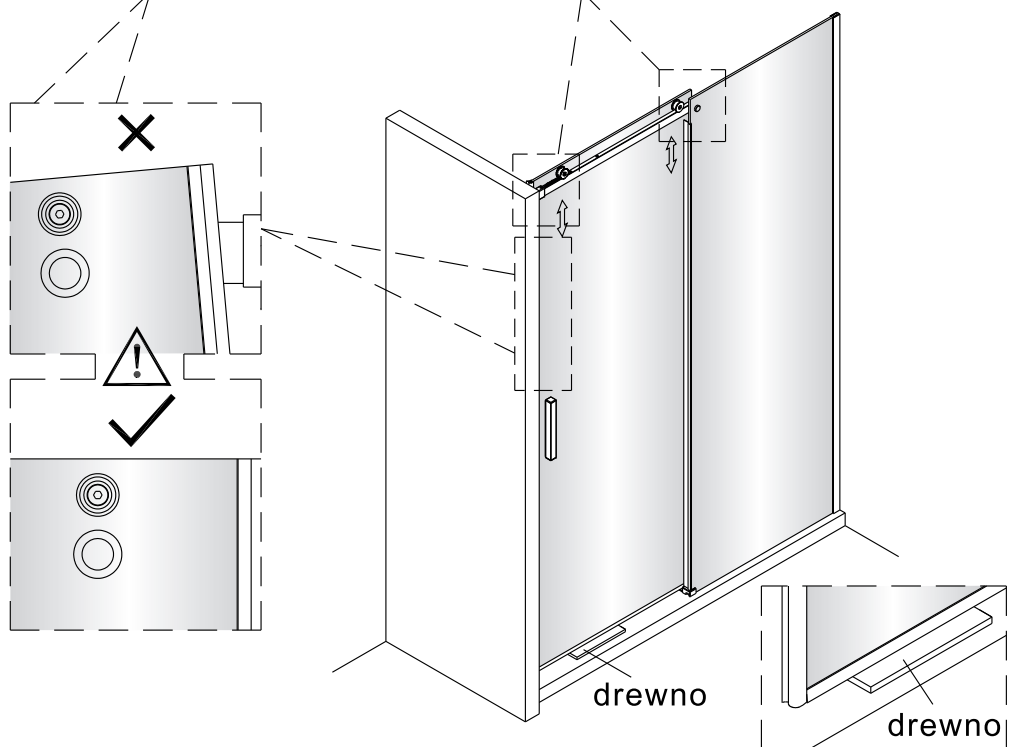
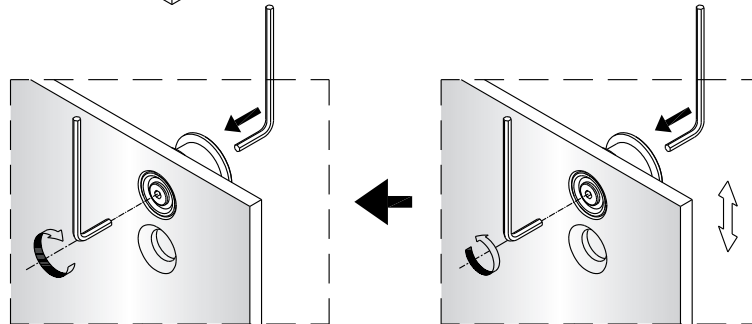


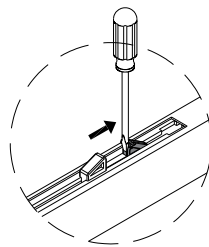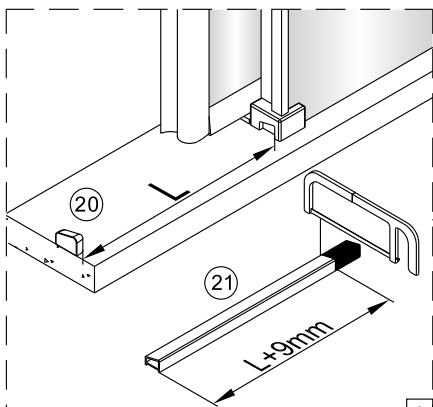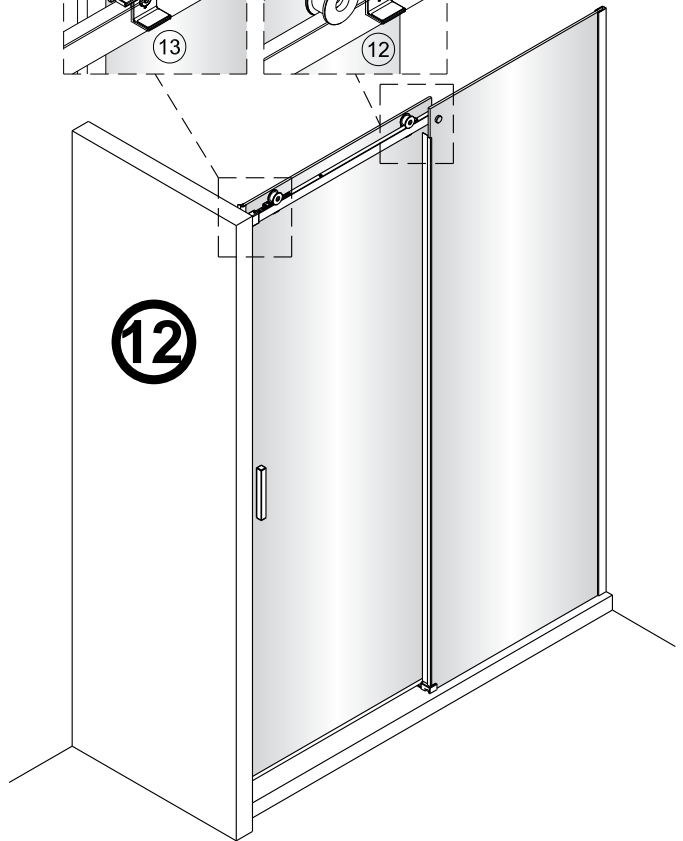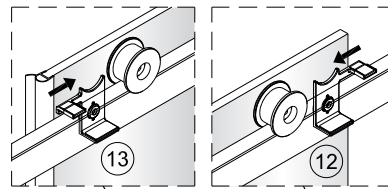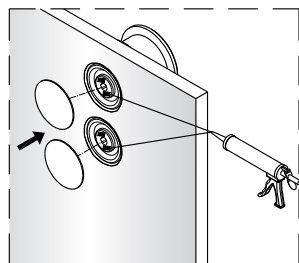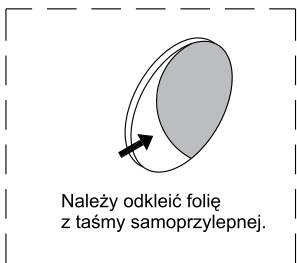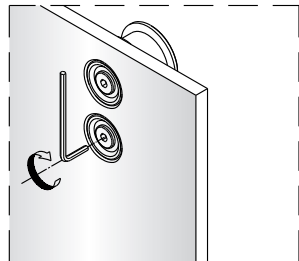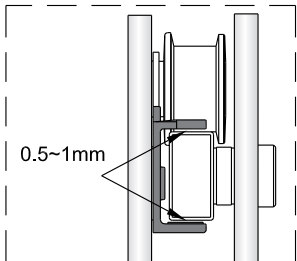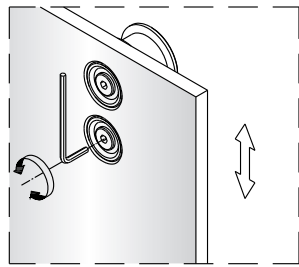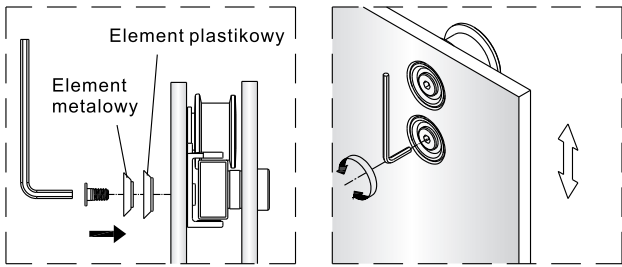

13

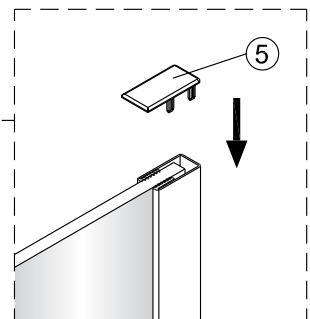

Należy odkleić folię z taśmy samoprzylepnej.

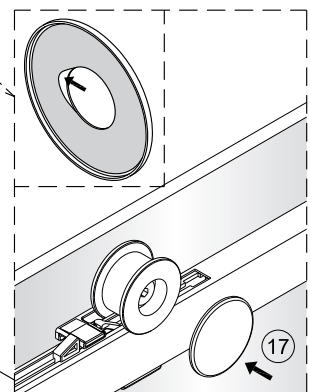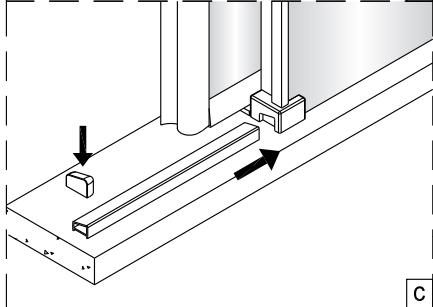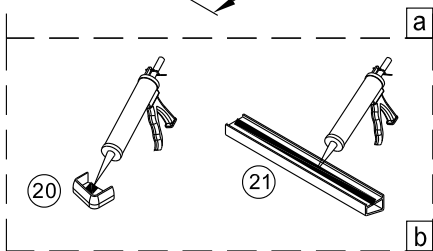

14

