




PL Instrukcja montażu
EN Installation instructions
DE Montageanleitung

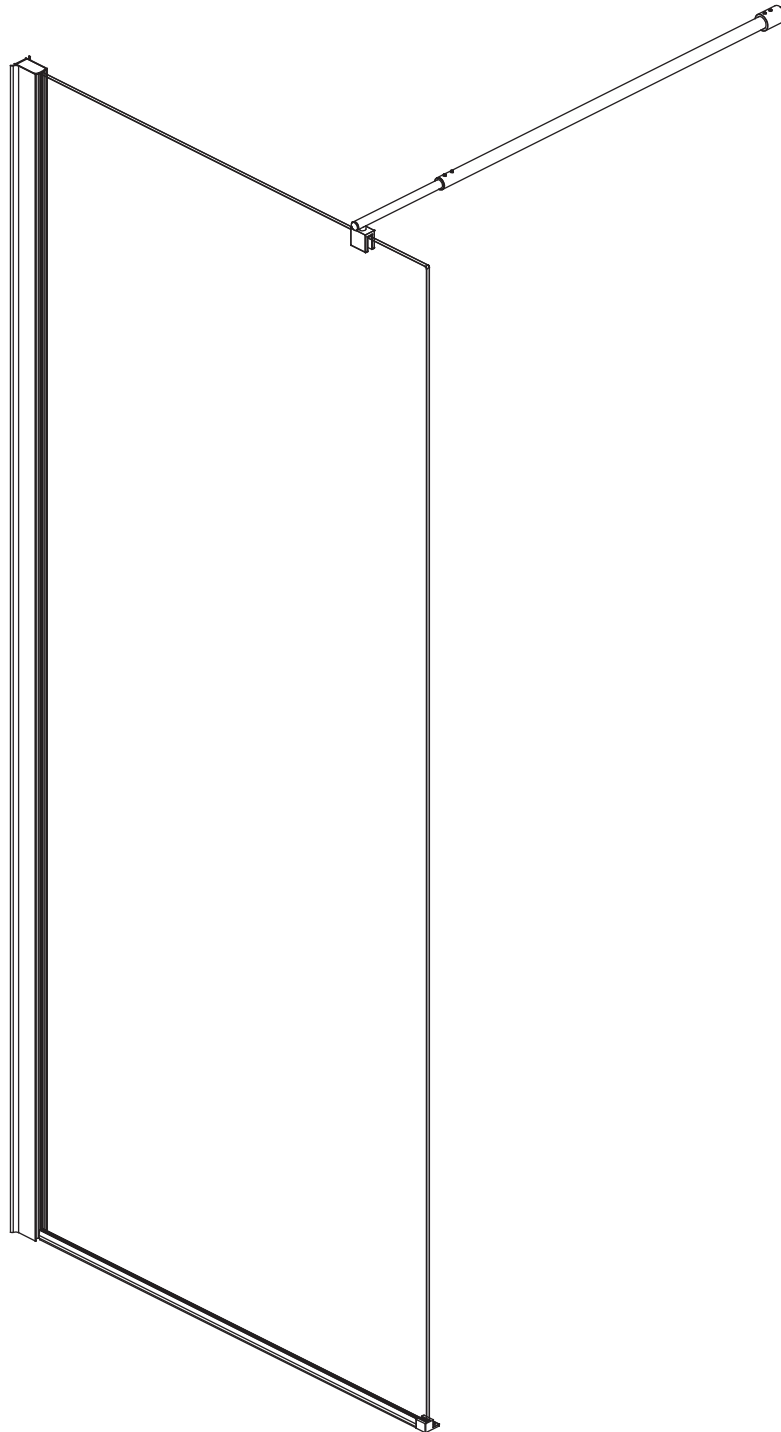











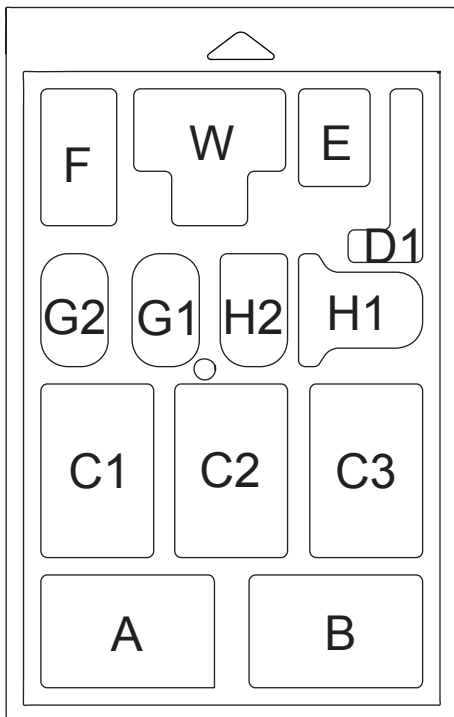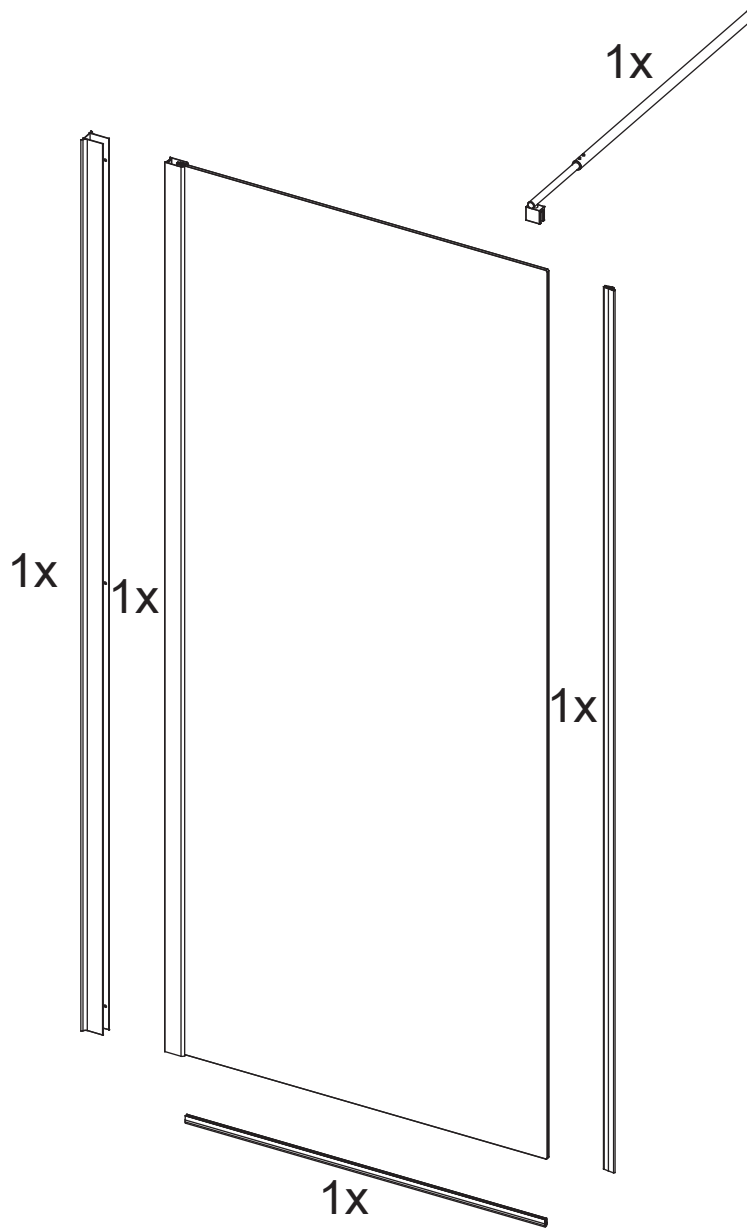


FR Instructions de montage
CZ Montážní návod
SK Návod na montáž



HU Szerelési utasítások
RO Instrucțiuni de instalare
RU Инструкция по сборке

KTS WALK-IN






| | | | | | |
|----|----|---|----|----|--|
| A | x4 |  ST4X30 | G1 | x1 |  |
| H1 | x2 |  ST4X30 | H2 | x1 |  |
| B | x6 |  | C2 | x1 |  |
| E | x1 |  | G2 | x3 |  ST3.5X9.5 |
| F | x1 |  | C1 | x3 |  |
| C3 | x1 |  | W | x1 |  |
| C3 | x1 |  | D1 | x1 |  Ø2.8 mm |
| | | | D1 | x1 |  |

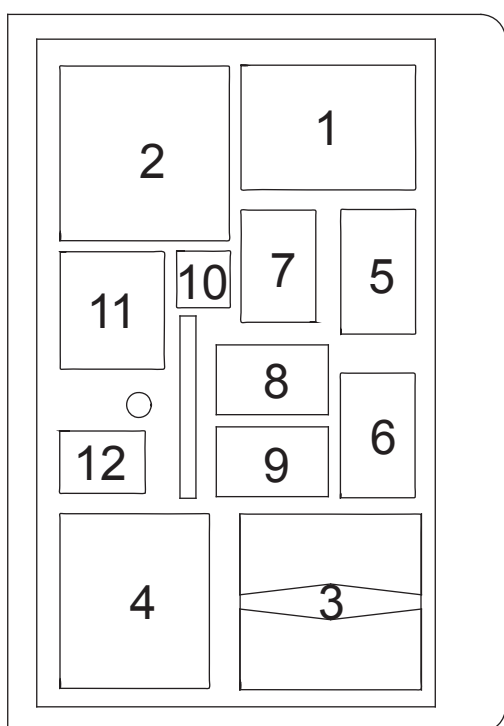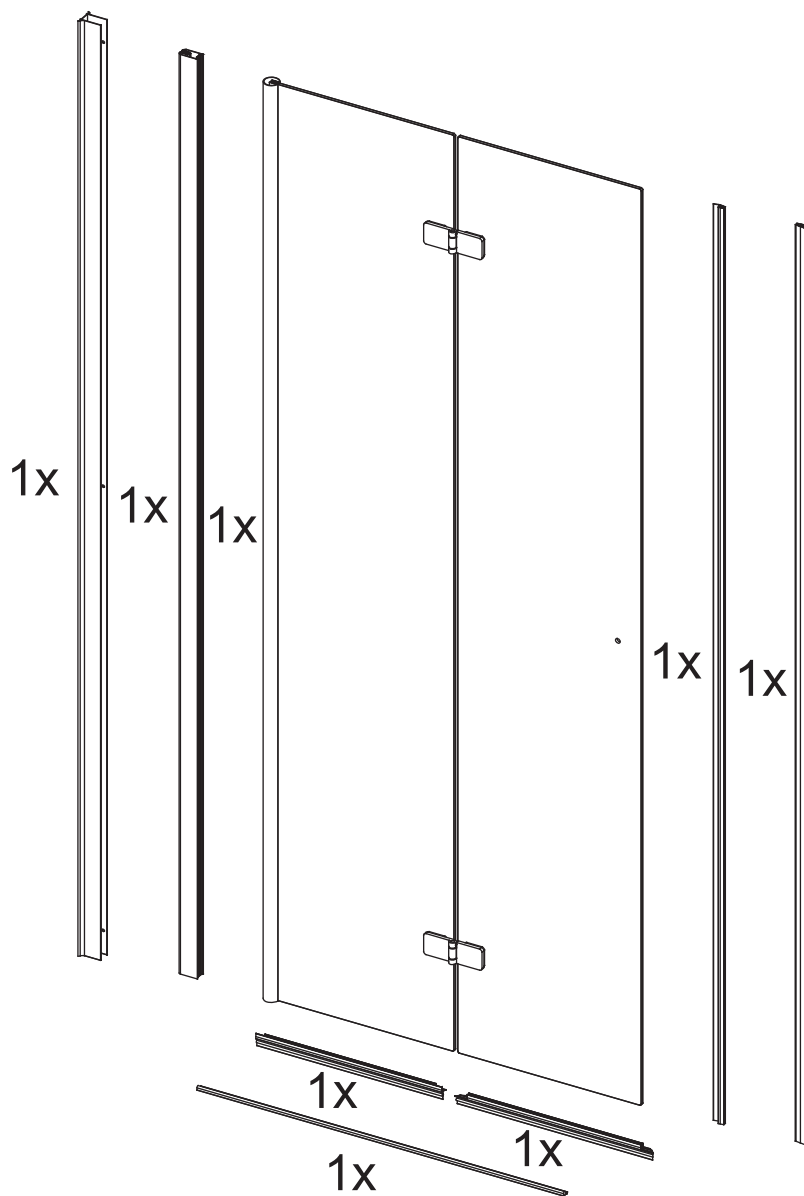

| | | | | | |
|---|----|--|----|----|--|
| 1 | x1 | | 6 | x4 | |
| 1 | x1 | | 7 | x2 | |
| 2 | x1 | | 8 | x3 | |
| 2 | x1 | | 9 | x3 | |
| 3 | x1 | | 11 | x1 | |
| 3 | x1 | | 11 | x1 | |
| 3 | x1 | | 12 | x3 | |
| 4 | x1 | | | x1 | |
| 5 | x4 | | | | |




P5-P17

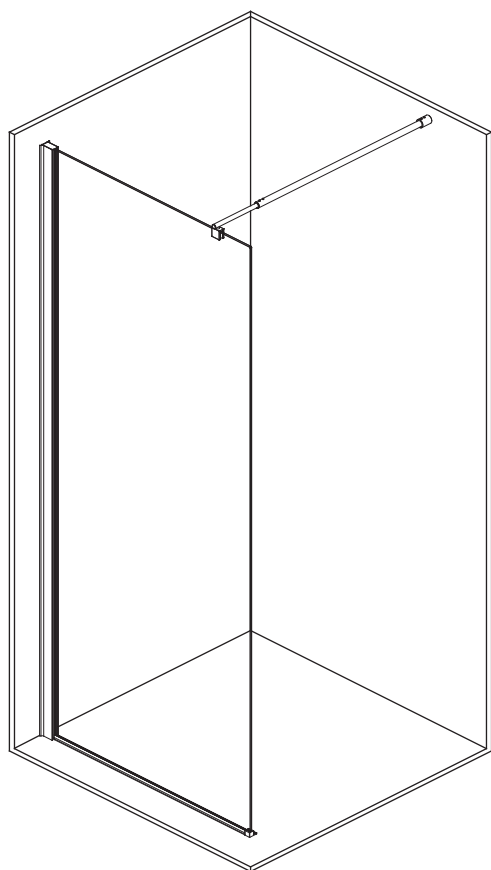


+




P18-P32

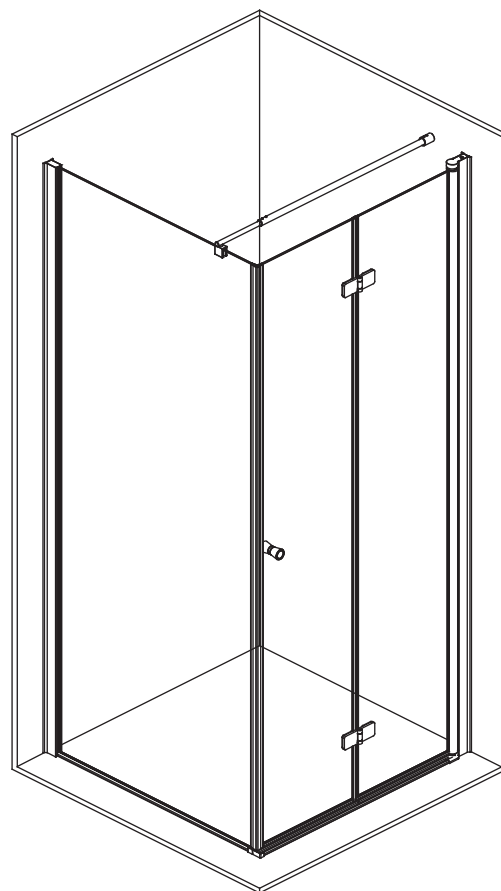

X2

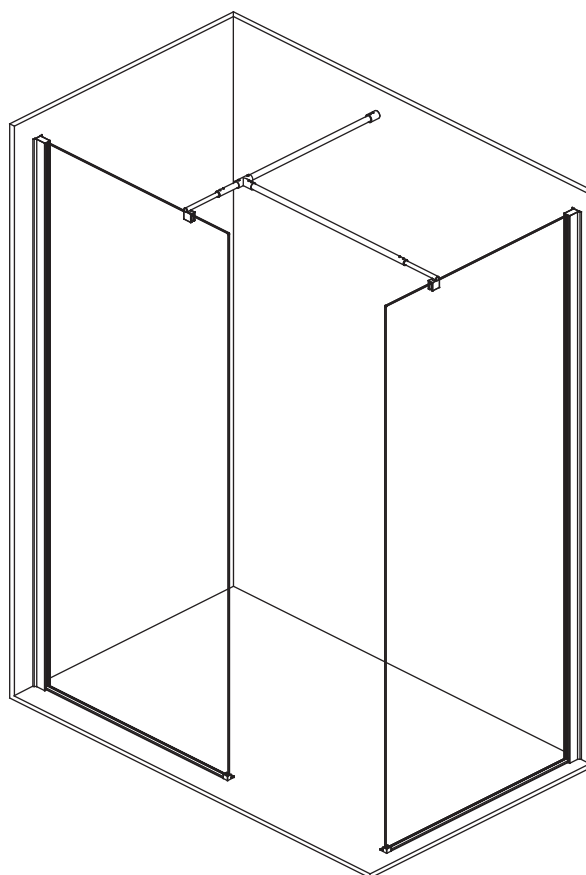

P33-P43

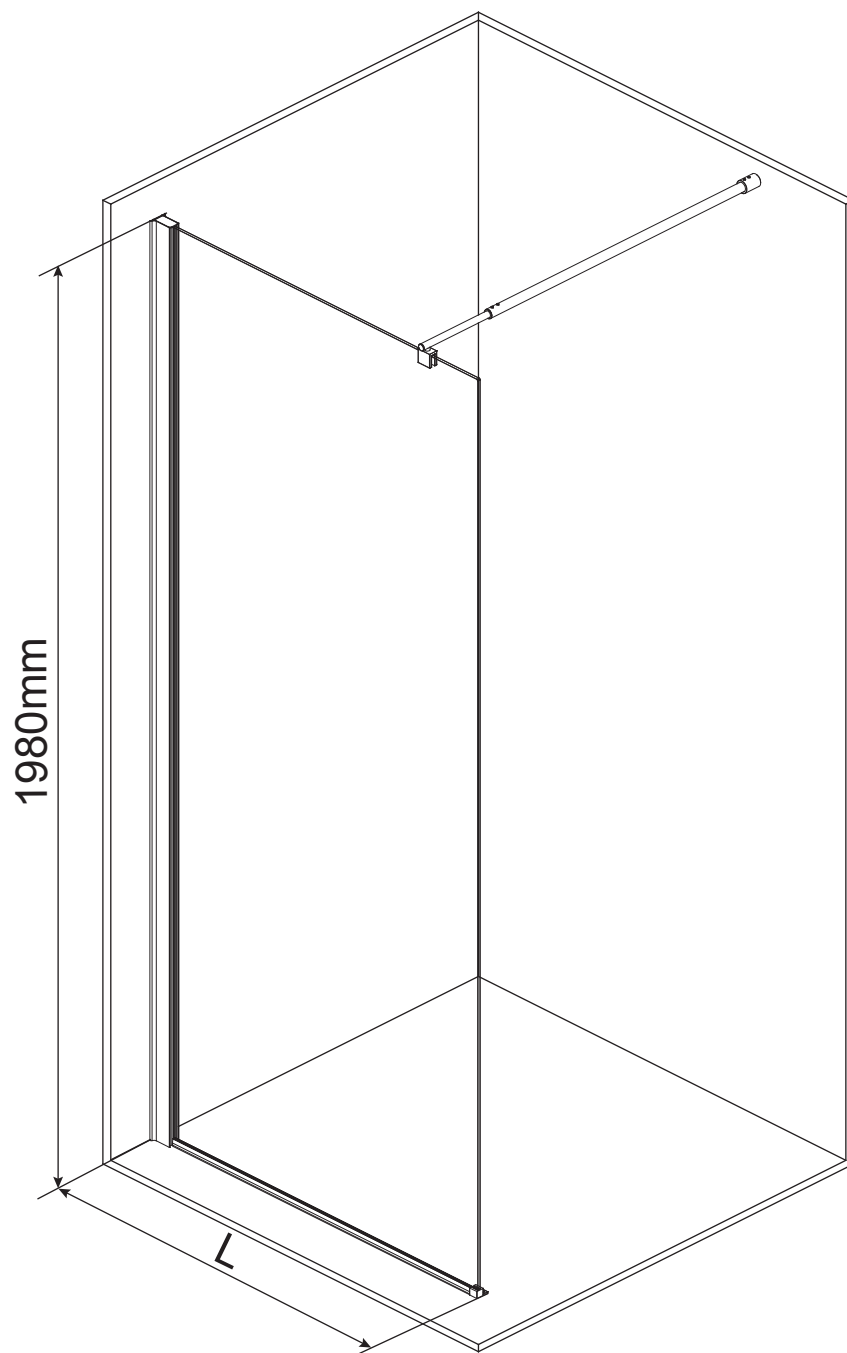


L:

800 750mm-770mm





900 850mm-870mm



1000 950mm-970mm






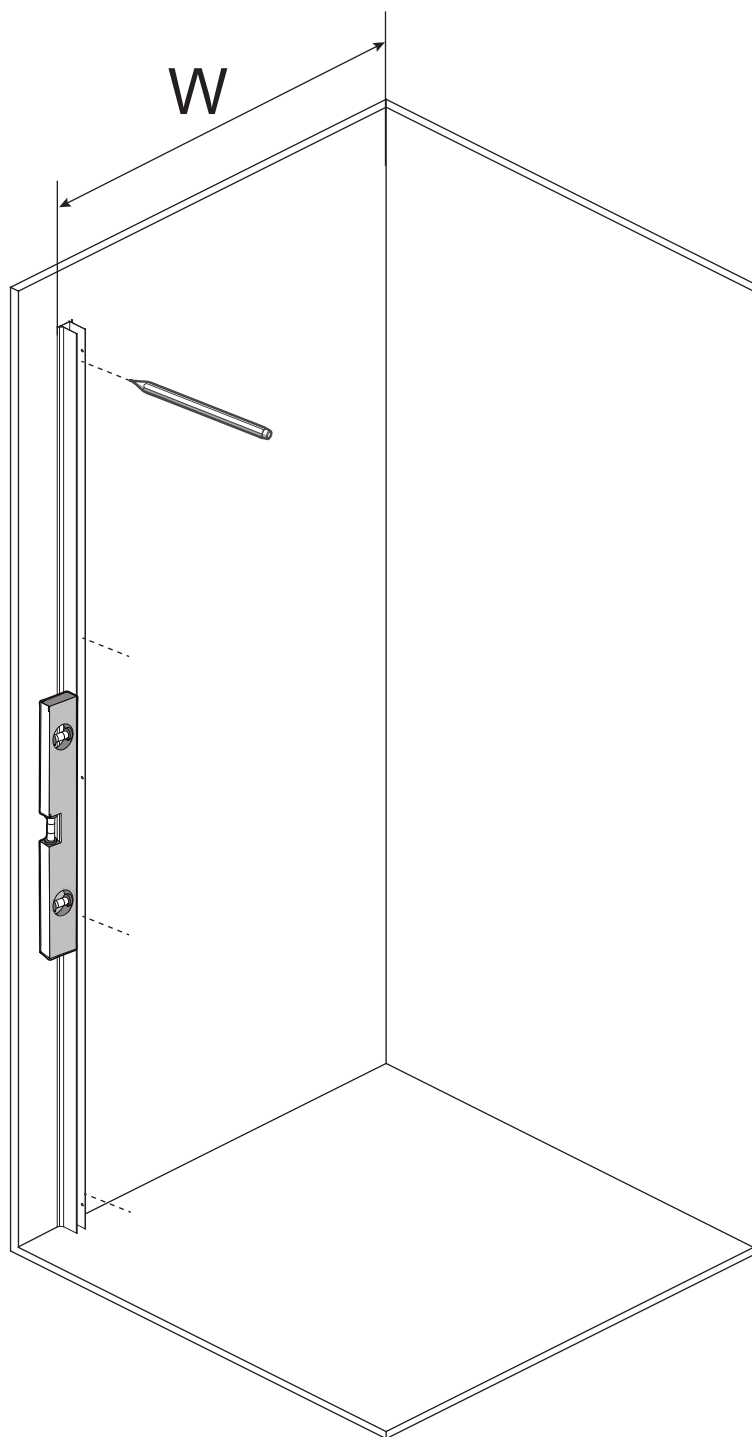



W:

| | |
|------|--------------|
| 800 | 785mm-800mm |
| 900 | 885mm-900mm |
| 1000 | 985mm-1000mm |

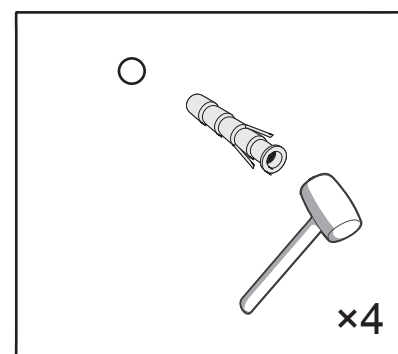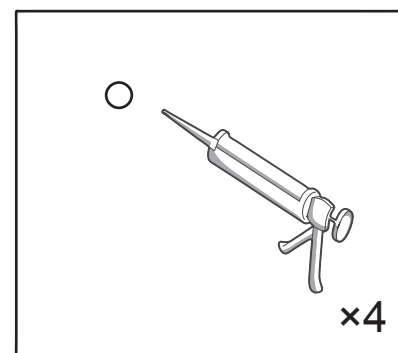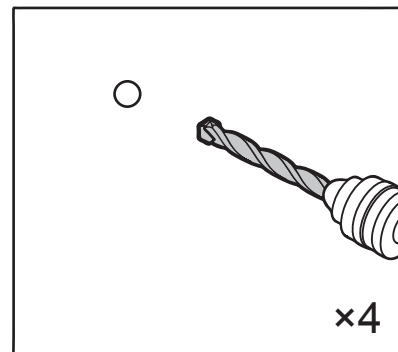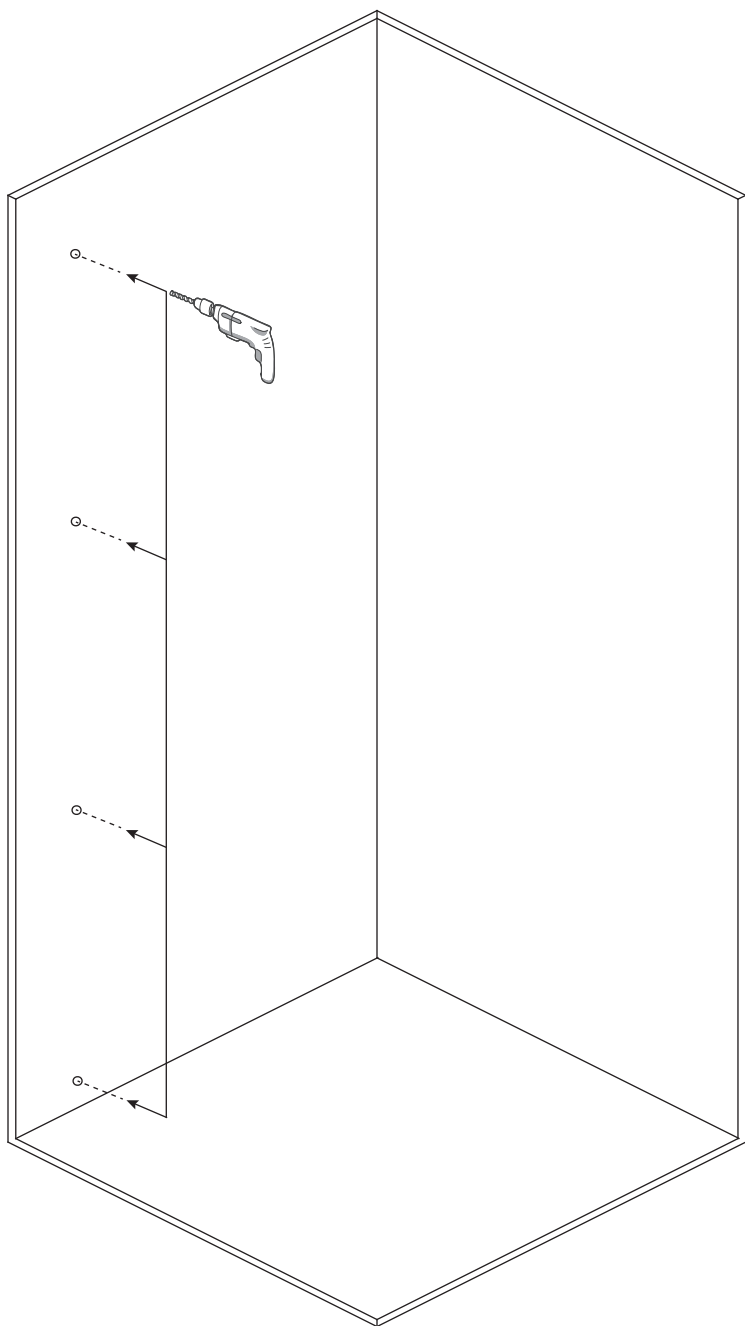


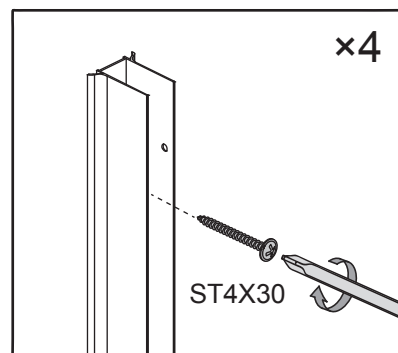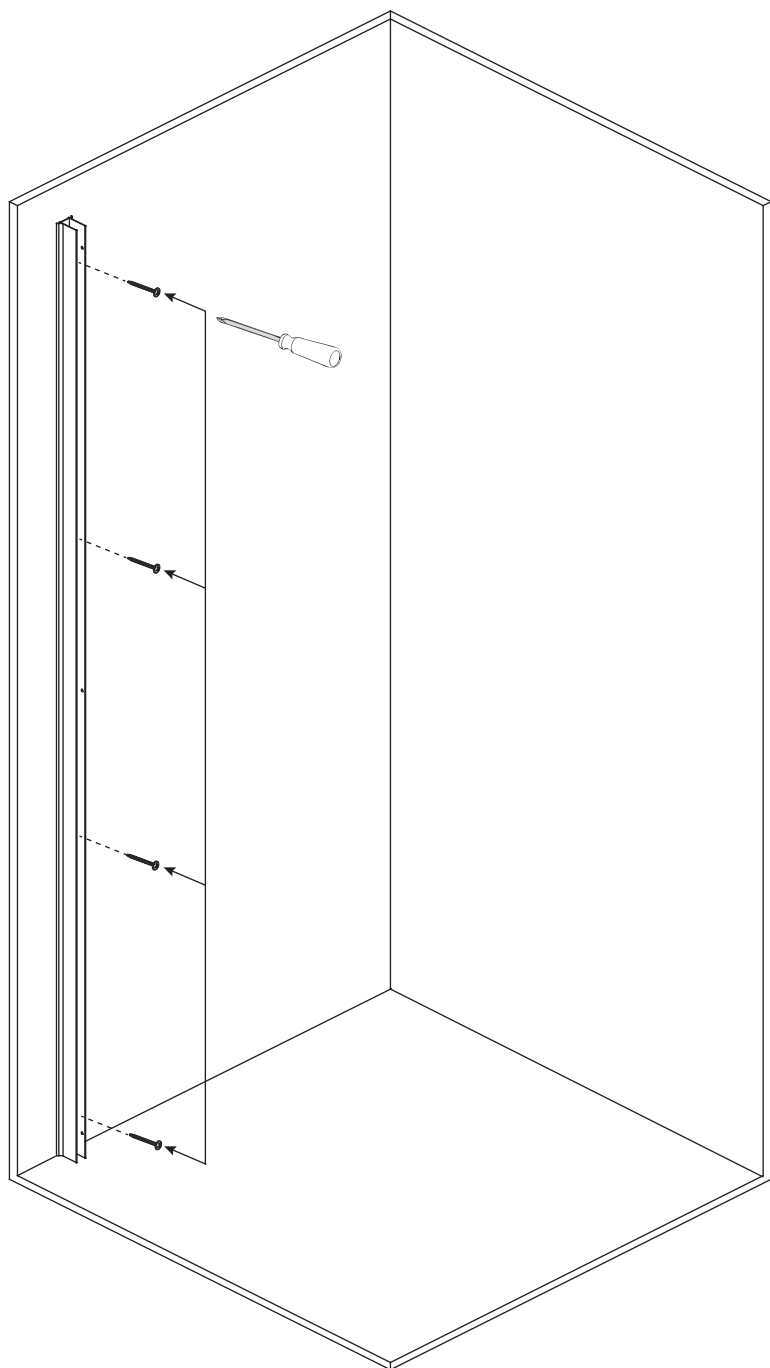

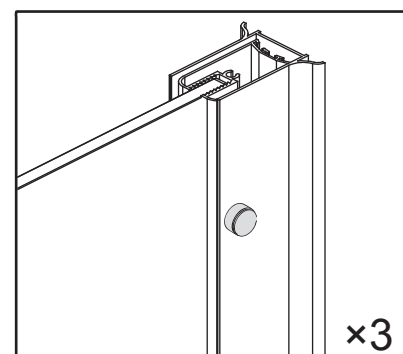
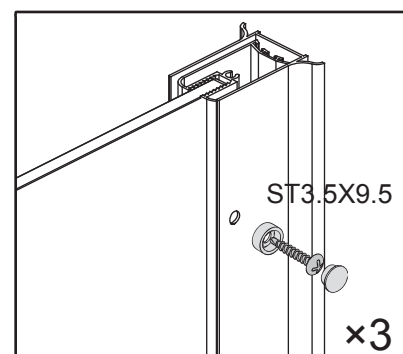
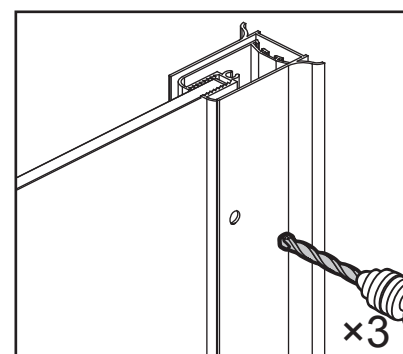
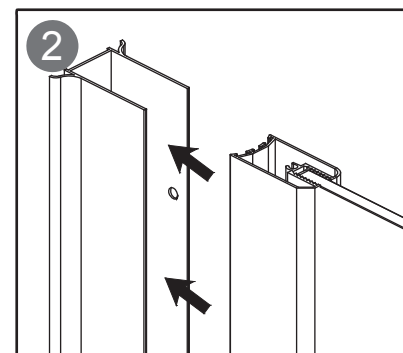
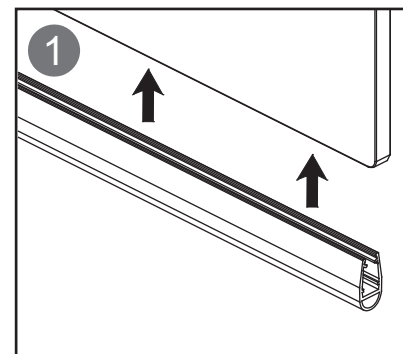
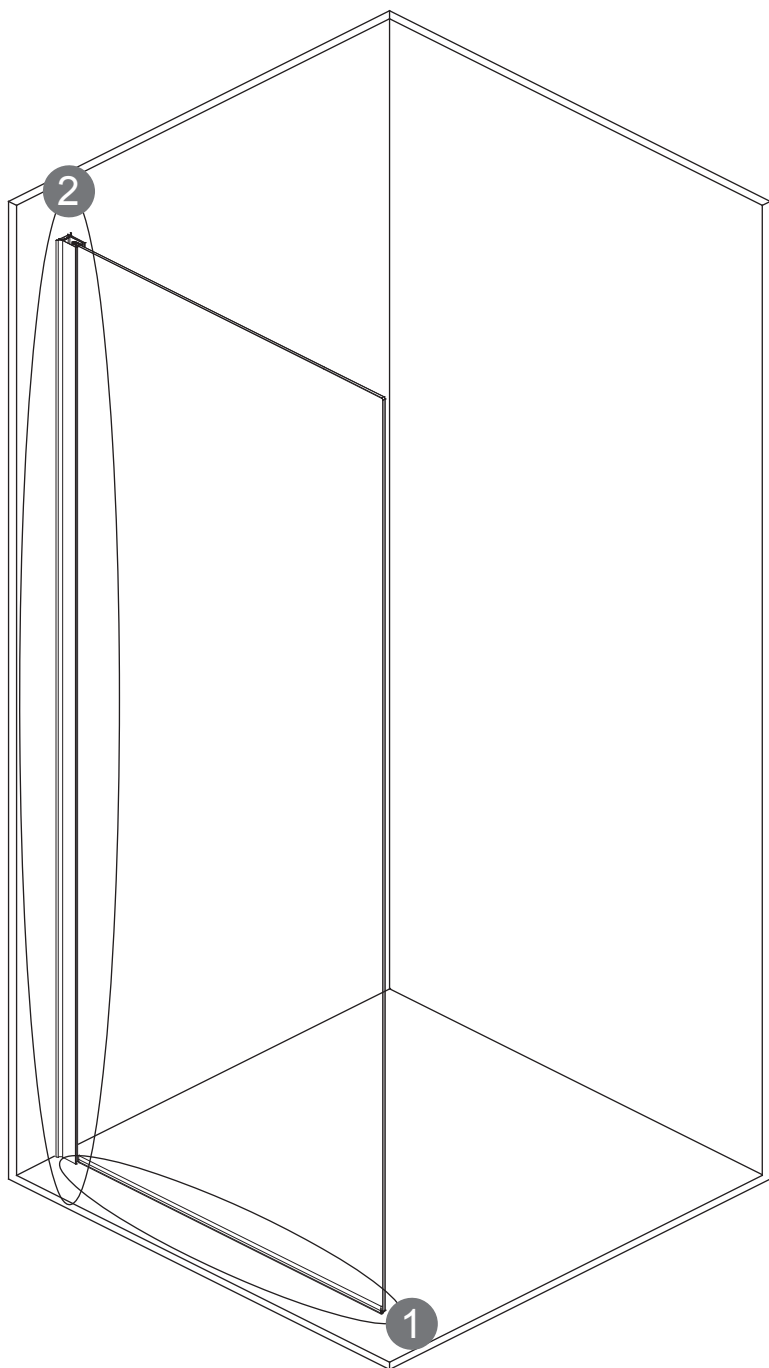








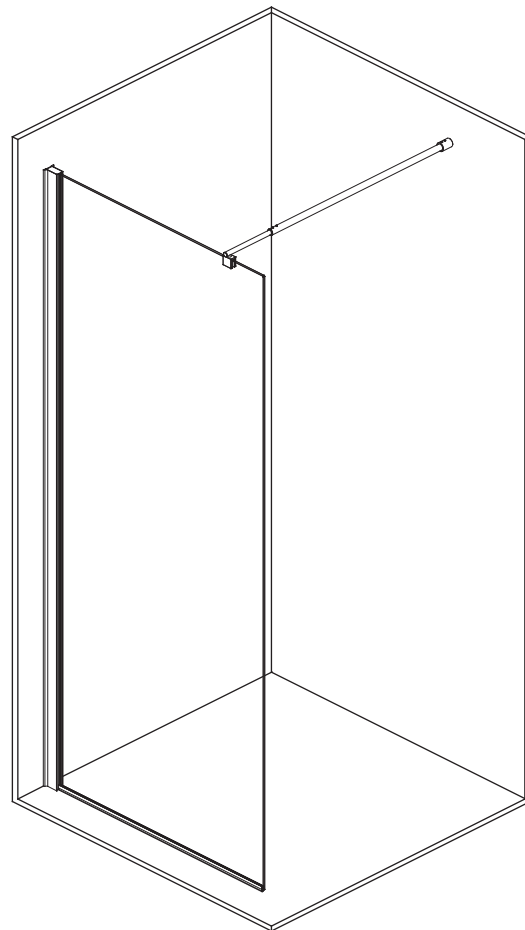








P11-P12








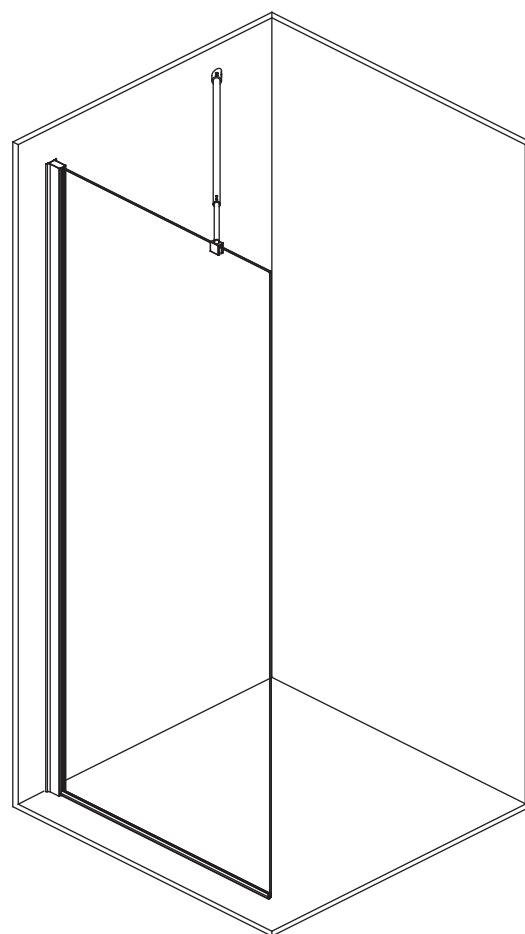







P13-P14

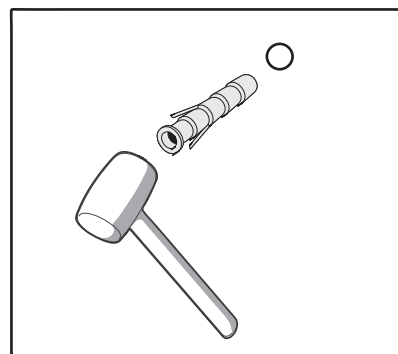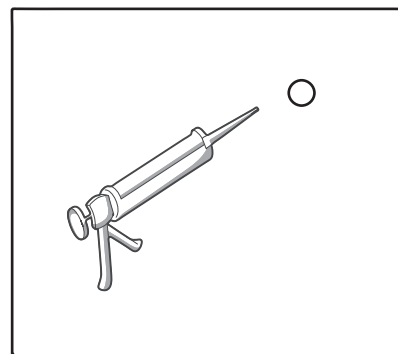
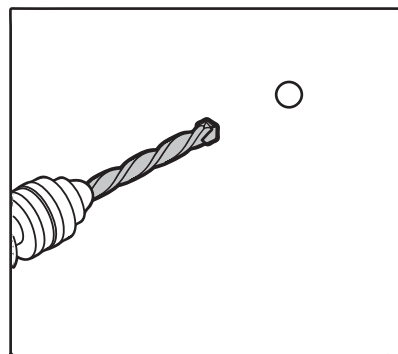
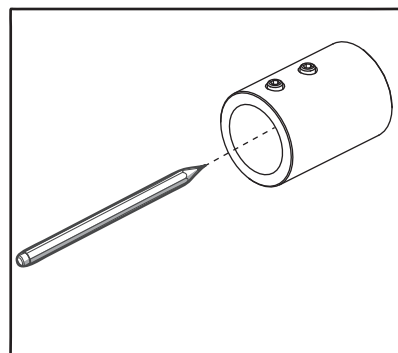
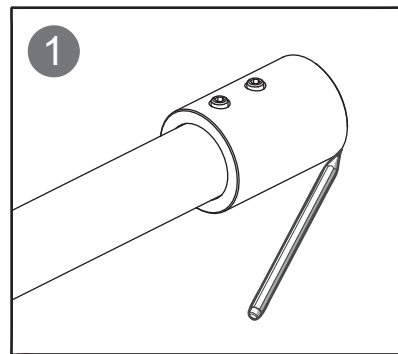
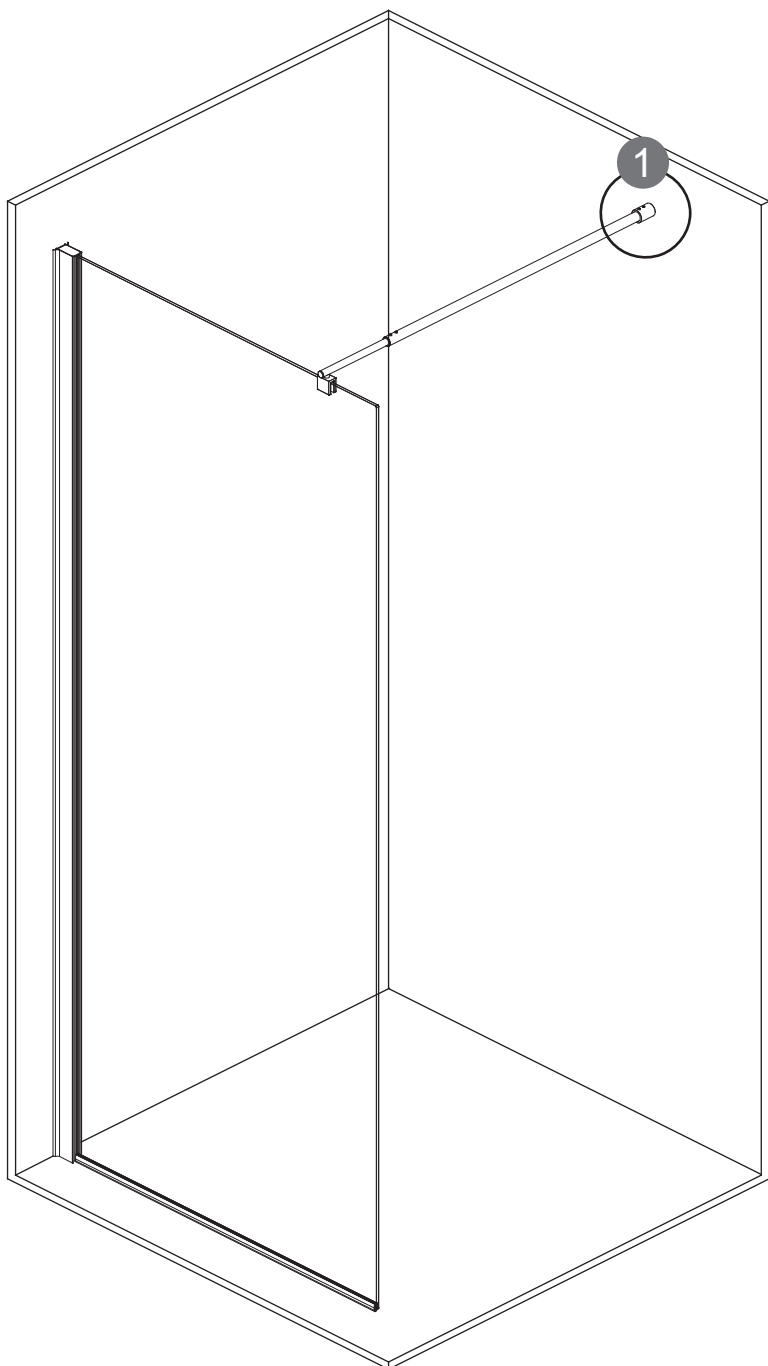


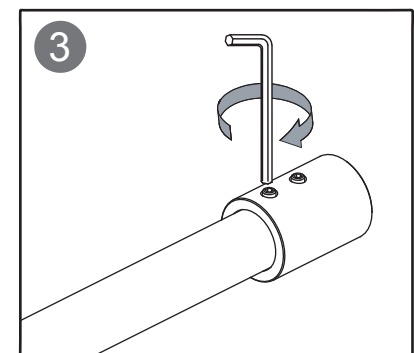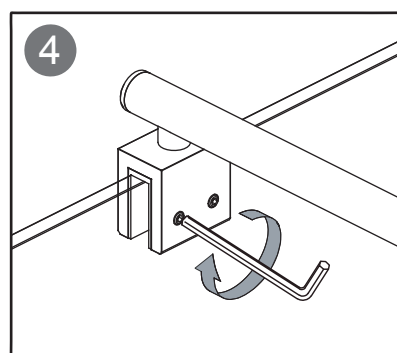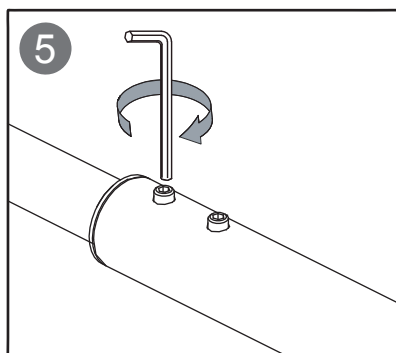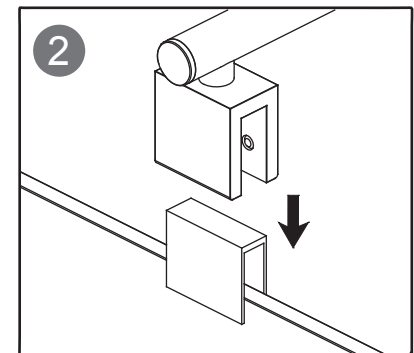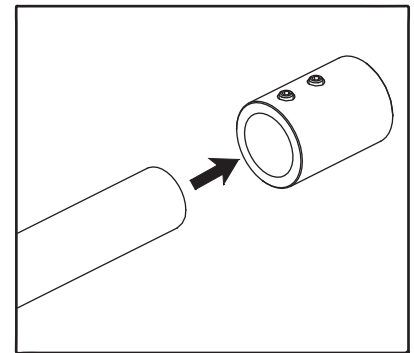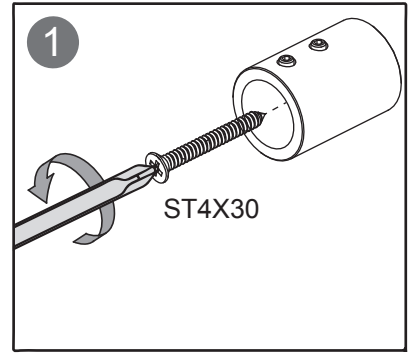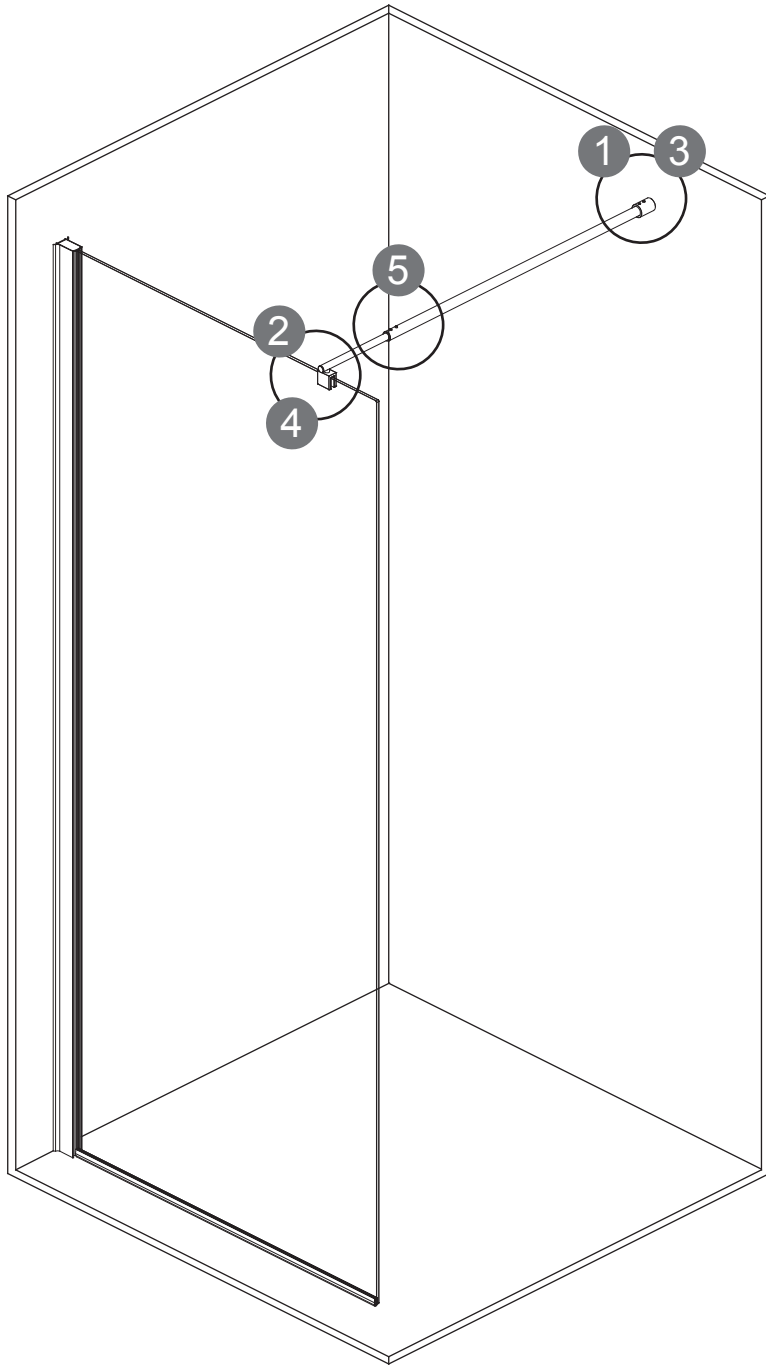


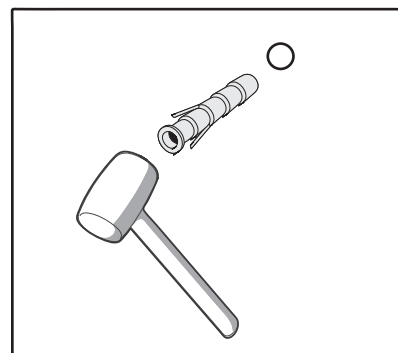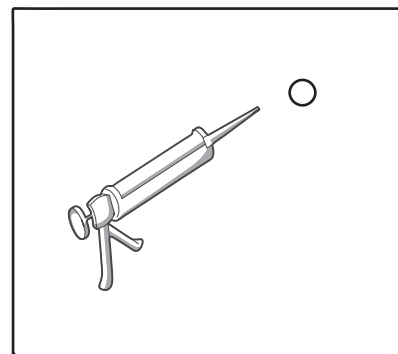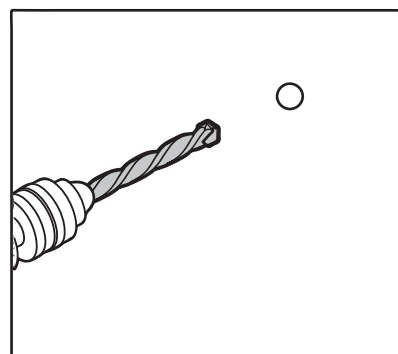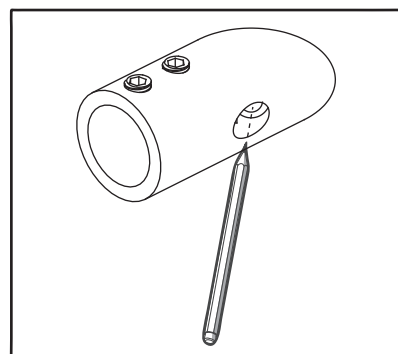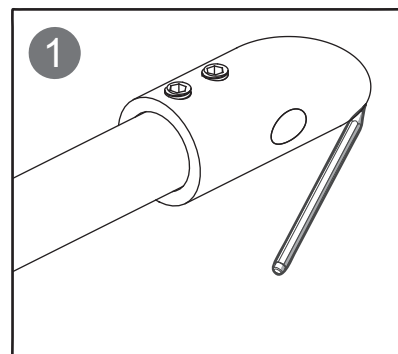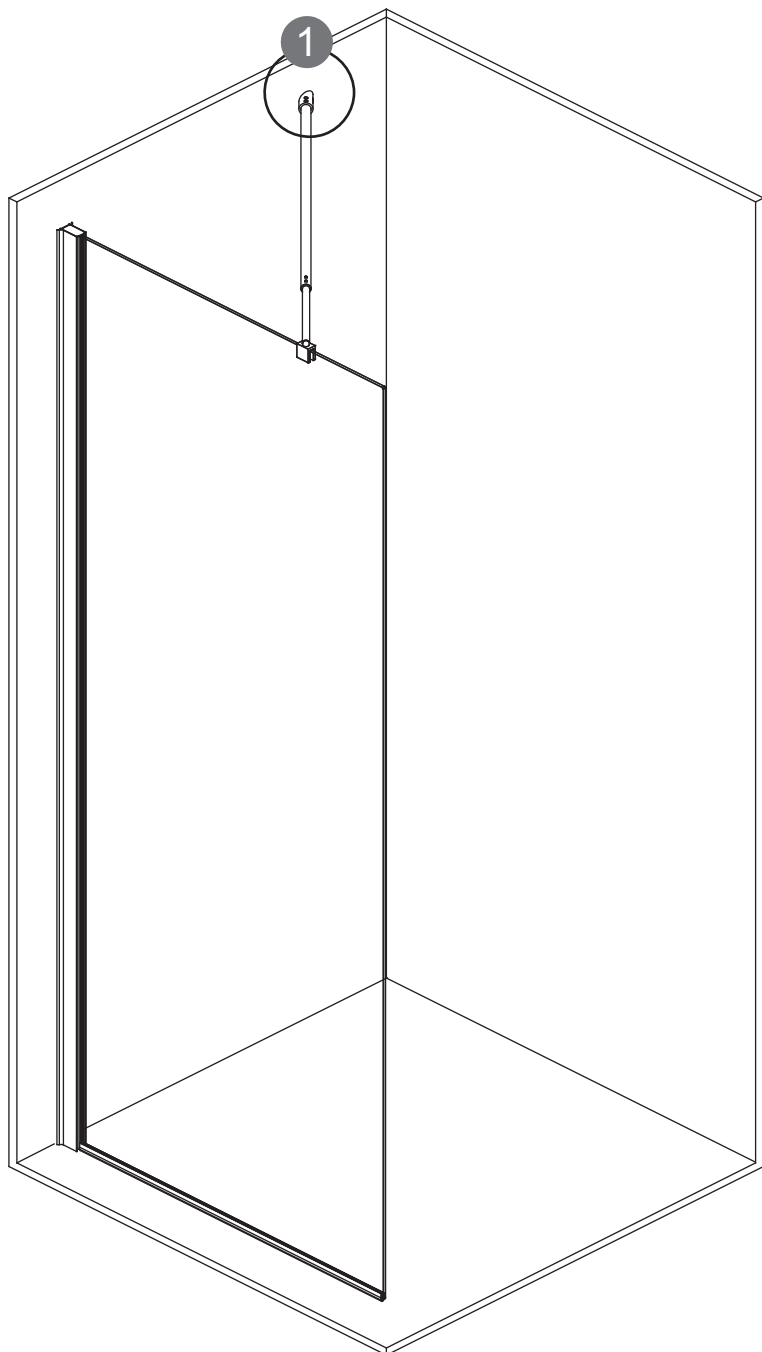


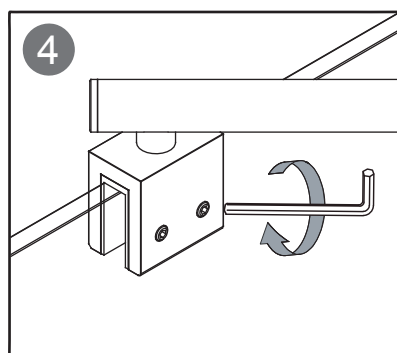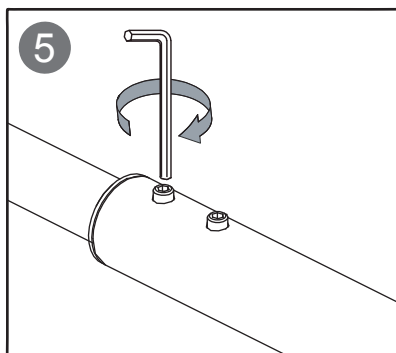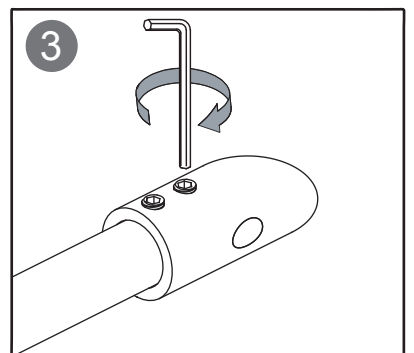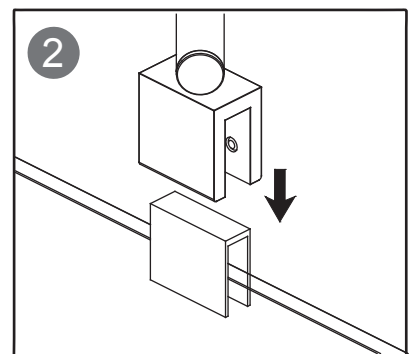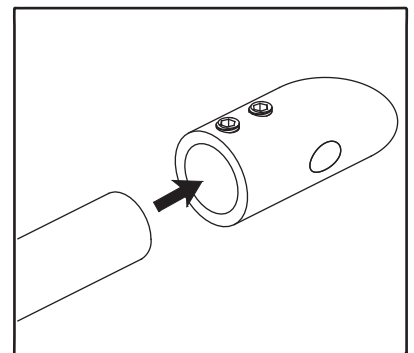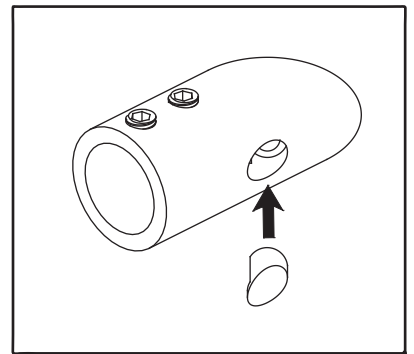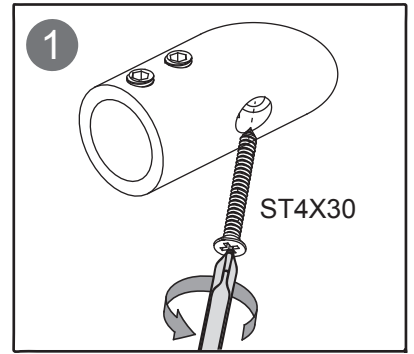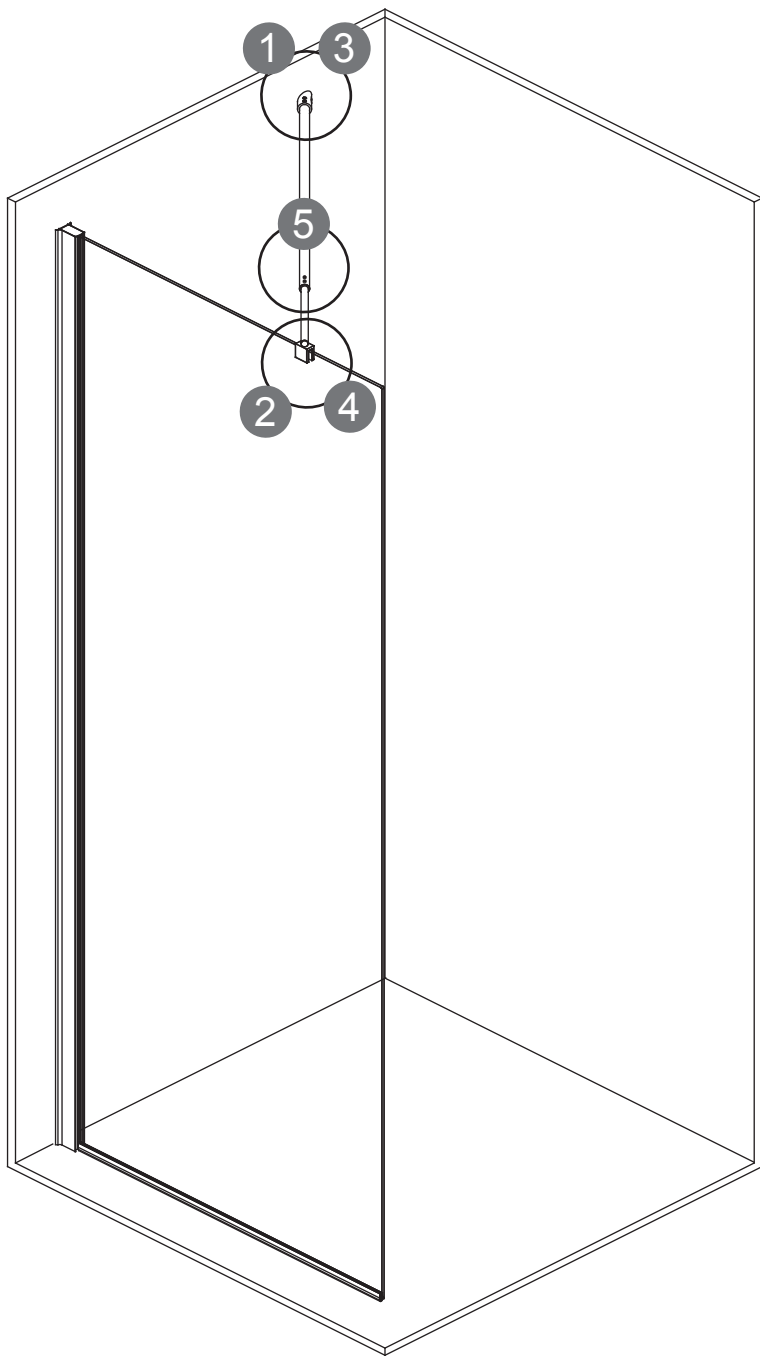

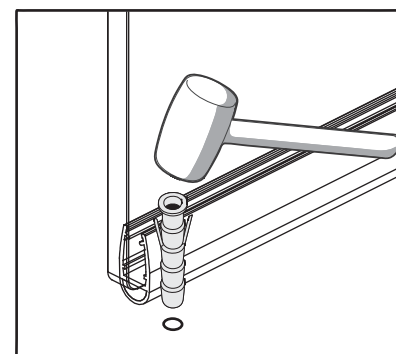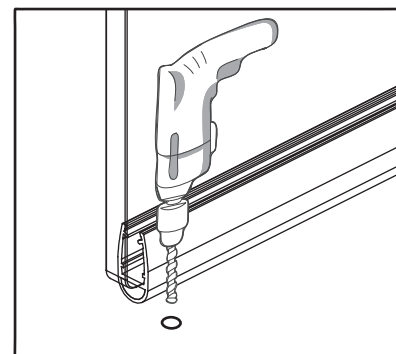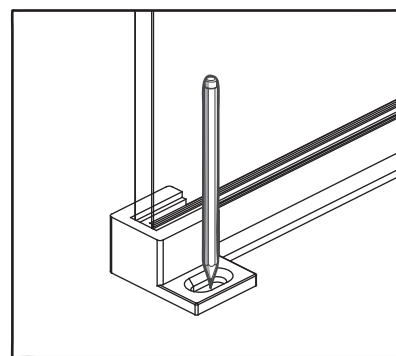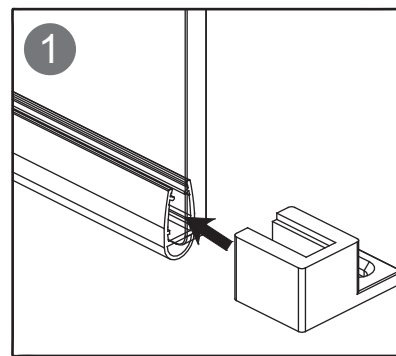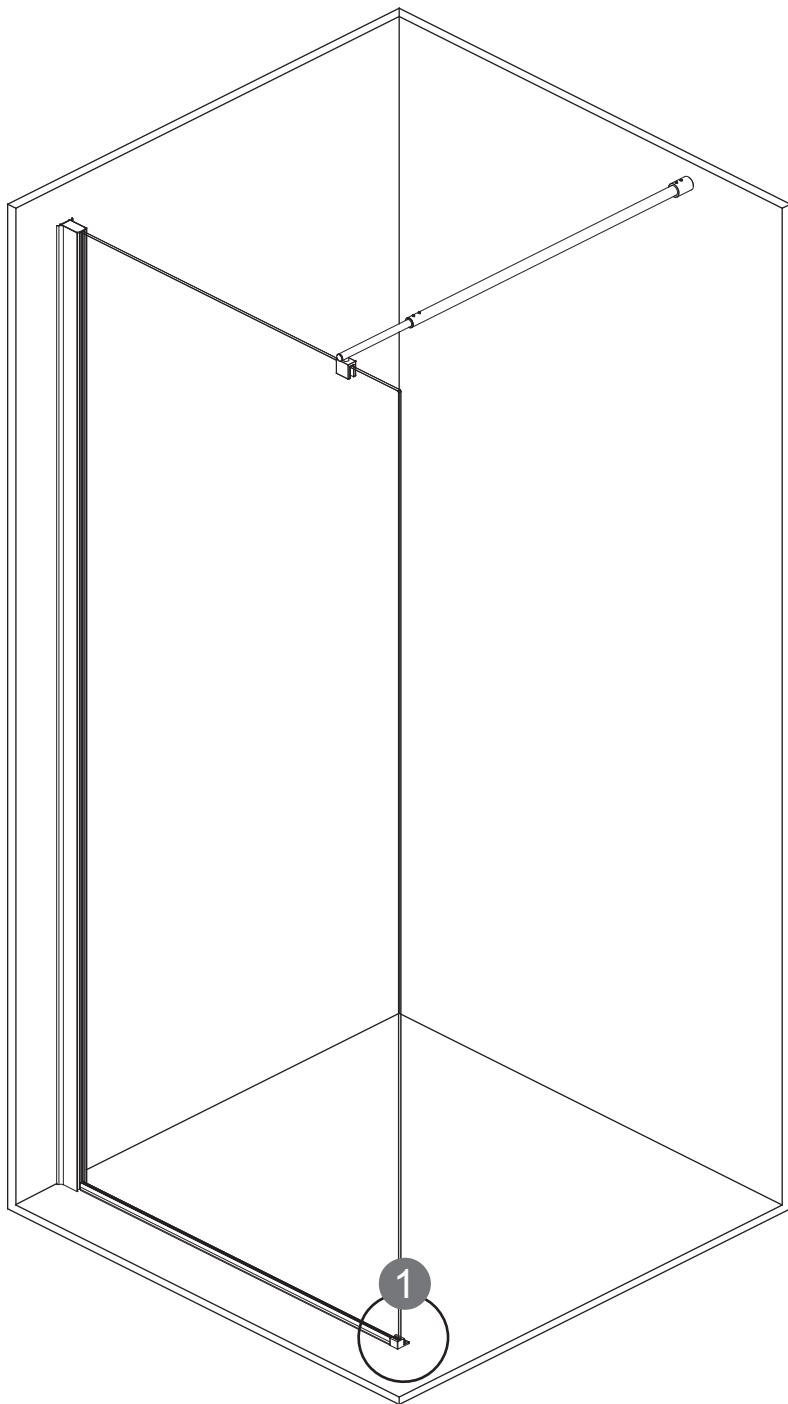

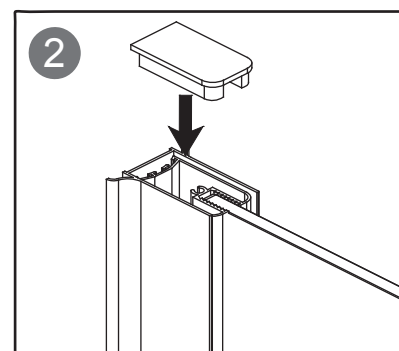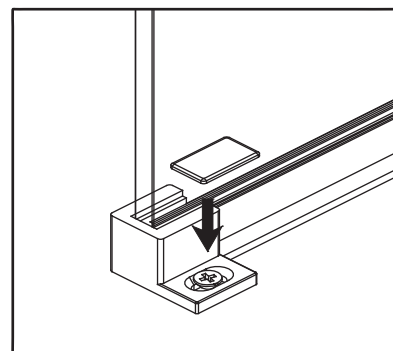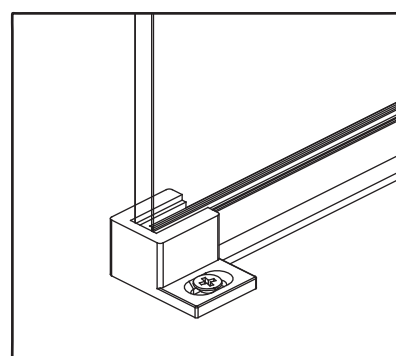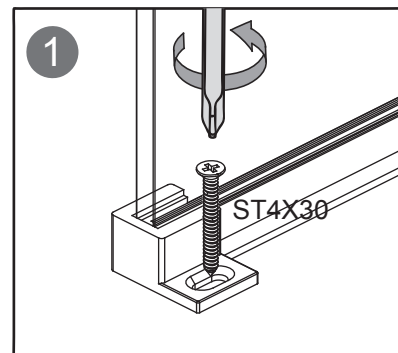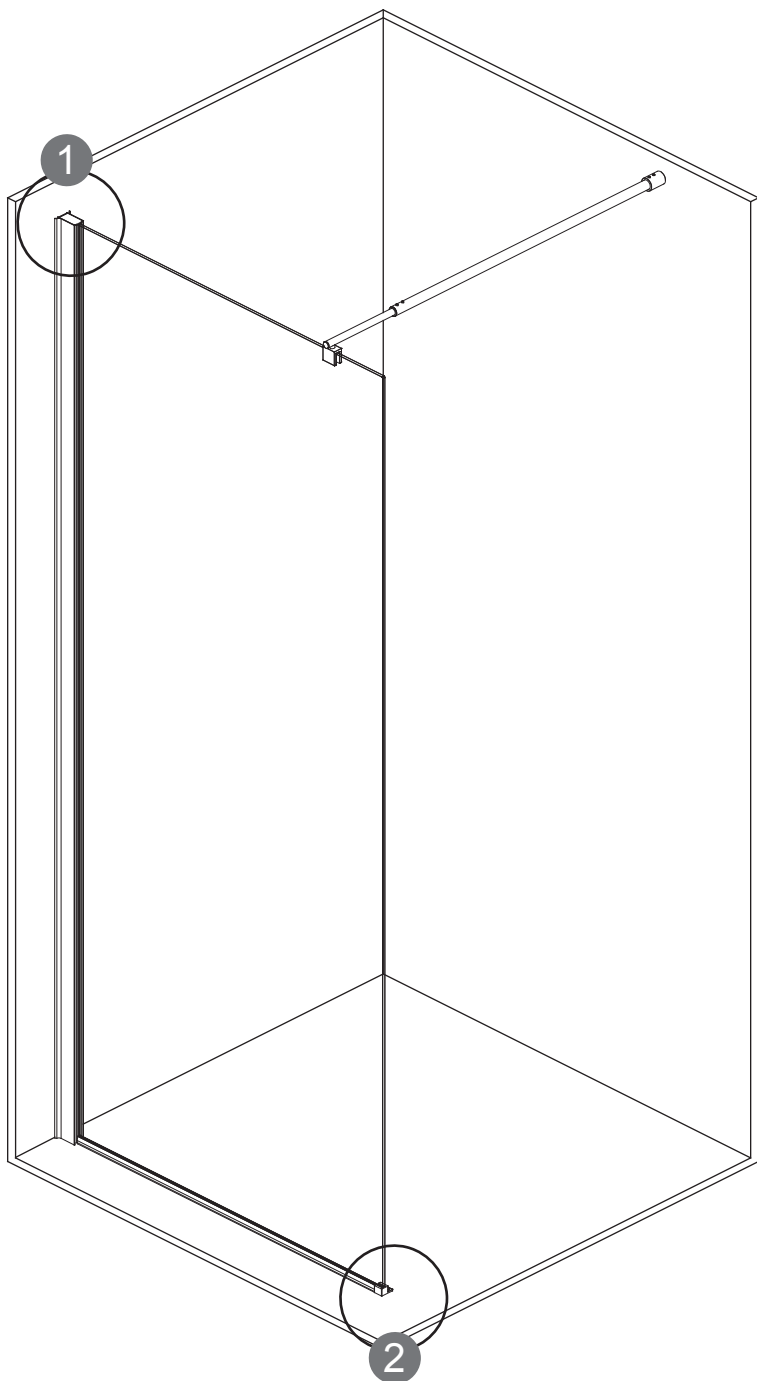




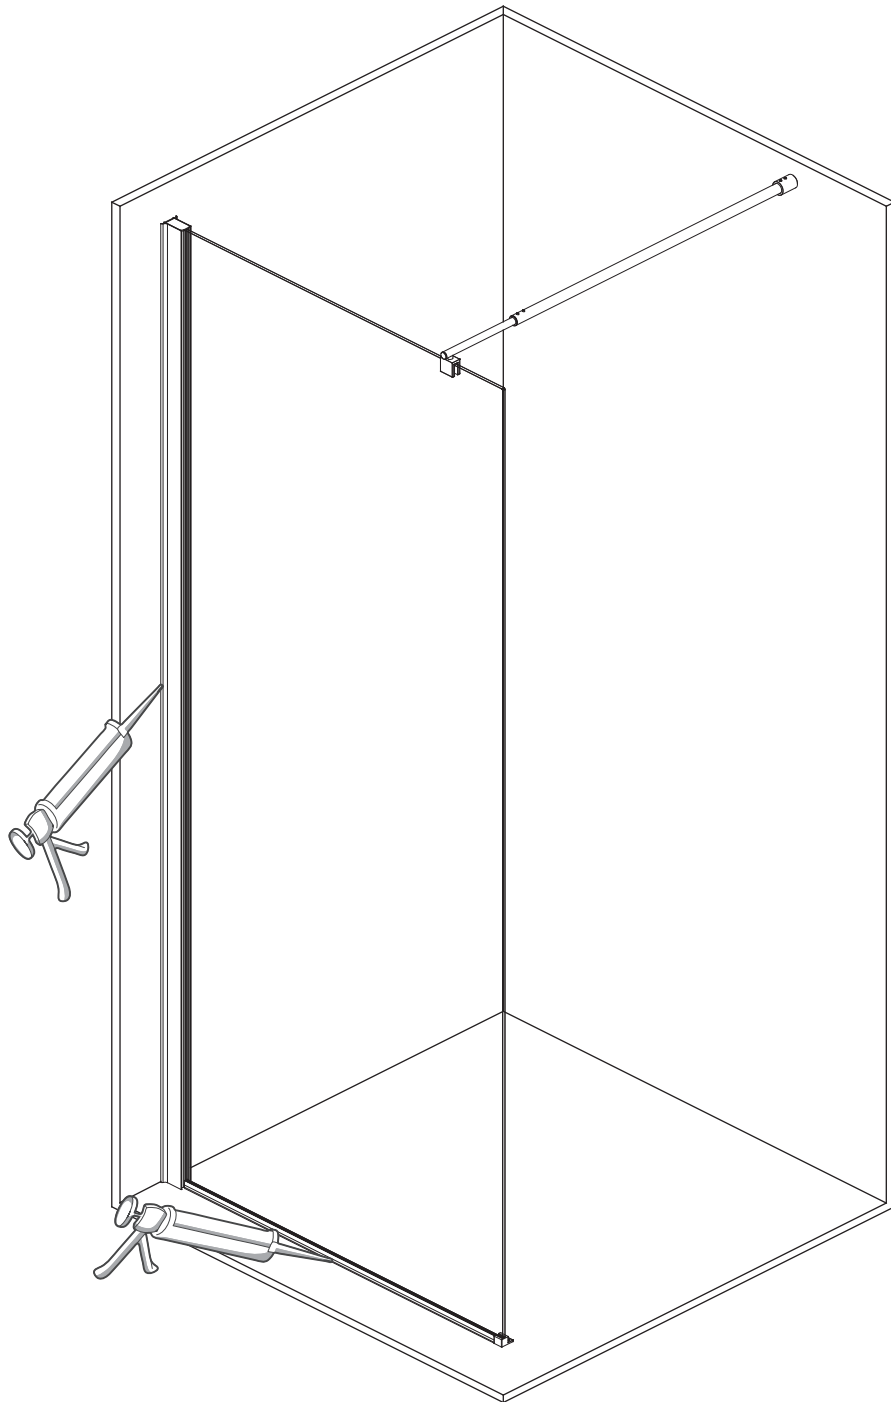



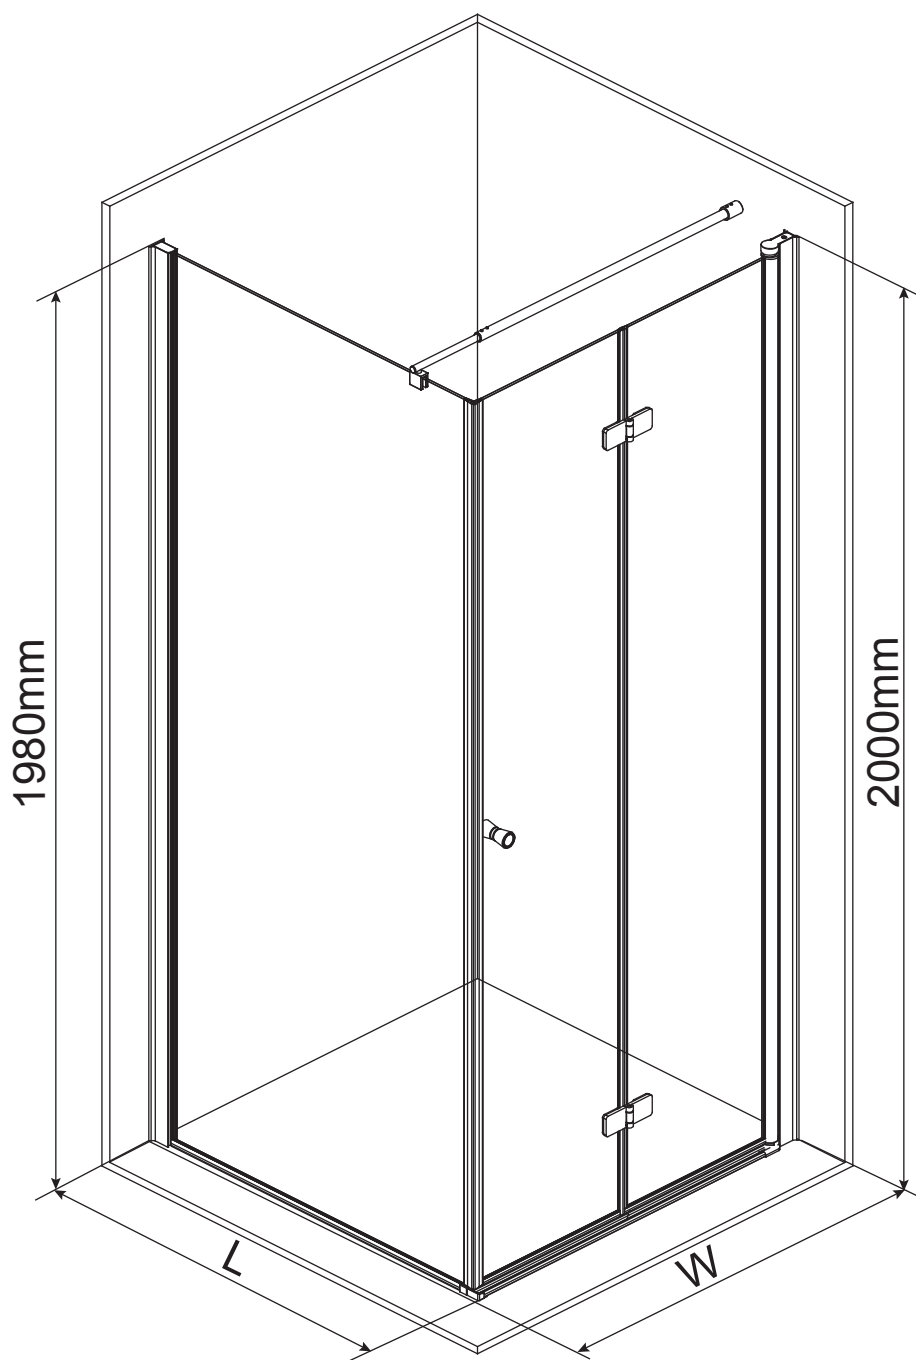









| L: | | W: | |
|------|--------------|------|--------------|
| 800 | 780mm-800mm | 800 | 785mm-800mm |
| 900 | 880mm-900mm | 900 | 885mm-900mm |
| 1000 | 980mm-1000mm | 1000 | 985mm-1000mm |














| L: | | W: | |
|------|--------------|------|--------------|
| 800 | 780mm-800mm | 800 | 785mm-800mm |
| 900 | 880mm-900mm | 900 | 885mm-900mm |
| 1000 | 980mm-1000mm | 1000 | 985mm-1000mm |

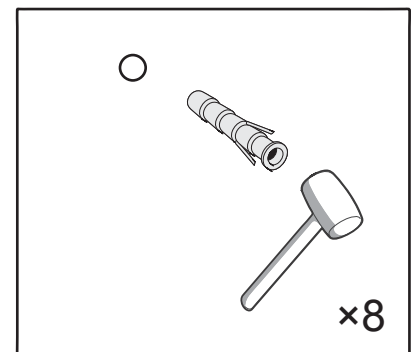
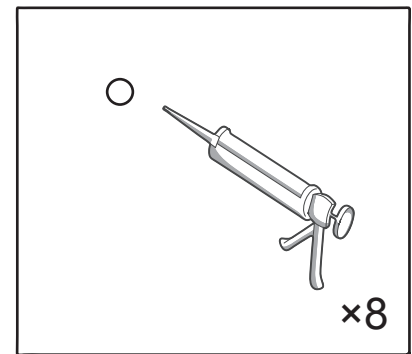
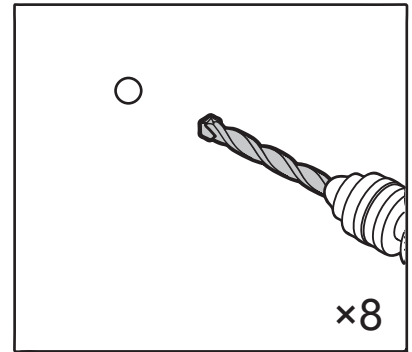
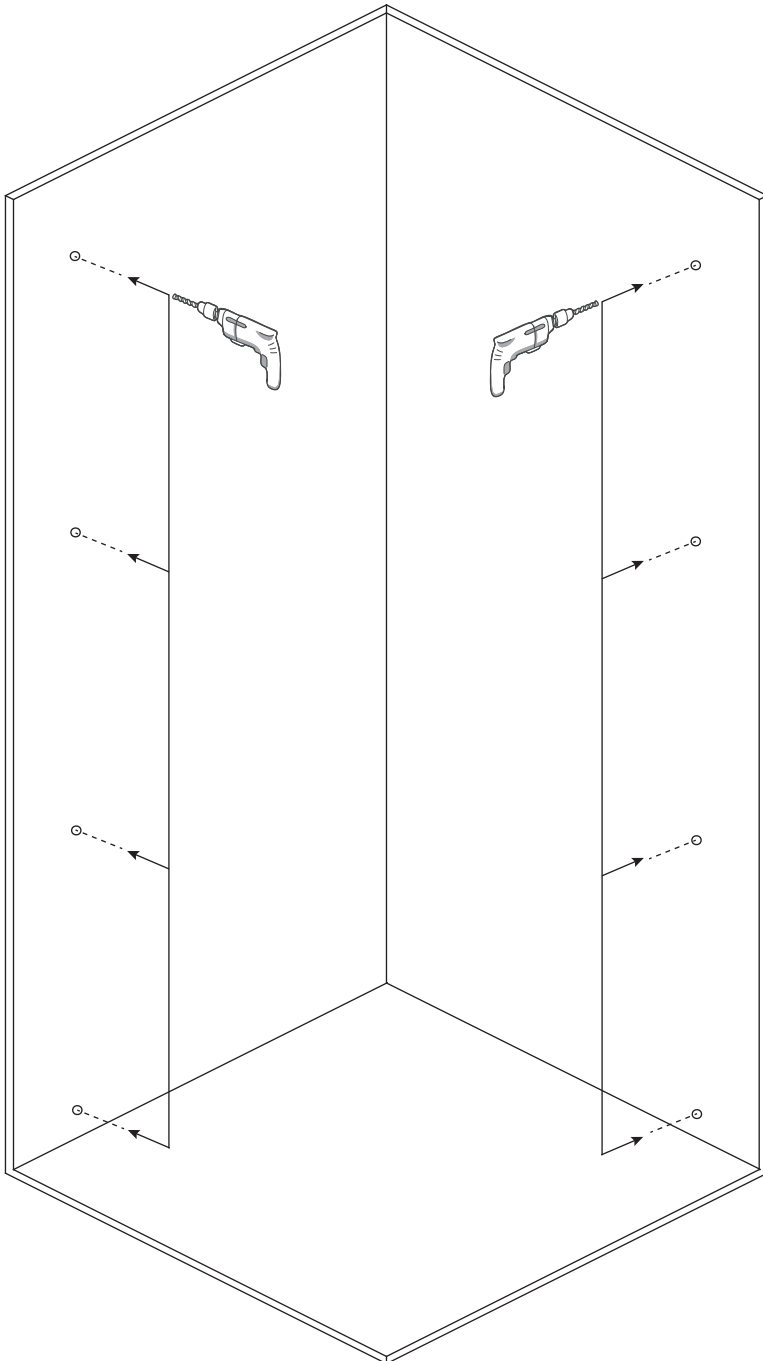





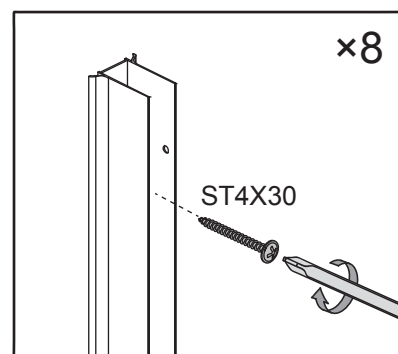
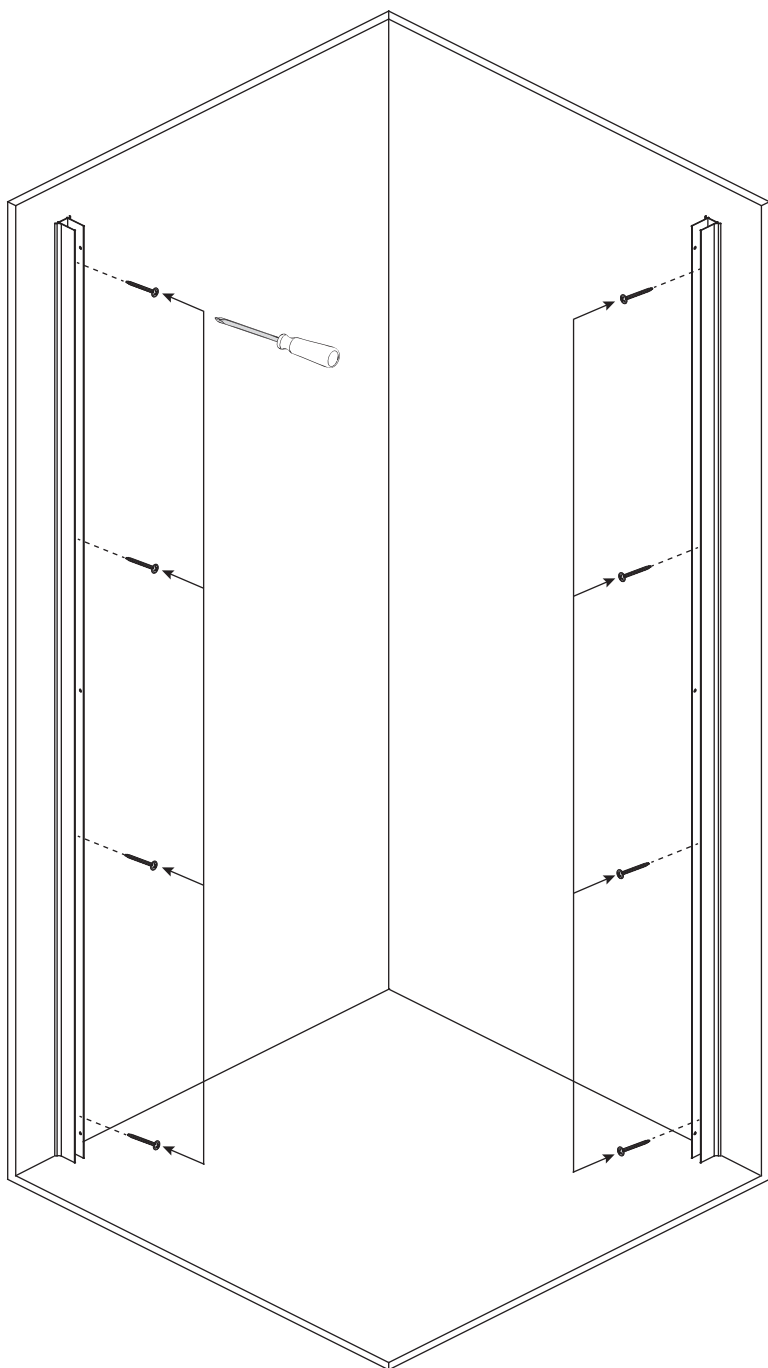


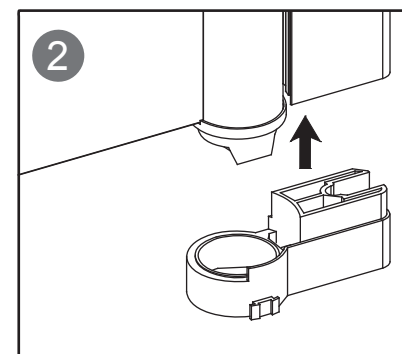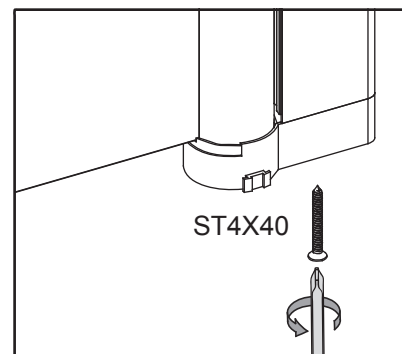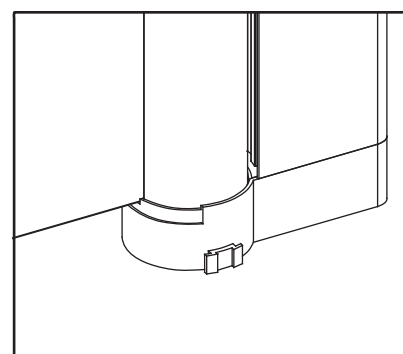
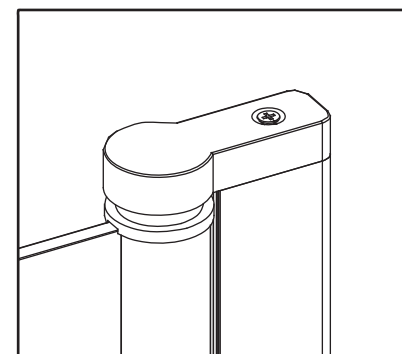
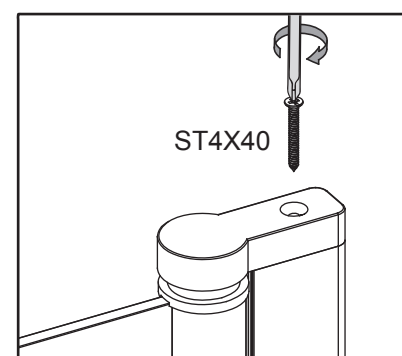
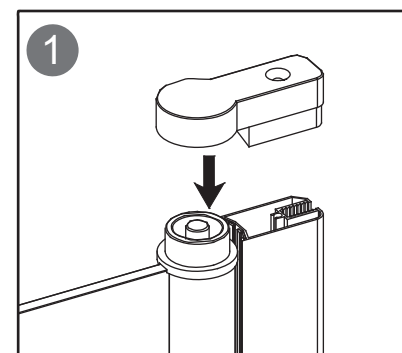
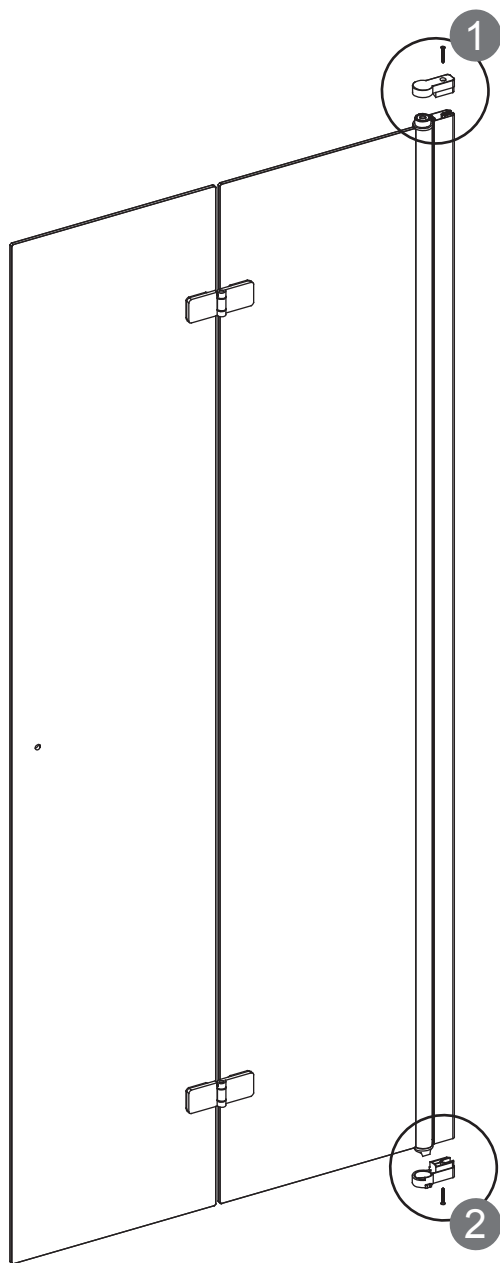


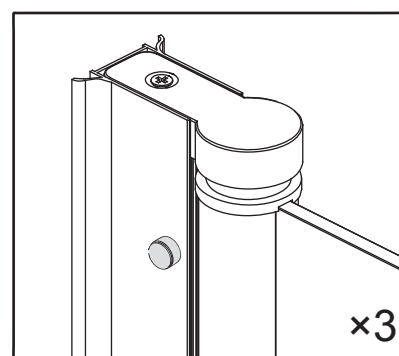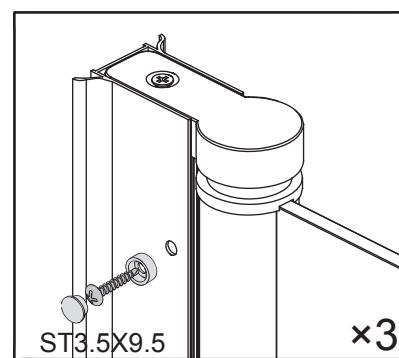
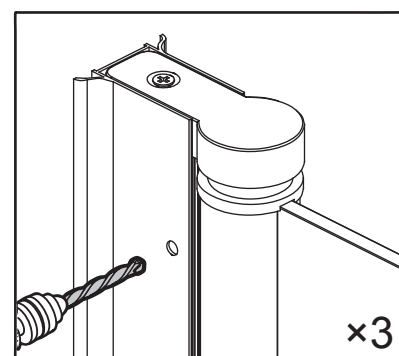
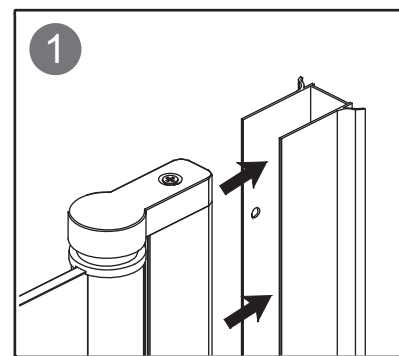
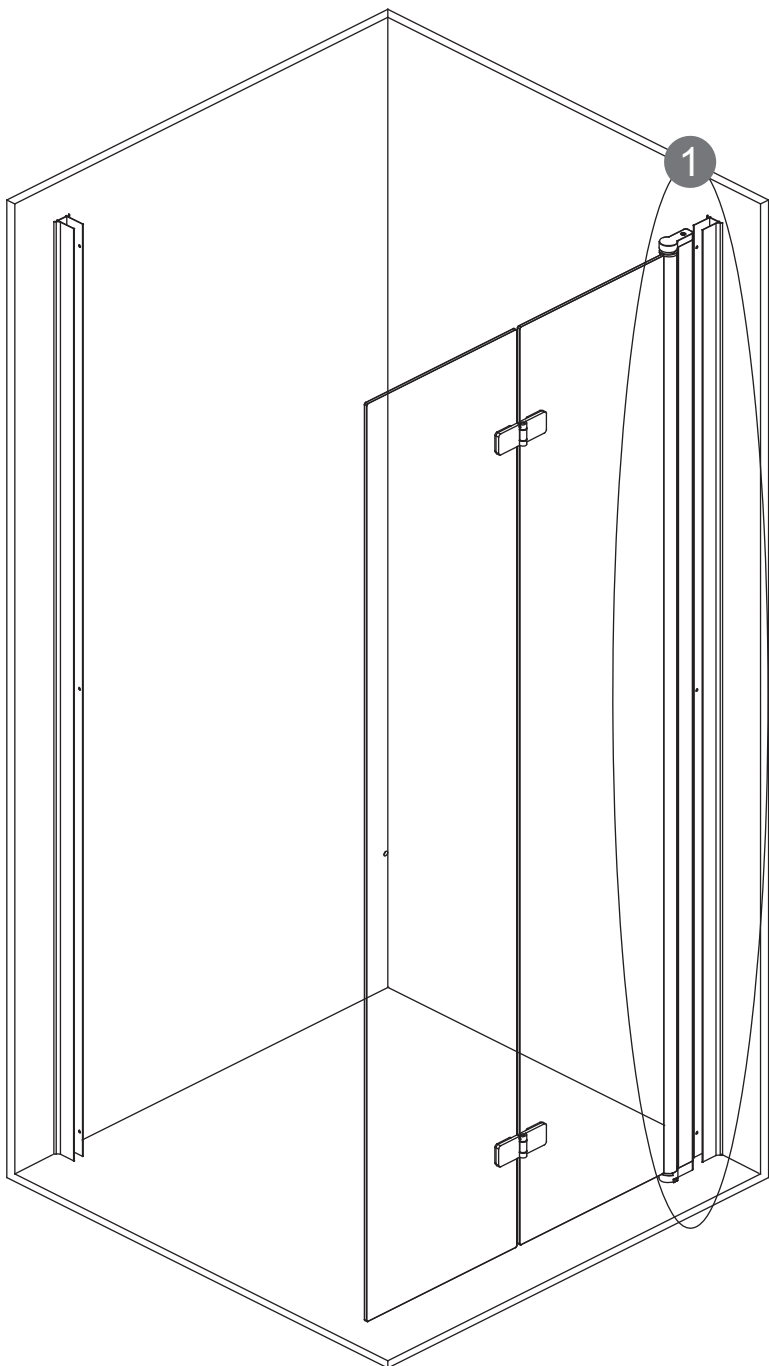


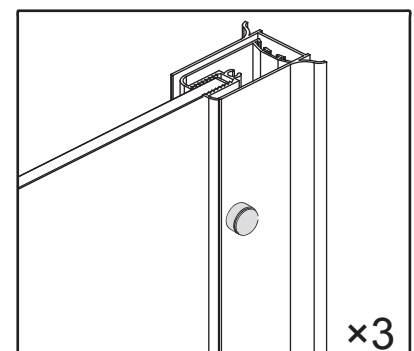
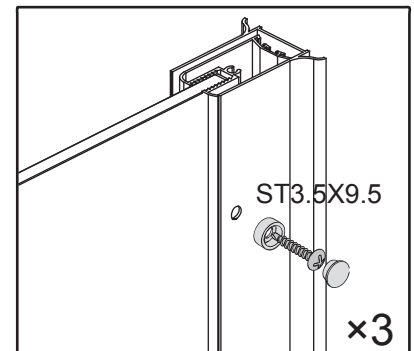
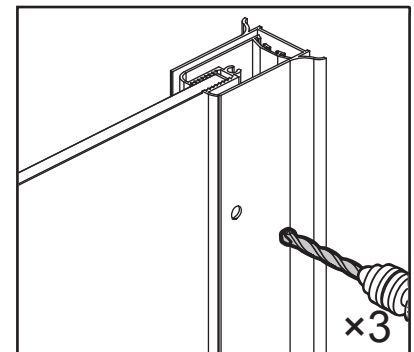
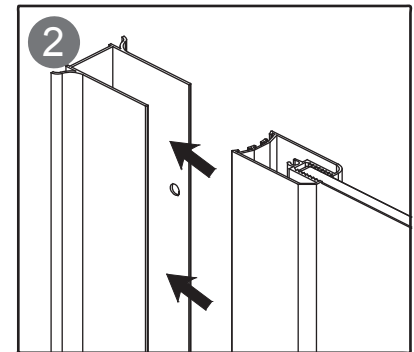
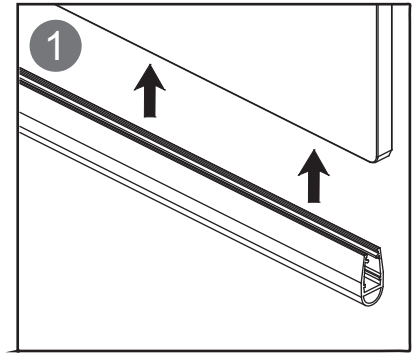
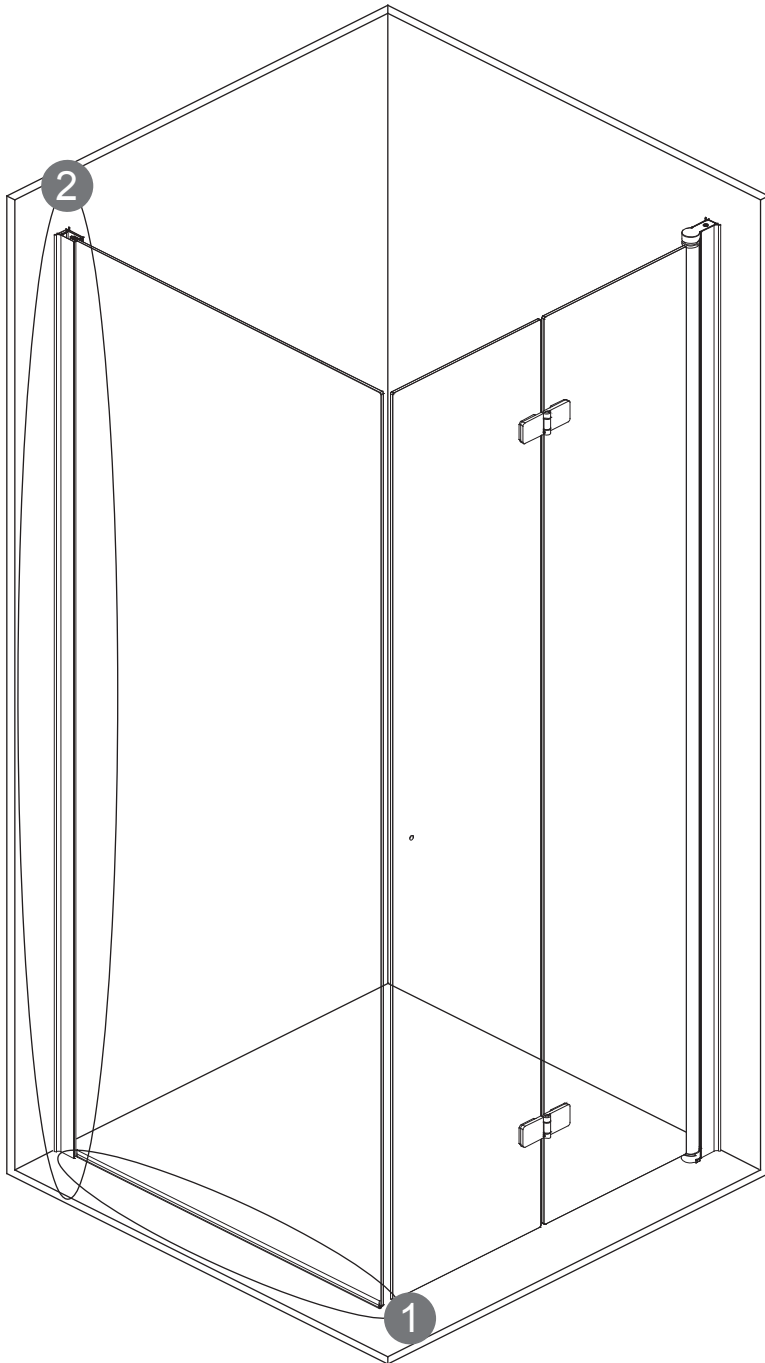





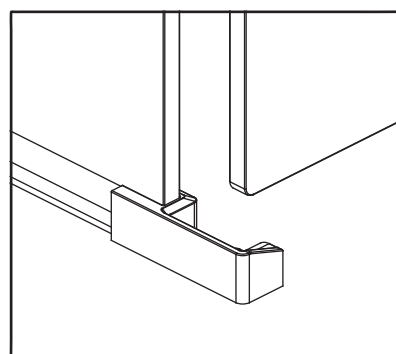
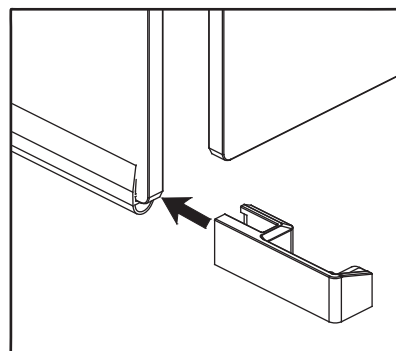
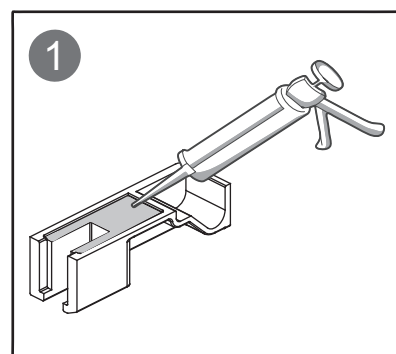
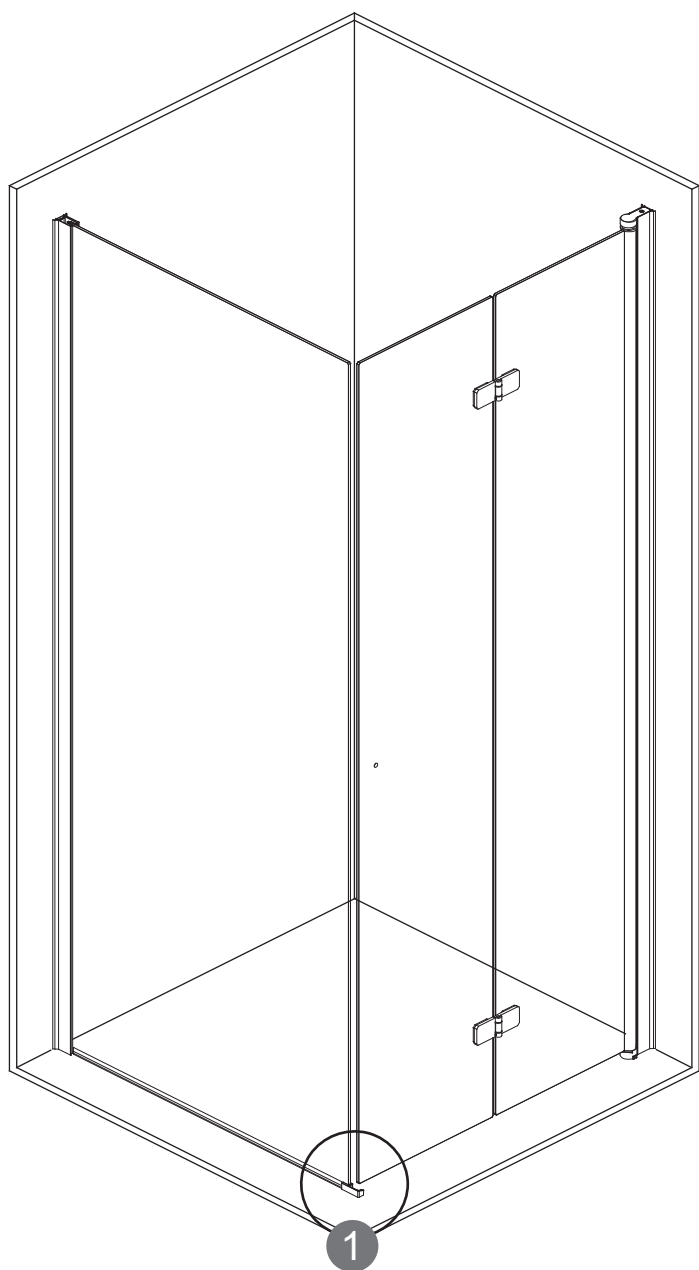


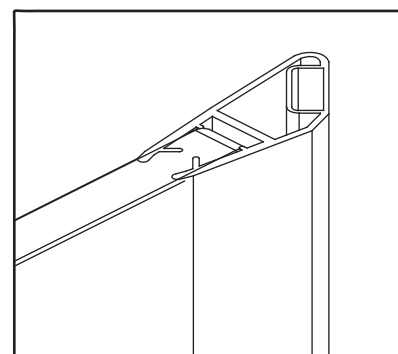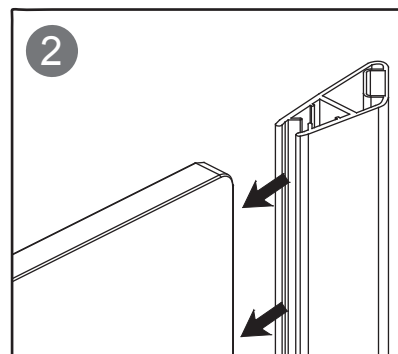
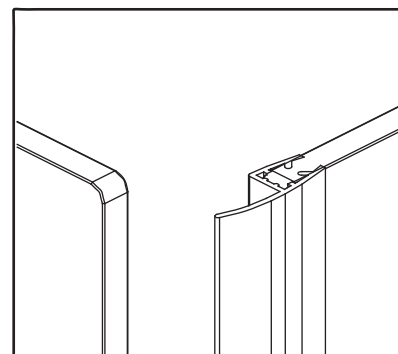
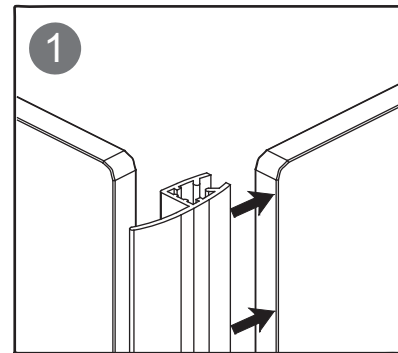
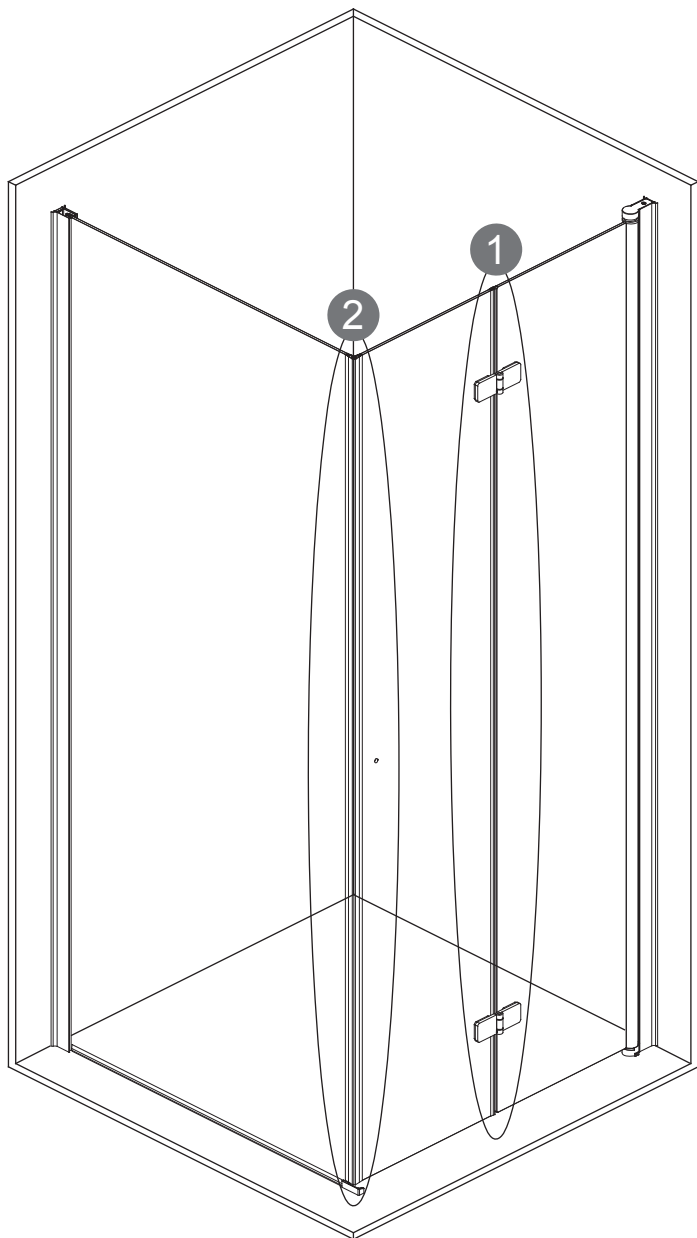


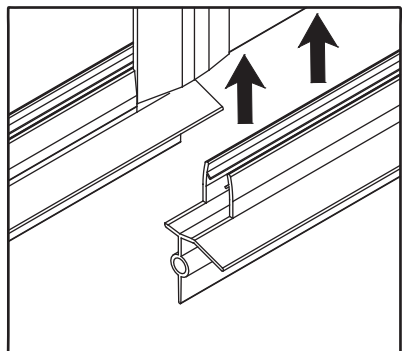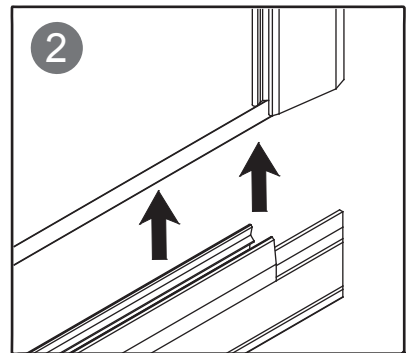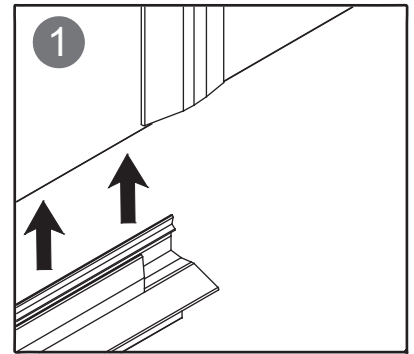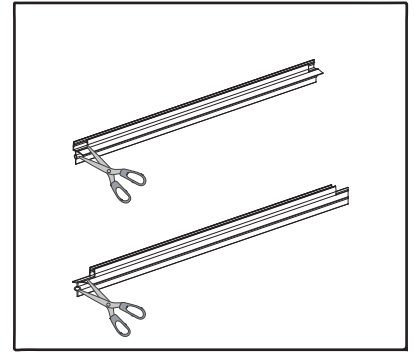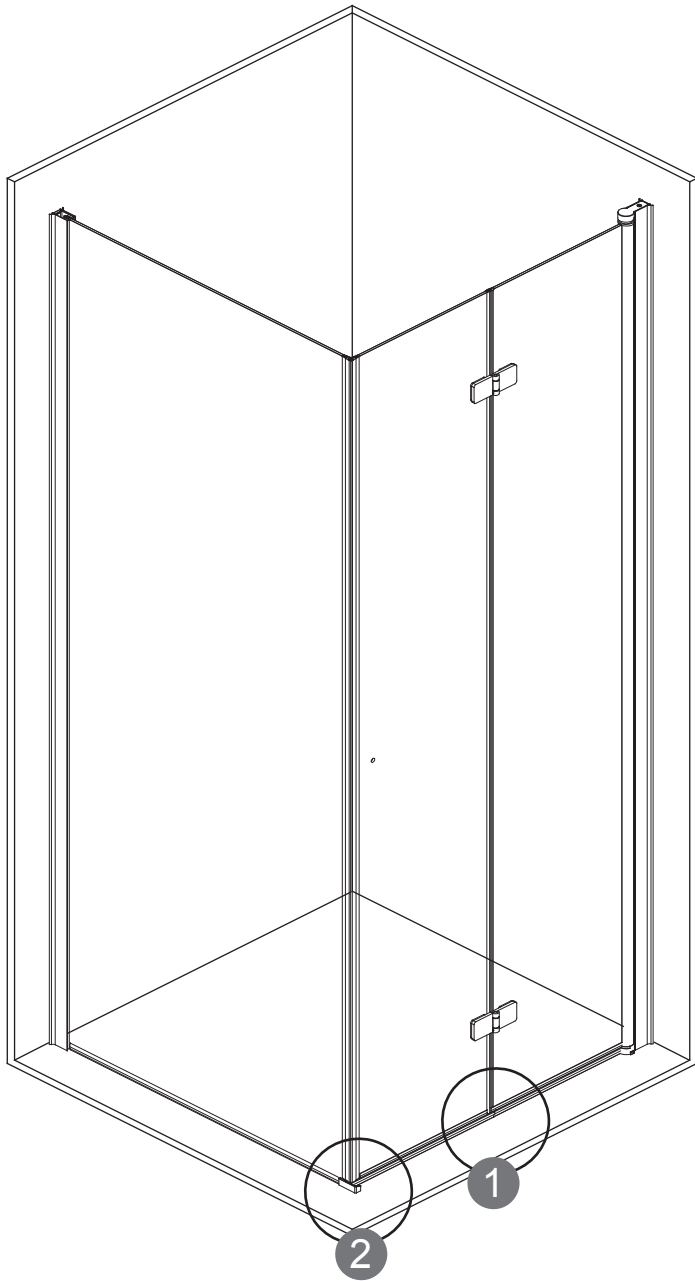


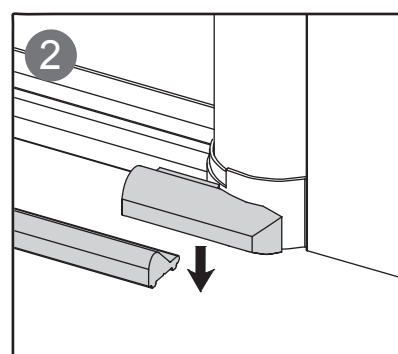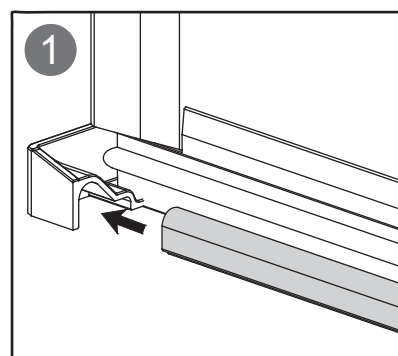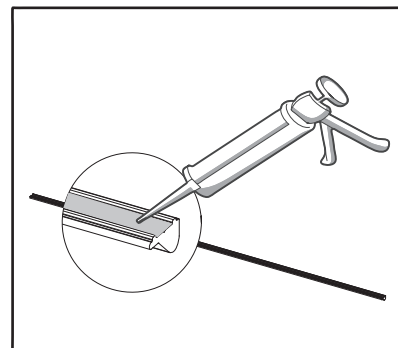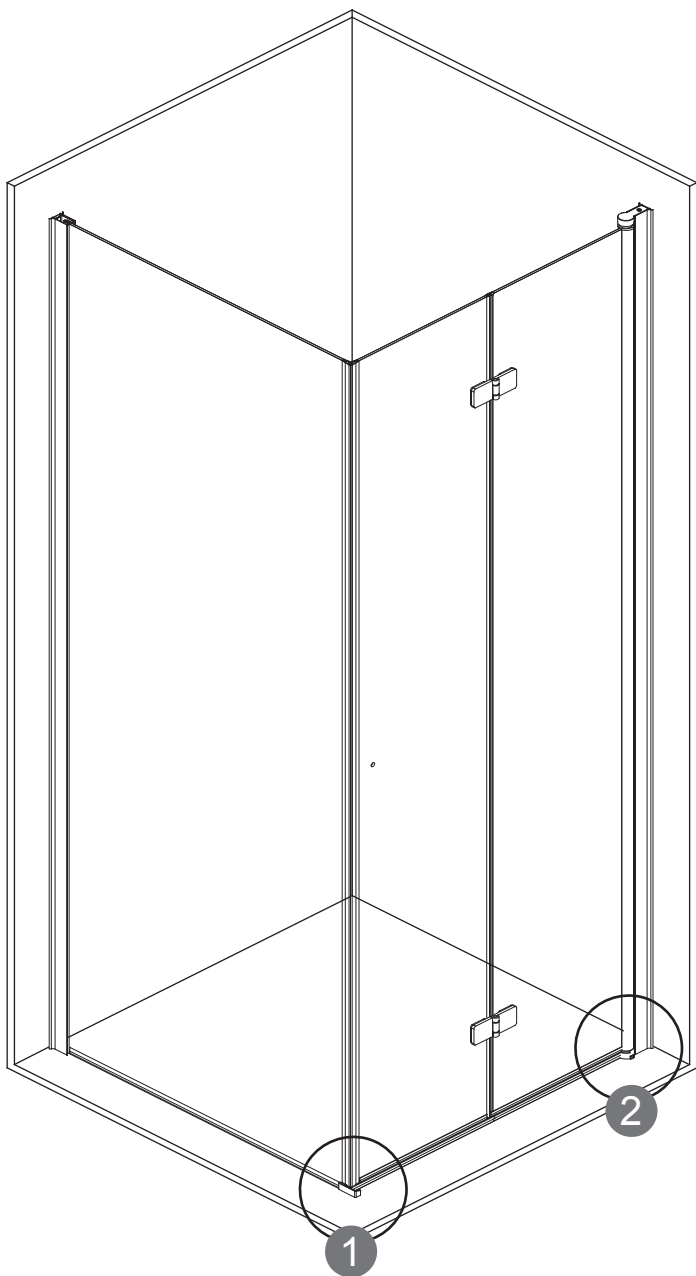


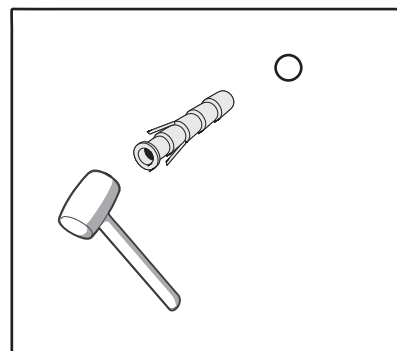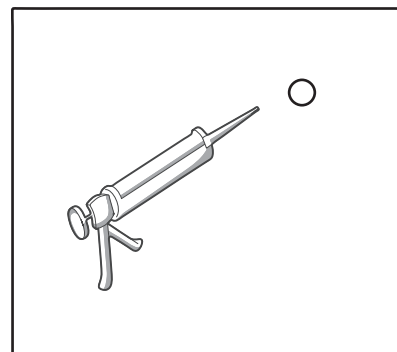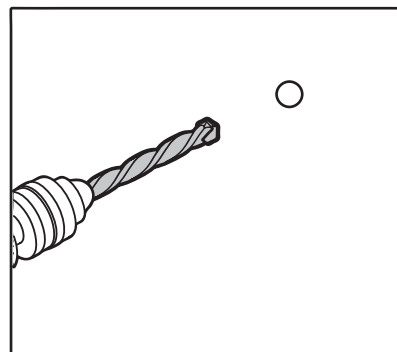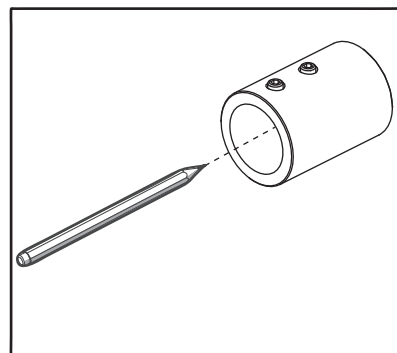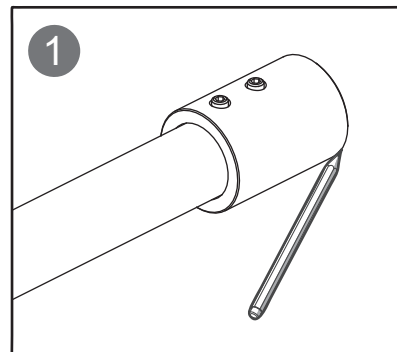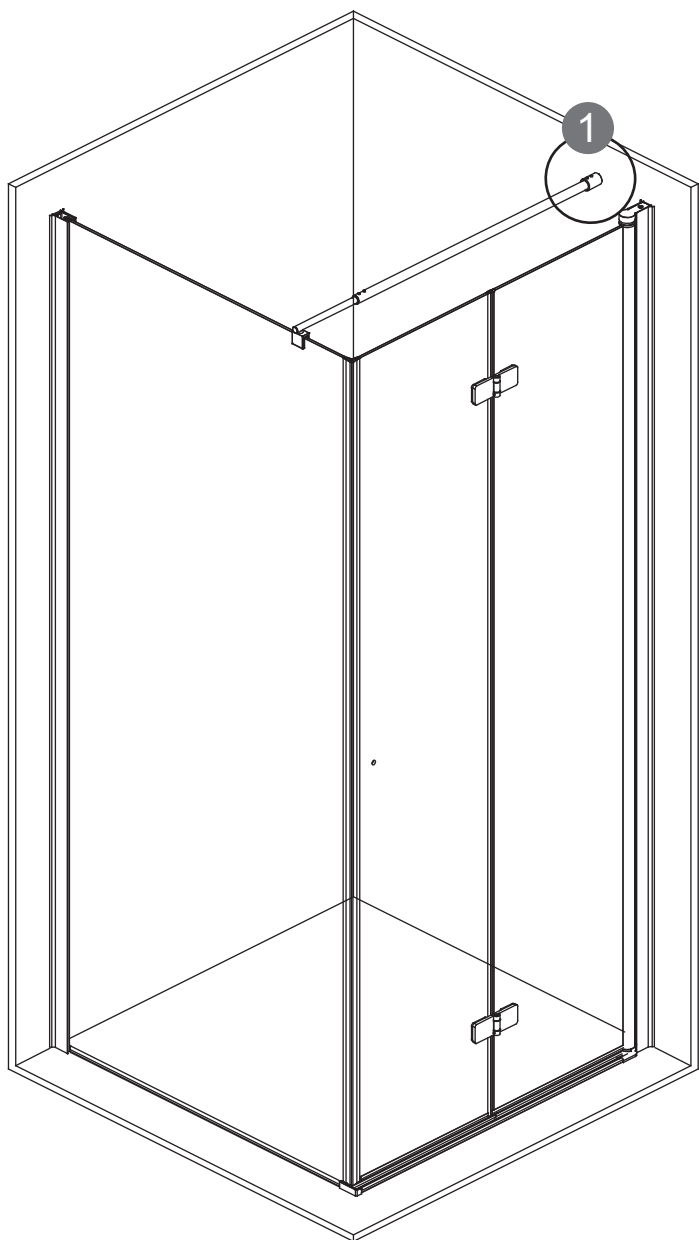

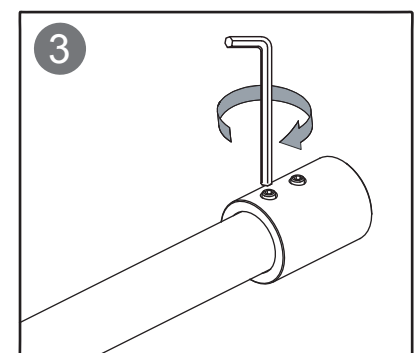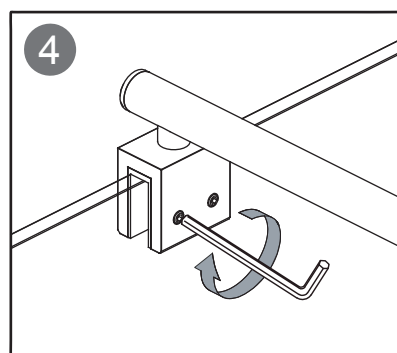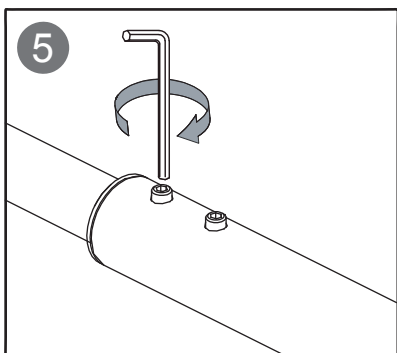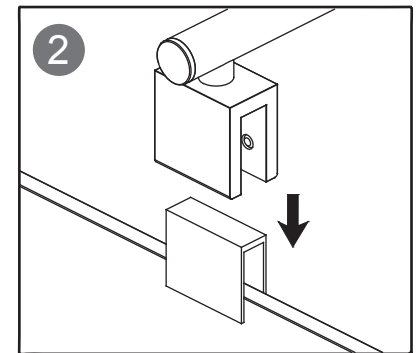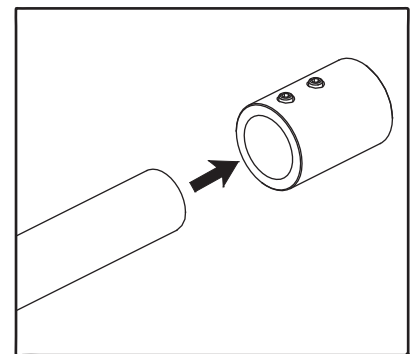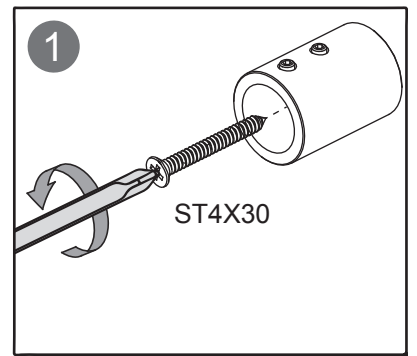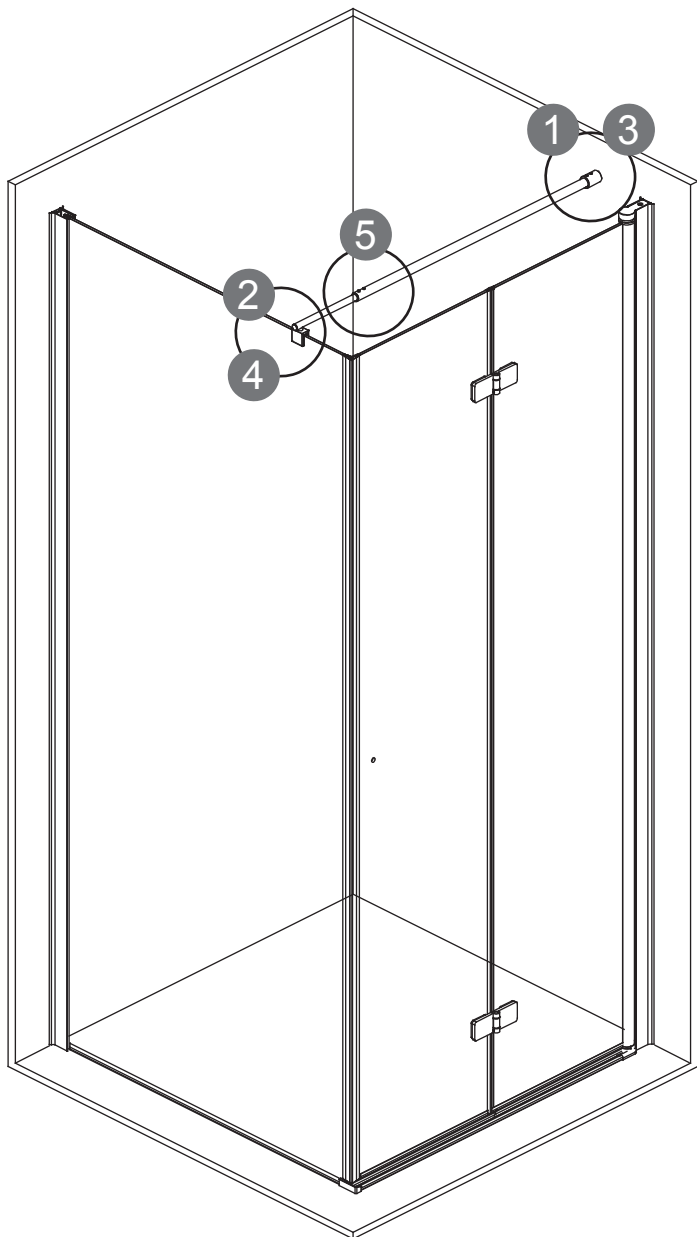

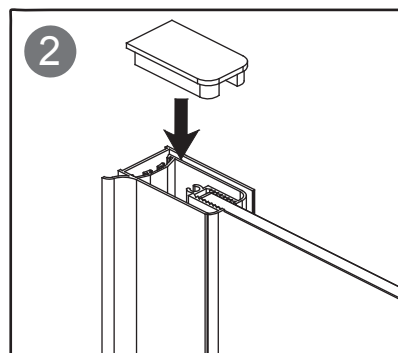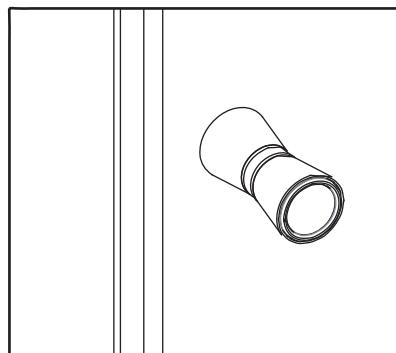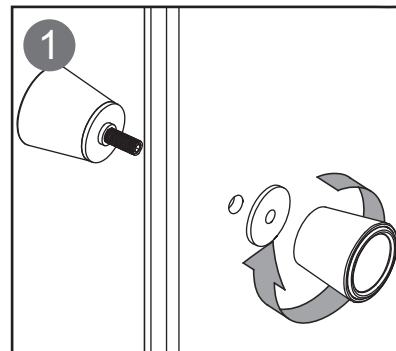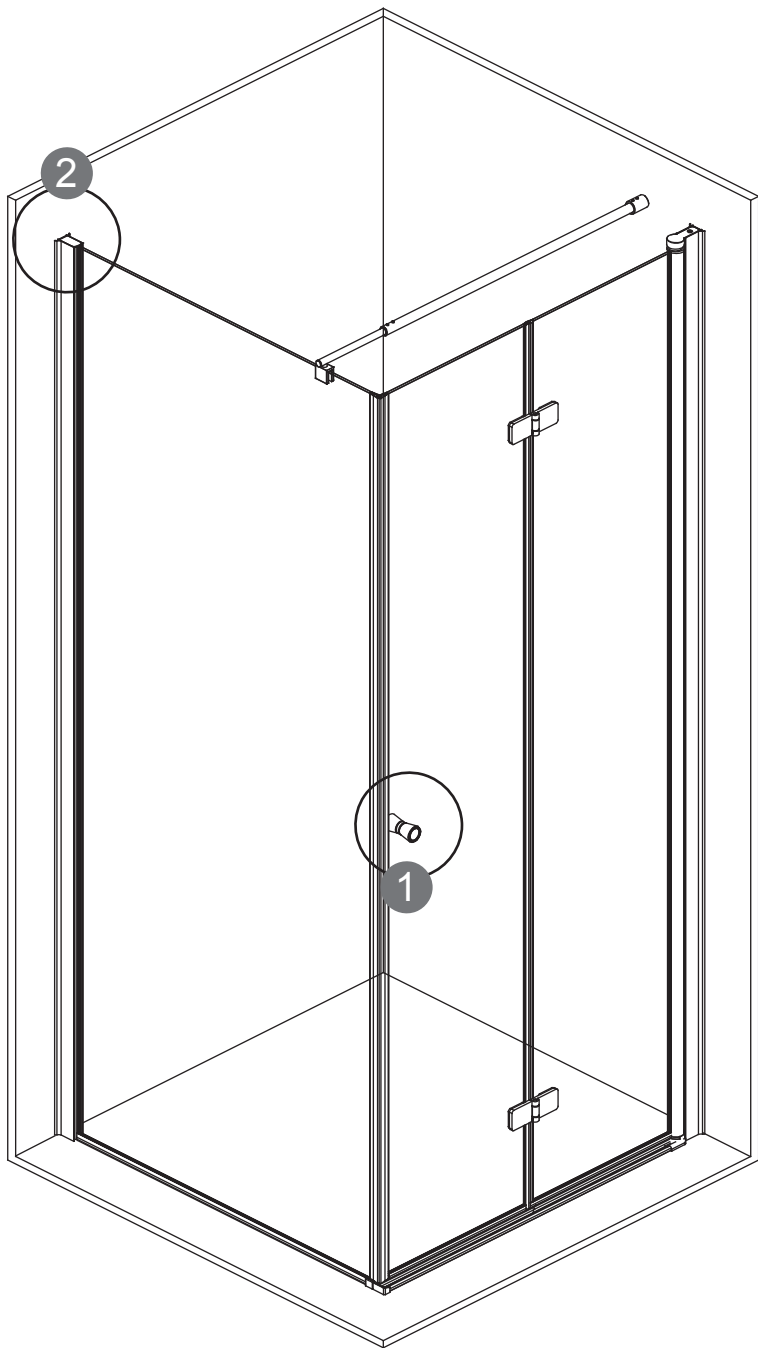

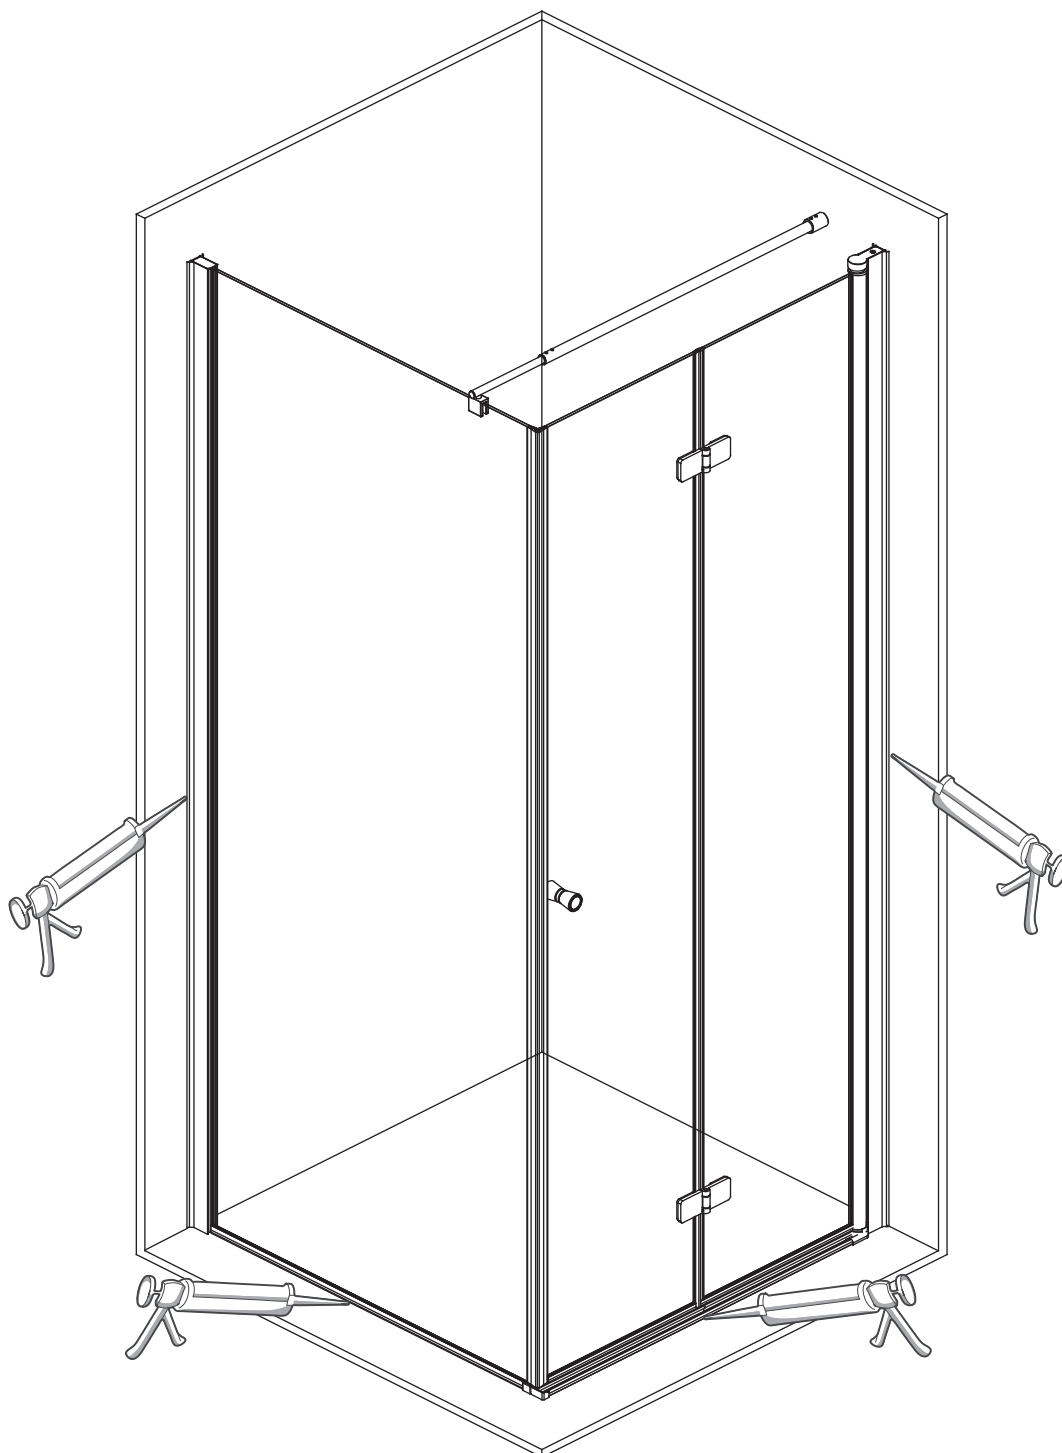

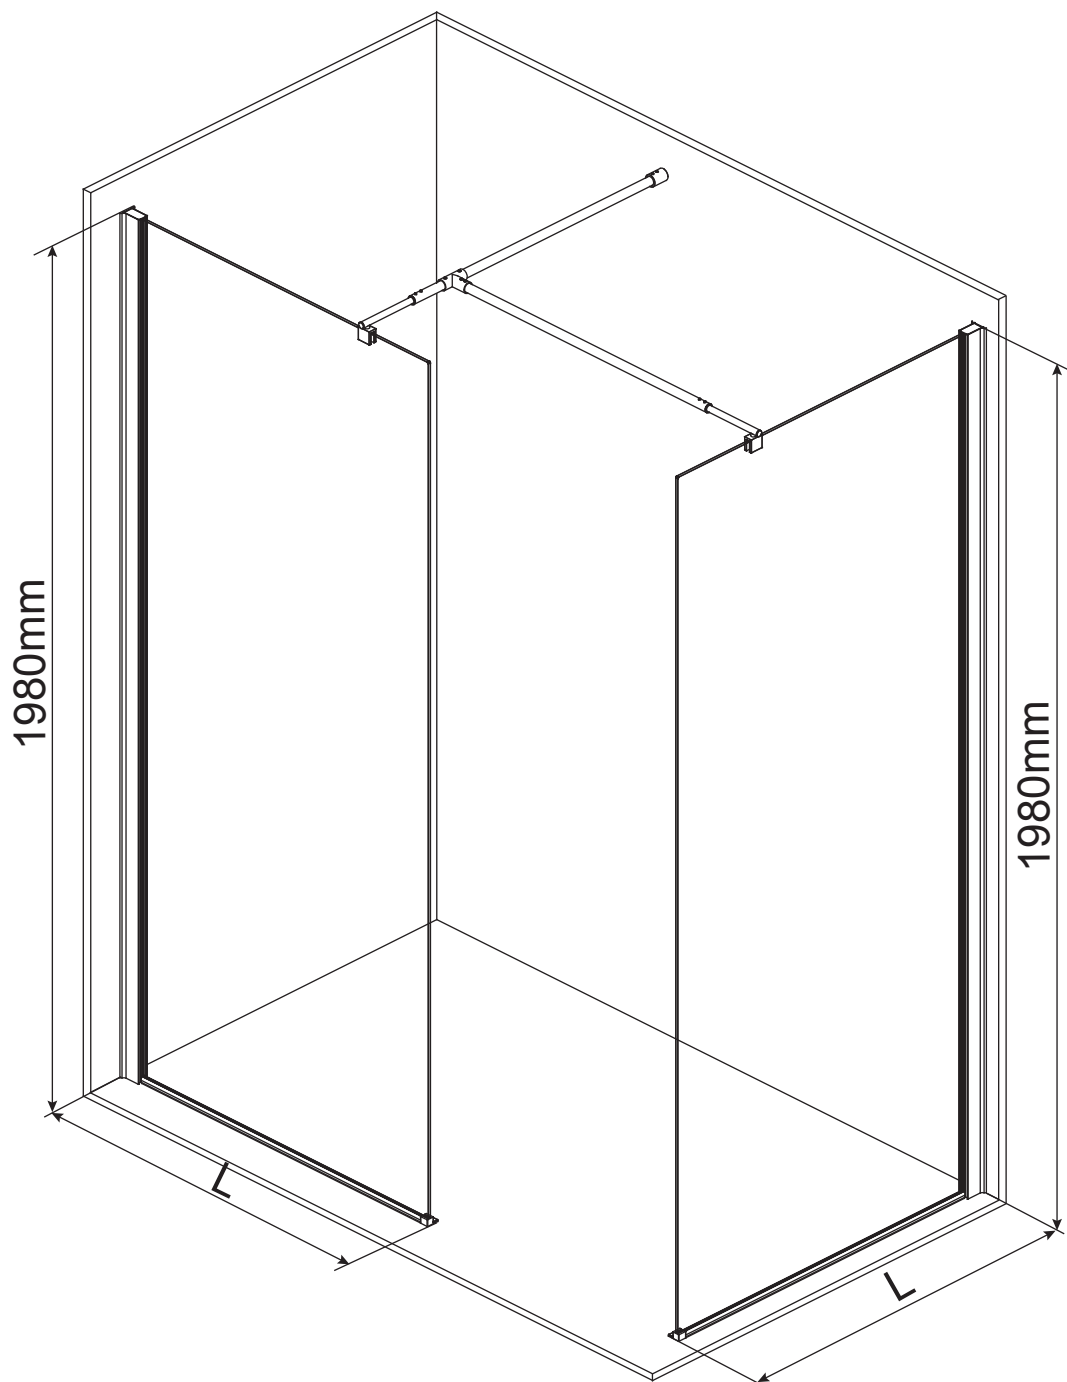

L:

800 750mm-770mm

900 850mm-870mm

1000 950mm-970mm

